

Ⓓ Aufbauanleitung

Ⓕ Notice de montage

Ⓖ Montagehandleiding

Ⓒ Montážní návod

Ⓗ Szerelési útmutató

Ⓓ Montaj talimatları

Ⓖ Assembly instruction

Ⓙ Istruzioni di montaggio


Ⓟ Instrukcja montażu

Ⓢ Navod na montaž

Ⓡ Instrucțiuni de montaj

Ⓡ Инструкция по монтажу

# 36-1037-82-000



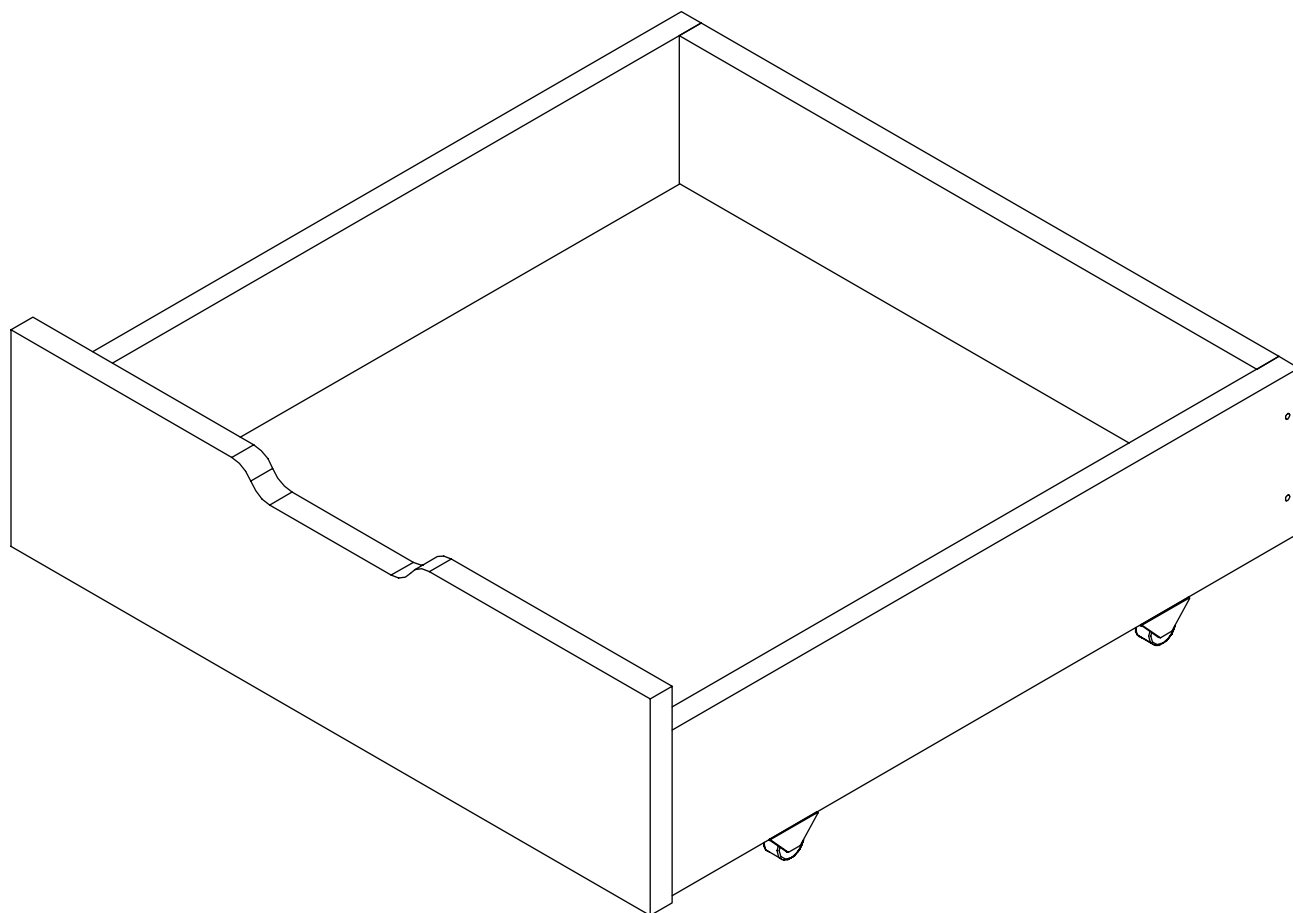


# Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба


Name • Nom • Nome • Naam • Nazwa • Jméno • Názov  
Név • Denumire • Isim • Название

Nr. Nr. • No. • N° • Č • Sz • Номер

Typ • Тип • Type • Tipe • Tipus • Druh • Тиро • Тип

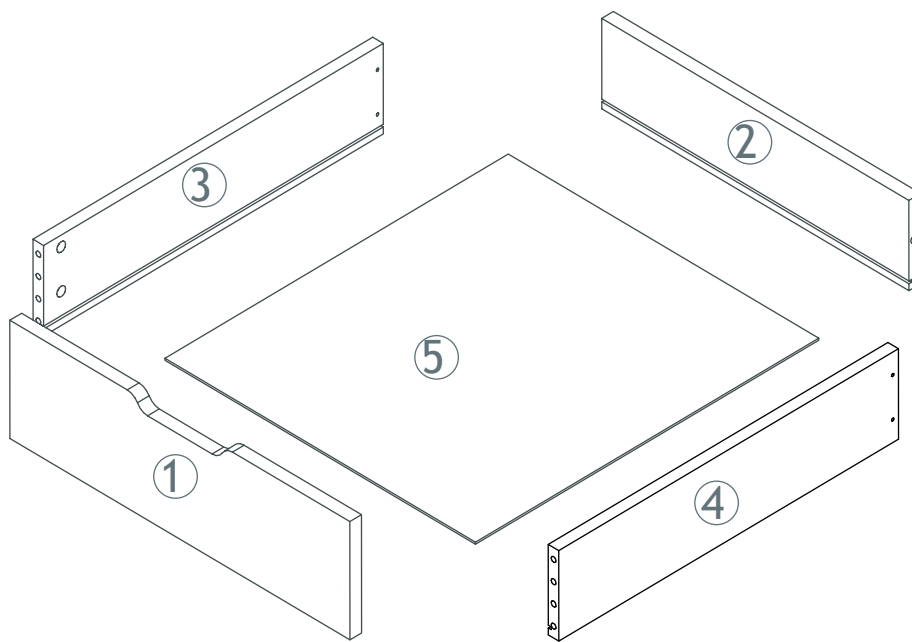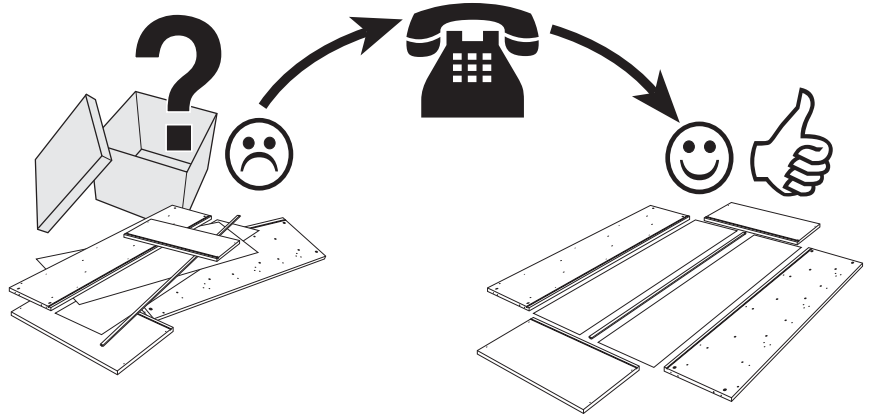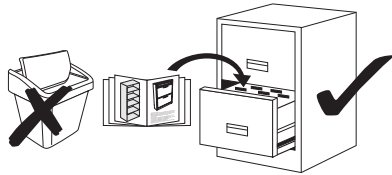


①	168180-82	x1
②	168280-32	x1
③	149381-32	x1
④	149382-32	x1
⑤	168580-32	x1

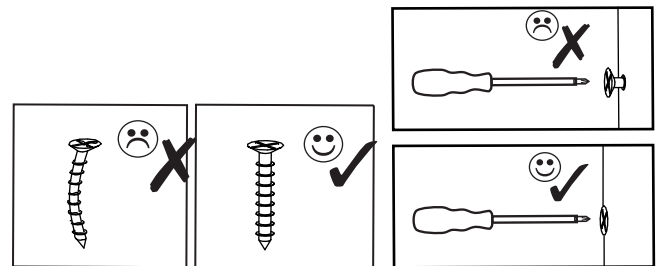


## Fitting specification

 A.i. Nr.	Article Nr.	Dimentions	pcs
a	1-000013-00	8x40	x6
b	1-000117-07	D=25	x4
c	1-000091-07	3x16	x8
d	1-000046-07	L=34+11	x4
e	1-000119-07	15x12	x4
f	1-000057-07	3.5x40	x4




① (Ø8x40)x6

 

② (Ø28)x4



 ③ (3x16)x8



④ (Ø6,1x24/11)x4




⑤ (Ø15x12)x4




⑥ (4x40)x4


1-000001=

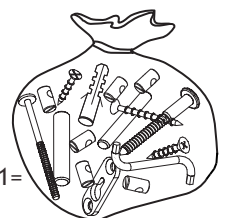


1.

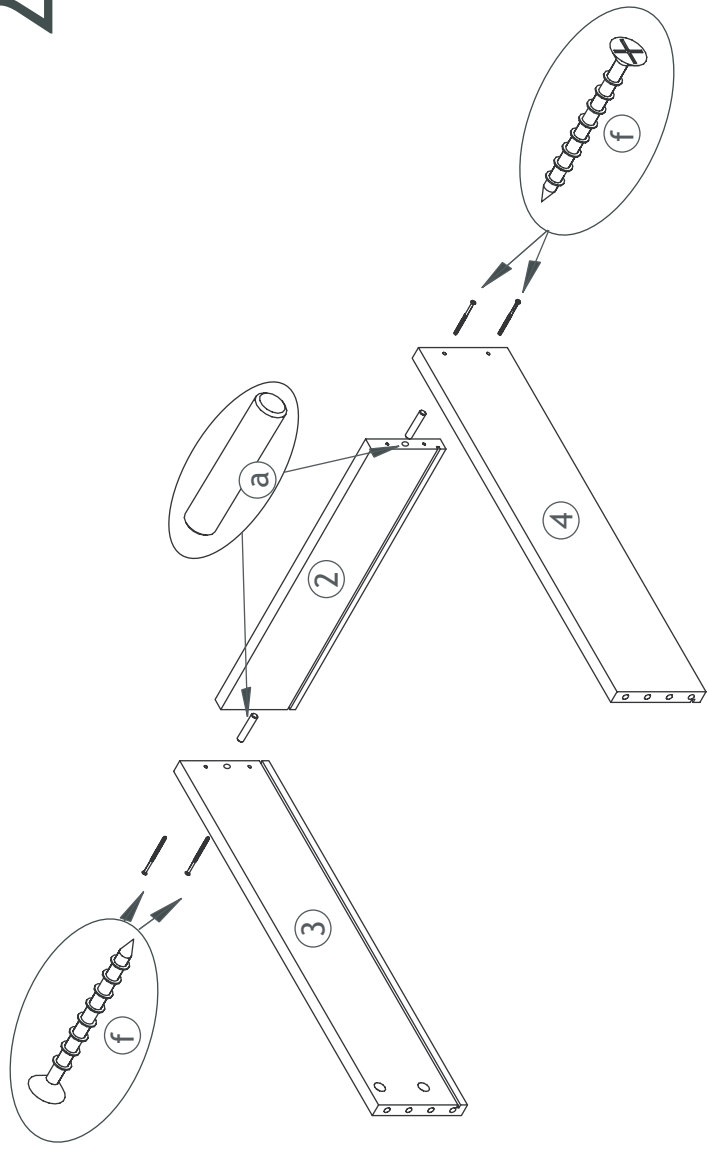

2.

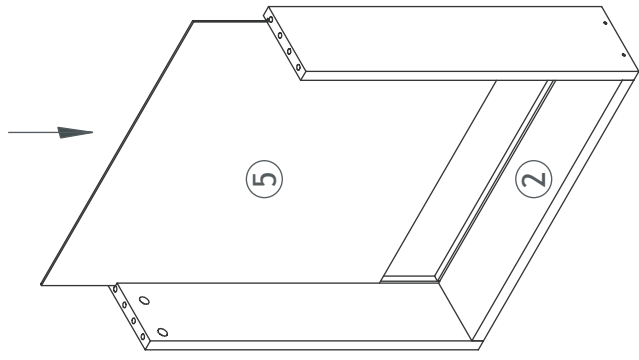

3.

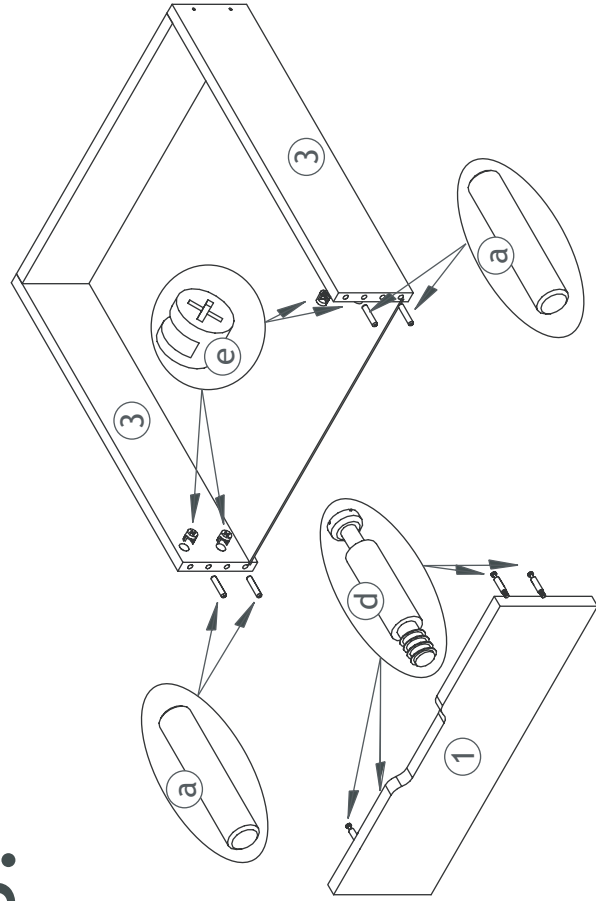

4.

