GAME - Art no 3624640

FEATURES

A-Control Panel
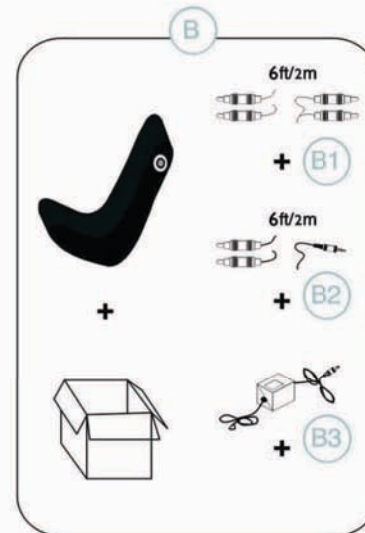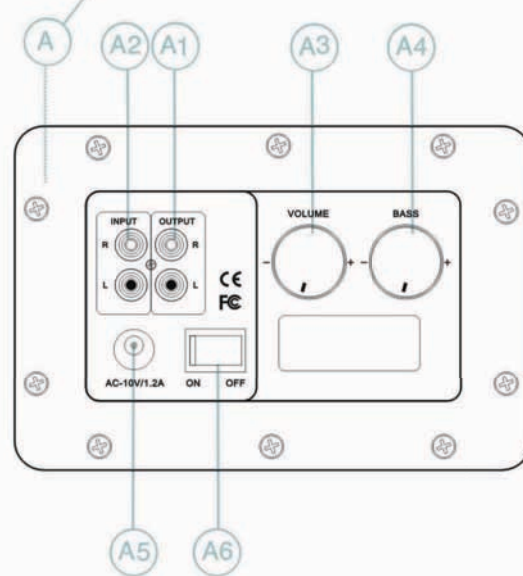
A1– Audio Output for Multi-user
A2– Audio Input Jack
A3–Volume Adjustment
A4–Sub Volume Adjustment
A5–I0V AC Power Input Jack
A6–Power On/Off Button Switch

B-Accessories Supplied with GAME CHAIR

B1–RCA Stereo Cable, Male-to-Male (1 pcs)
B2–RCA Stereo to 3.5mm stereo plug cable(1 pc)
B3–I0V AC Main Power Adapter

C- Specification for GAME CHAIR

Power output: RMS 2W×2 +4.5W(THD=10%)
Signal-to-Noise Rate (Amplifier): Subwoofer: >50dB
Satellite: >60dB
Frequency Response: 60Hz~15kHz
Distortion: Subwoofer:<4%(F=100Hz)
Satellite: <1% (F=1kHz)
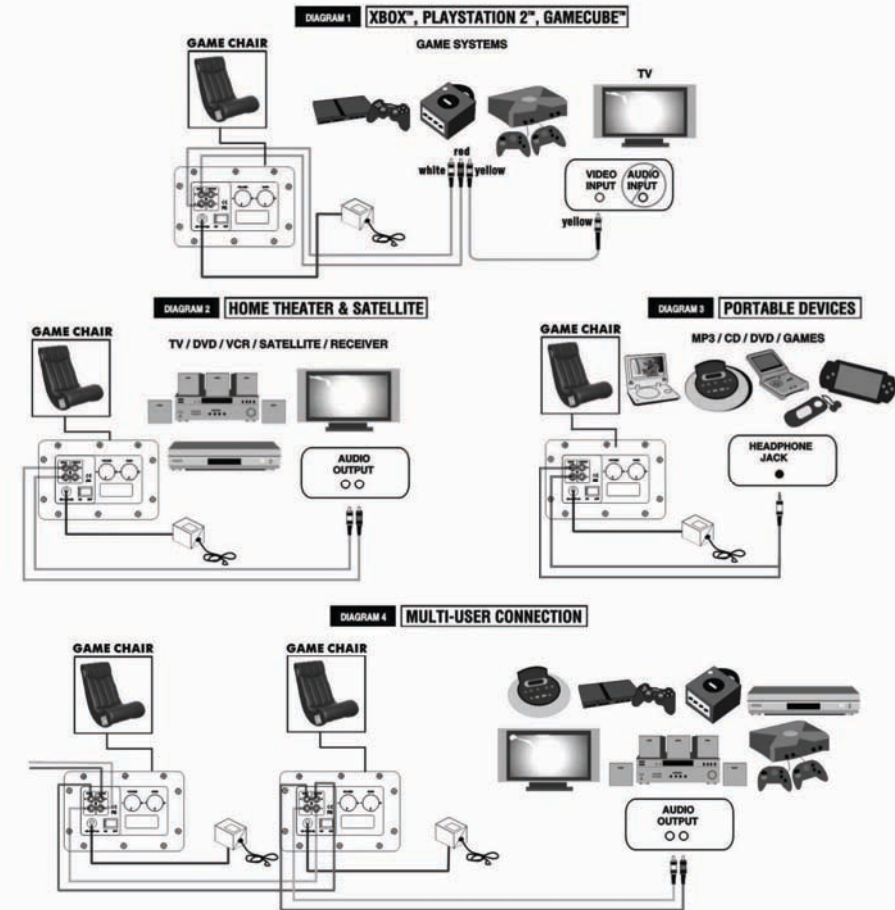Input : AC 10V/1.2A

FUNCTIONS:

- Built-in storage compartment under seat
- Side control panel with volume, bass control, and input/output jacks
- Ergonomic design with full back support
- Hardwood frame construction with dual layer foam cover for extra comfort
- Easy to clean, heavy duty, upholstery grade vinyl cover

CONNECTION GUIDE
*Bass control is only available on upgraded models

DIAGRAM 1 XBOX™, PLAYSTATION 2™, GAMECUBE™

DIAGRAM 2 HOME THEATER & SATELLITE

DIAGRAM 3 PORTABLE DEVICES

DIAGRAM 4 MULTI-USER CONNECTION

READ BEFORE USAGE:

- Excessive use of audio equipment could lead to hearing loss
- Children under the age of 13 should not use this product without adult supervision
- Strictly for indoor use – do not expose to direct sunlight, moisture or extreme temperatures
- If cover becomes wet. disconnect power immediately and don't use until completely dry
- Never try to remove cover or any components to avoid injury or death from electrical shock

PICTURE OUT OF BOX

POSITIONING FOR SECURING PIN AND VELCRO FLAP

SITTING POSITION

SET UP

1. Review the set up diagrams to familiarize yourself with GAME CHAIR components, accessories, and set-up.
2. Locate the input/output panel at the foot of the seat. Make sure that the control panel is not more
3. than 6ft/2 meters from the audio and power source.
   Unpack the power adapter and connect it to the main power outlet, then to the power jack on the control panel. (A5)
4. Press the power button (A6)
5. Follow the connection diagrams to connect the GAME CHAIR to the audio source of your choice.
6. Adjust the bass and volume levels to your preference.