




www.MLMEBLE.pl

GB D CZ SK RUS LT
assembly instructions / montageanleitung / montážní návod / montážny návod / инструкции по монтажу / surinkimo instrukcija

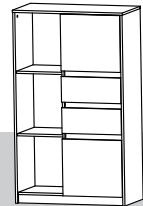


INSTRUKCJA MONTAŻU

FJORD 04
138 82 41

akcesoria / accessories / zubehör / příslušenství / príslušenstvo / аксессуары / furnitūra :







x 40 KK 8/32	x 4 KT 6,3/50	x 30 GZ 1,4/25	x 6 SG 8/8	x 24 MD	x 8 ZAM	x 8 PA Ø5	x 8 WT 3,5x16	x 2 PK L-350	x 4 ZPW	x 4 PK H-4
x 8 WE 6,3x13	x 30 WTLP 3x16	x 8 SP	x 12 WE 6,3x13 ES	x 1 klej / glue / kleber / lepidlo / lepidlo / клеј / клјал	x 1 klucz / key / schlüssel / klíč / klūč / ключ / raktas					

do montażu potrzebne są:
are needed for assembly:
sind erforderlich für die montage:
jsou potřebné pro montáž:
sú potrebné pre montáž:
которые необходимы для сборки:
Surinkimui reikės:

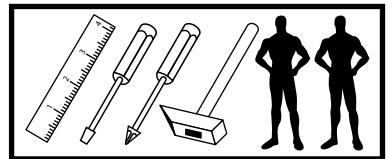


UWAGA! - w pierwszej kolejności wbijamy akcesoria „KK” i „MD” w blaty oraz boki.
WARNING! - The first accessory sticks "KK" and "MD" in the tops and sides.
WARNUNG! - Die erste Accessoire-Sticks "KK" und "MD" in den Spitzen und an den Seiten.
POZOR! - První příslušenství holí "KK" a "MD" v korunách a boky.
POZOR! - Prvé príslušenstvo palíc "KK" a "MD" v korunách a boky.
ВНИМАНИЕ! - Первый аксессуаров палочки "KK" и "MD" по вершинам и по бокам.
DÉMESIO! - Pirmiausiai furnitūrą KK ir MD įkalame į stalviršį ir šonus.

Nr/No	Szt/Qty
1	1
2	1
3	1
4	1
5	1
6	1
7	1
8	1
9	2
10	2
11	2
12	2
13	2
14	1
15	1
16	1

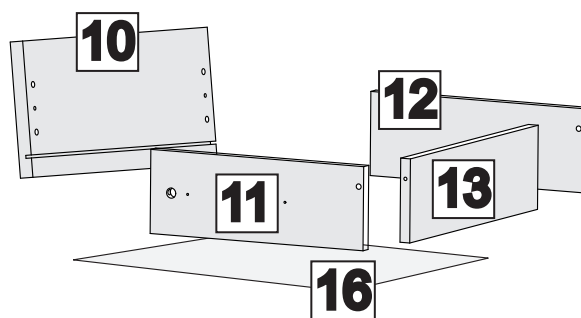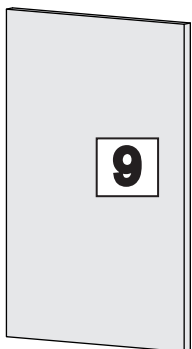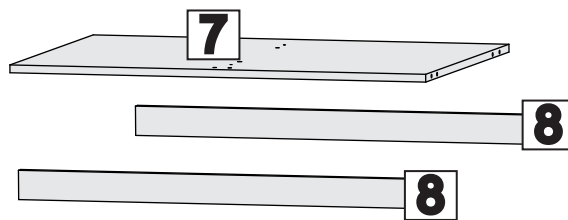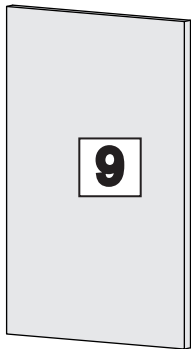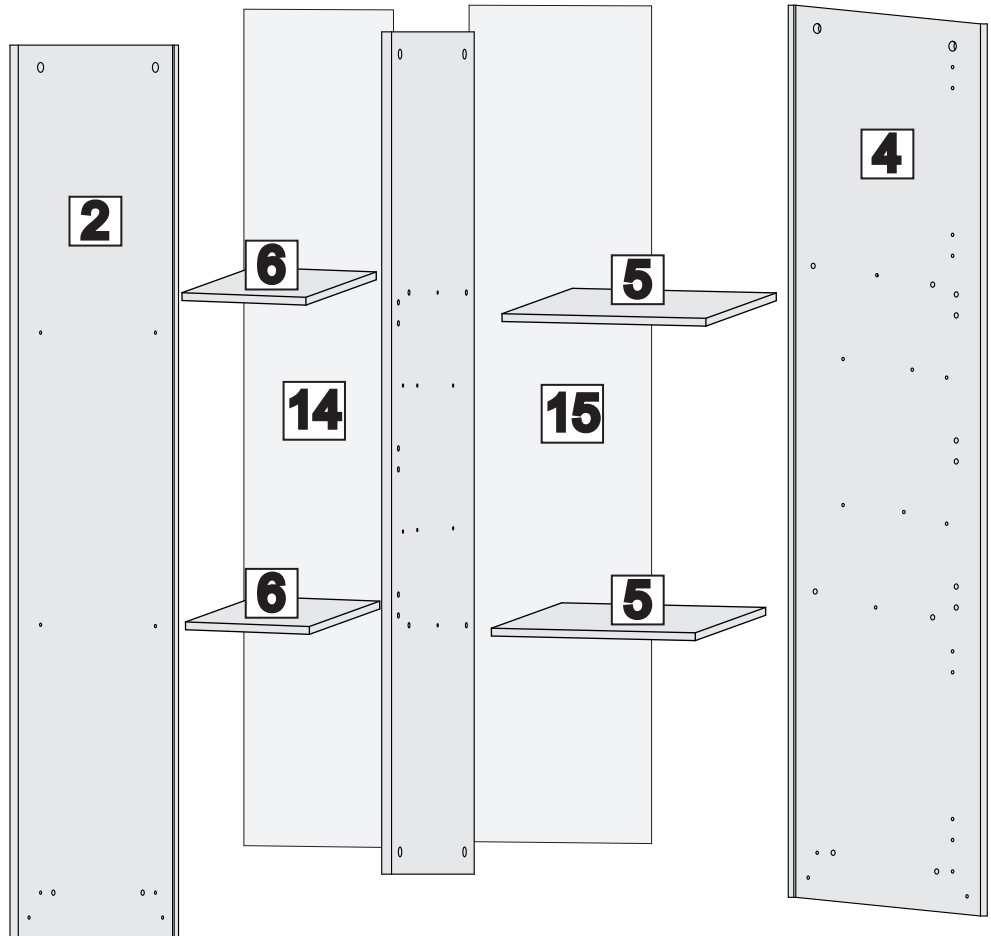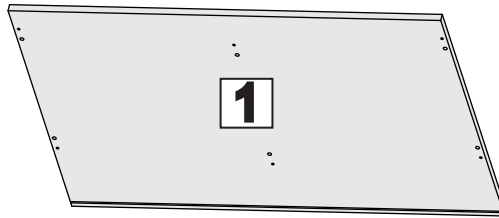

UWAGA ! - Wypinanie przewodnicy
WARNING! - guide unplugging
POZOR! -
POZOR! -
ВНИМАНИЕ! -
ΔΕΜΕΣΙΟ! -

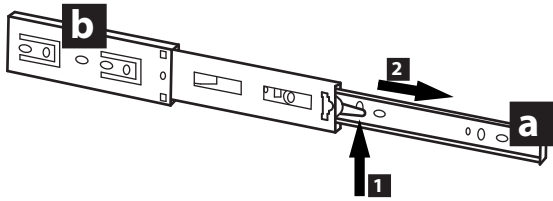

sequence assembly / reihenfolge montage / sekvence montáž / postupnost montáže / последовательность ассамблии / surinkimo eiliškumas

Kolejność montażu: I II III

