



www.MLMEBLE.pl

GB assembly instructions / D montageanleitung / CZ montážní návod / SK montážny návod / RUС инструкции по монтажу / LT surinkimo instrukcija



INSTRUKCJA MONTAŻU

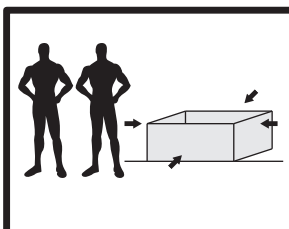
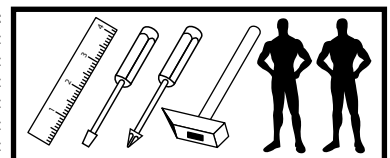
BONTI 08

↑ 127 → 50 ↘ 41

akcesoria / accessories / zubehör / příslušenství / príslušenstvo / аксессуары / furnitūra :




x 16 KK 8/32	x 2 KT 6,3/50	x 2 KT 6,4/70	x 40 GZ 1,4/25	x 12 MD	x 8 PA Ø5	x 8 WT 3,5x16	x 4 WT 4x27	x 12 WT 4x30	x 8 WT 4x35	x 4 ZA 110°	
x 4 PK H-2	x 8 WE 6,3x24	x 4 DPP 02	x 2 UTO	x 4 ST BI-150	x 1 PKZ	x 1 klej / glue / kleber / lepidlo / lepido / клей / klijaj	x 1 kluczyk / key / schlüssel / klíč / КЛЮЧ / ключ / raktas				

do montażu potrzebne są:
are needed for assembly:
sind erforderlich für die montage:
jsou potřebné pro montáž:
sú potrebné pre montáž:
которые необходимы для сборки:
Surinkimui reikės:



UWAGA ! - mebel należy składać w pozycji poziomej
WARNING! - furniture should be submitted in a horizontal position
WARNUNG! - Möbel sollten in einer horizontalen Position vorzulegen
POZOR! - Nábytek by měl být předložen ve vodorovné poloze
POZOR! - Nábytok by mal byť predložený vo vodorovnej polohe
ВНИМАНИЕ! - Мебель должна быть представлена в горизонтальном положении
DĚMESIO! - Baldą surenkame horizontalioje padėtyje

UWAGA ! - w pierwszej kolejności wbijamy akcesoria „KK” i „MD” w blaty oraz boki.
WARNING! - The first accessory sticks "KK" and "MD" in the tops and sides.
WARNUNG! - Die erste Accessoire-Sticks "KK" und "MD" in den Spitzen und an den Seiten.
POZOR! - První příslušenství holi "KK" a "MD" v korunách a boky.
POZOR! - Prvé príslušenstvo palíc "KK" a "MD" v korunách a boky.
ВНИМАНИЕ! - Первый аксессуаров палочки "KK" и "MD" по вершинам и по бокам.
DĚMESIO! - Pirmiausiai furnitūrą KK ir MD įkalame į stalviršį ir šonus.

	CODE			
1	BONTI08_01	1212	402	1
2	BONTI08_02	1212	402	1
3	BONTI08_03	500	403	1
4	BONTI08_04	500	403	1
5	BONTI08_07	418	435	2
6	BONTI08_05	464	386	2
7	BONTI08_06	464	340	2
8	BONTI08HDF_01	1220	492	1
9	BONTI08W_01	1186,5	81	1
10	BONTI08W_02	464	386	1
11	BONTI08W_03	414	81	1
12	BONTI08W_04	1186,5	81	1
13				
14				
15				

