






TAHOE TA21

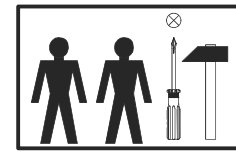

- (PL)** Instrukcja montażu
- (ES)** Instrucciones de instalación
- (FR)** Instructions de montage
- (CZ)** Montážní návod
- (HU)** Összeszerelési útmutató
- (SK)** Montážny návod
- (RU)** Инструкции по монтажу
- (IT)** Istruzioni di montaggio
- (RO)** Instrucțiuni de asamblare
- (TR)** Montaj talimatı
- (NL)** Handleiding voor de montage
- (UA)** Інструкція монтажу

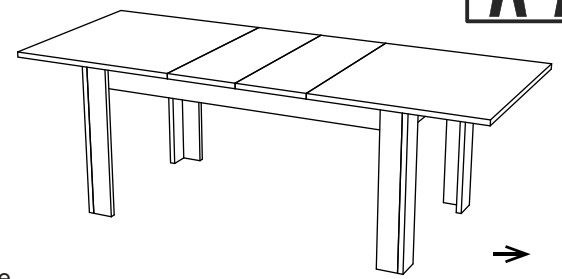

➔ ⬆ ↗
1620x750x900

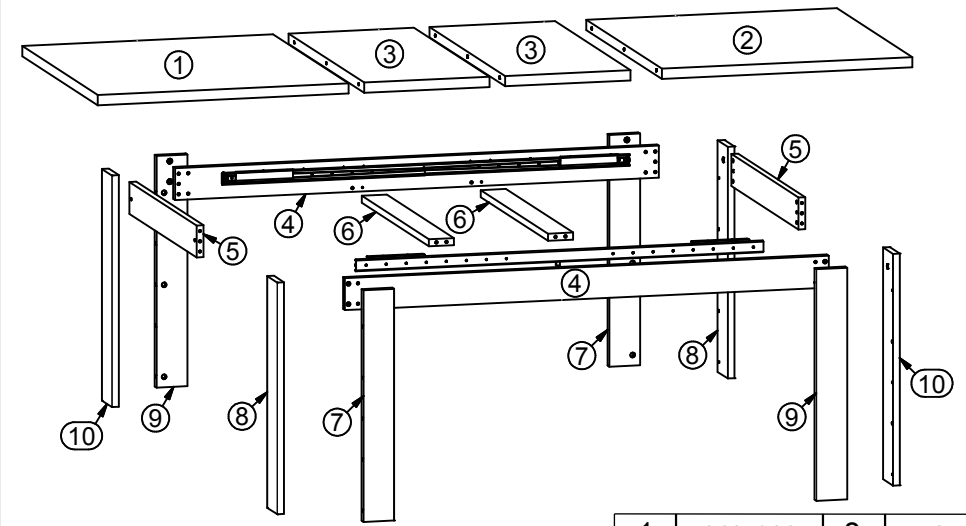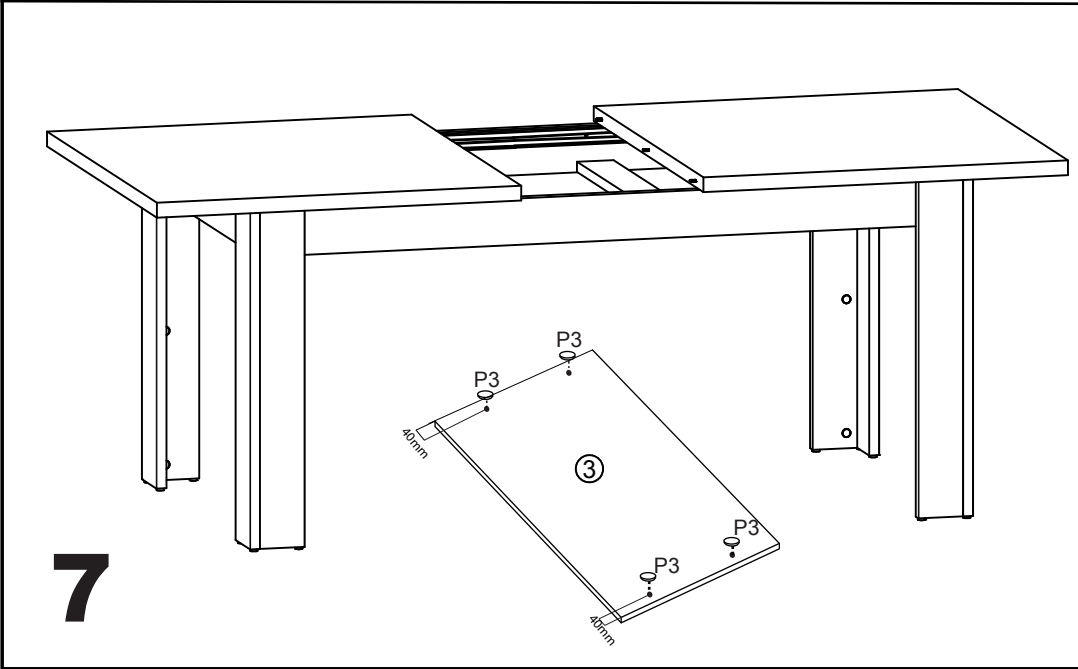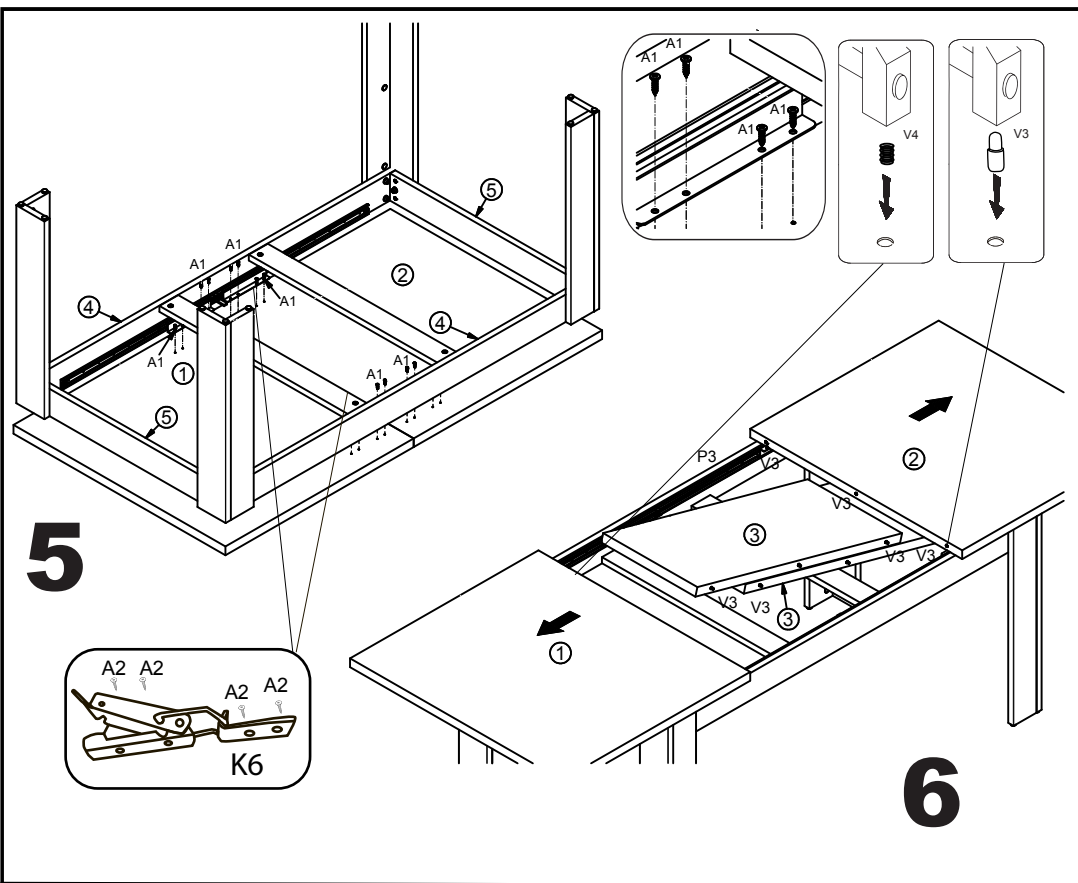

1	810x900	8	725x120
2	810x900	9	725x98
3	340x900	10	725x120
4	100x1544		
5	100x800		
6	80 x 800		
7	725x98		

1x Z1	9x V4	12x V1	2x K6
16x 8x30 K1	16x F15mm T1	16x F15mm M1	1x P3
8x 6,4x50 K3	9x V3	12x S4	38x 6x13 A1
	18x 3x16 A2	8x Z1	16x Z5
		12x B3	

