




www.MLMEBLE.pl

GB D CZ SK RUS LT  
assembly instructions / montageanleitung / montážní návod / montážny návod / инструкции по монтажу / surinkimo instrukcija

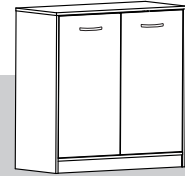


## INSTRUKCJA MONTAŻU

**KOMODA 01**  
 94 92 40


akcesoria / accessories / zubehör / příslušenství / príslušenstvo / аксессуары / furnitūra :




x 10  KK 8/32	x 8  MD	x 4  ZAM	x 4  PA Ø5	x 5  SG 8/8	x 8  WT 3,5x16	x 6  SP	x 4  ZPW	x 4  PK H-4	x 8  WE 6,3x13	x 1  LT
x 4  WT 4x35	x 2  UT L96	x 10  GZ 1,4/25	x 2  PO Ø5 E	x 1  klej / glue / kleber / lepidlo / lepidlo / клей / kljaj	x 1  kluczyk / key / schlüssel / klíč / kľúč / ключ / raktas					

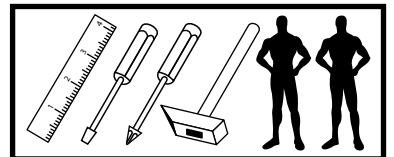do montažu potrebne są:  
 are needed for assembly:  
 sind erforderlich für die montage:  
 jsou potřebné pro montáž:  
 sú potrebné pre montáž:  
 которые необходимы для сборки:  
 Surinkimui reikės:

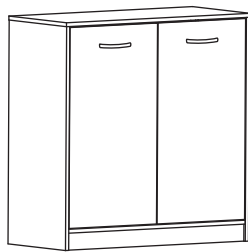

**UWAGA!** - w pierwszej kolejności wbijamy akcesoria „KK” i „MD” w blaty oraz boki.  
**WARNING!** - The first accessory sticks "KK" and "MD" in the tops and sides.  
**WARNUNG!** - Die erste Accessoire-Sticks "KK" und "MD" in den Spitzen und an den Seiten.  
**POZOR!** - První příslušenství holí "KK" a "MD" v korunách a boky.  
**POZOR!** - Prvé príslušenstvo palíc "KK" a "MD" v korunách a boky.  
**ВНИМАНИЕ!** - Первый аксессуаров палочки "KK" и "MD" по вершинам и по бокам.  
**DÉMESIO!** - Pirmiausiai furnitūrą KK ir MD įkalame į stalviršį ir šonus.



	CODE			
1	KOMODA01_01	916	403	1
2	KOMODA01_02	881	386	1
3	KOMODA01_03	915	402	1
4	KOMODA01_04	915	402	1
5	KOMODA01_05	881	70	1
6	KOMODA01_06	437	822	1
7	KOMODA01_07	437	822	1
8	KOMODA01_08	881	367	1
9	KOMODA01HDF_01	848	444	2
10				
11				
12				
13				
14				
15				

