



www.ML MEBLE .pl

GB

D

CZ

SK

RUS


LT

assembly instructions / montageanleitung / montážní návod / montážny návod / инструкции по монтажу / surinkimo instrukcija

INSTRUKCJA MONTAŻU

JOWISZ

↑ 75 → 123 ↗ 60

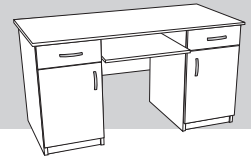


akcesoria / accessories / zubehör / příslušenství / príslušenstvo / аксессуары / furnitūra :

<p>x 16</p> <p>KK 8/32</p>	<p>x 26</p> <p>KT 6,3/50</p>	<p>x 12</p> <p>ZAM</p>	<p>x 8</p> <p>SG 8/8</p>	<p>x 8</p> <p>MD</p>	<p>x 44</p> <p>WT 3,5x16</p>	<p>x 4</p> <p>WT 4x30</p>	<p>x 12</p> <p>WT 4x35</p>
----------------------------	------------------------------	------------------------	--------------------------	----------------------	------------------------------	---------------------------	----------------------------

<p>x 3</p> <p>PAL350</p>	<p>x 8</p> <p>PA Ø3</p>	<p>x 4</p> <p>PT Ø6</p>	<p>x 1</p> <p>kluczyk / key / schlüssel / klíč / kľúč / ключ / raktas</p>	<p>x 60</p> <p>GZ 1,4/25</p>	<p>x 4</p> <p>PK H-0</p>	<p>x 4</p> <p>ZA 110°</p>	<p>x 8</p> <p>WE 6,3x13</p>
--------------------------	-------------------------	-------------------------	---	------------------------------	--------------------------	---------------------------	-----------------------------



<p>x 4</p> <p>UT L96</p>



do montażu potrzebne są:
 are needed for assembly:
 sind erforderlich für die montage:
 jsou potřebné pro montáž:
 sú potrebné pre montáž:
 которые необходимы для сборки:
 Surinkimui reikės

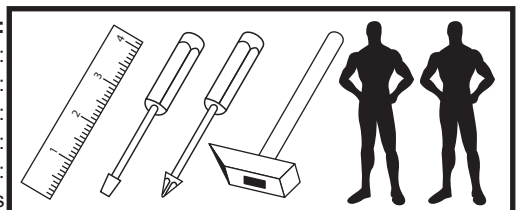

	CODE			
1	JOWISZ_01	720	494	1
2	JOWISZ_02	720	494	1
3	JOWISZ_03	720	494	1
4	JOWISZ_04	720	494	1
5	JOWISZ_05	510	345	1
6	JOWISZ_06	140	345	2
7	JOWISZ_07	500	432	1
8	JOWISZ_08	314	494	2
9	JOWISZ_09	314	60	2
10	JOWISZ_10	313	470	2
11	JOWISZ_11	350	80	4
12	JOWISZ_13	253	80	2
13	JOWISZ_14	475	350	1
14	JOWISZ_15	1230	596	1
15	JOWISZ_16	510	345	1

	CODE			
16	JOWISZHDF_01	660	345	2
17	JOWISZHDF_02	284	345	2
18	JOWISZ_12	253	80	2

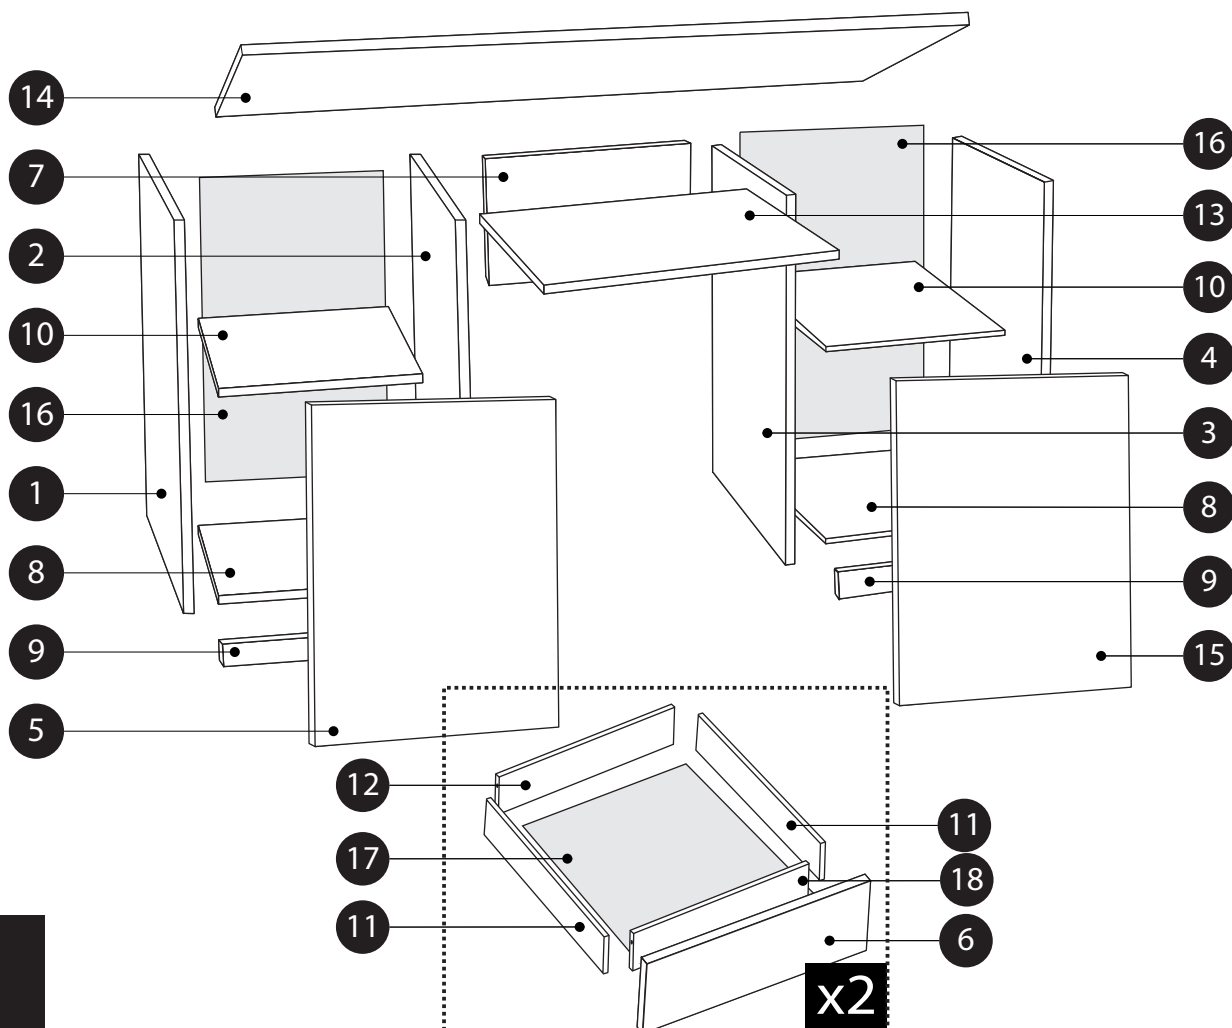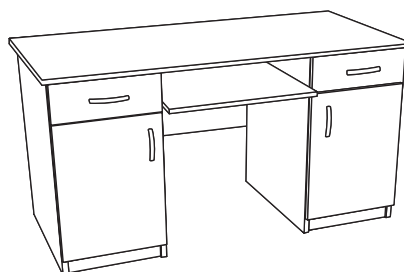

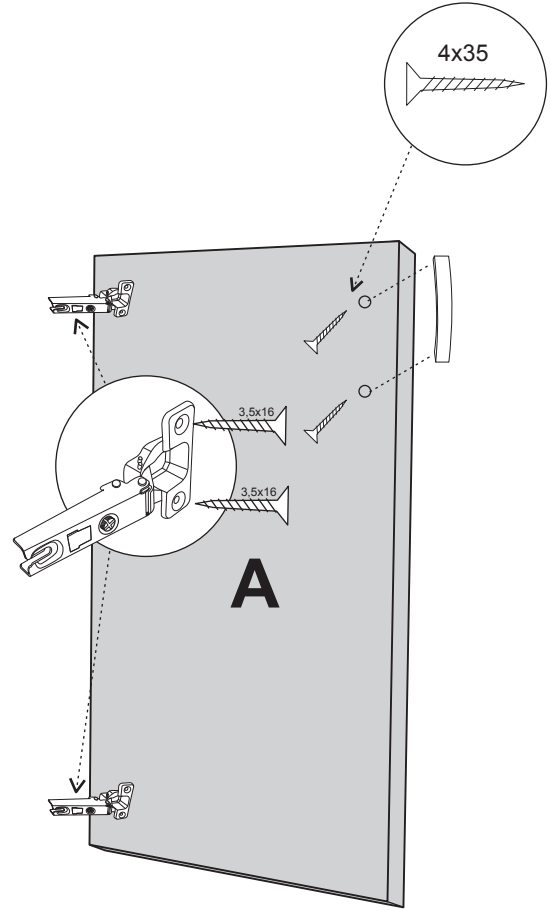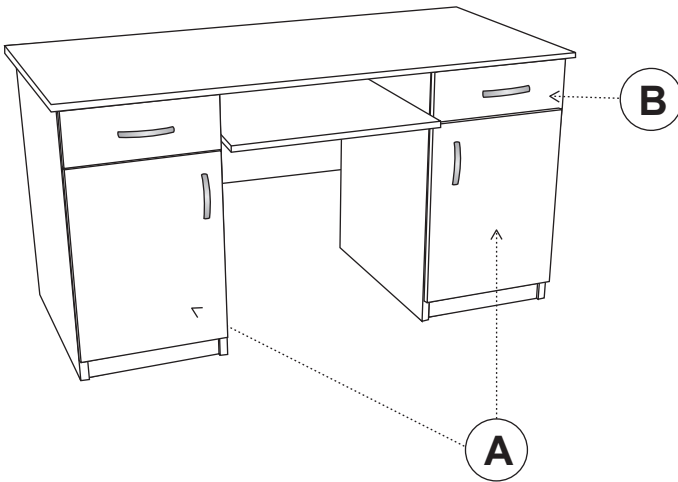

Po ustawieniu skontrolować.
 After setting to counter.
 Wenn Sie eingestellt Zähler.
 Po nastavení pultu.
 Po nastavení pultu.
 После установки в стойки
 Pastačius užblokuoti.

