



www.MLMEBLE.pl

GB

D

CZ

SK

RUS

LT

assembly instructions / montageanleitung / montážní návod / montážny návod / инструкции по монтажу / surinkimo instrukcija



INSTRUKCJA MONTAŻU

SZAFKA 08


↑ 118 → 80 ↗ 40



akcesoria / accessories / zubehör / příslušenství / príslušenstvo / аксессуары / furnitūra :


x 10 KK 8/30	x 6 KT 6,3/50	x 4 ZAK	x 4 MD	x 12 PA Ø5	x 4 PO Ø5 E	x 12 WT 3,5x16	x 10 WT 4x35
x 40 GZ 1/10	x 8 BDK	x 4 SG 8/8	x 1 PA L300	x 5 UT L96	x 16 WT 3x16	x 4 RN	x 1 kluczyk / key / schlüssel / klíč / kľúč / ключ / raktas
x 1 klej / glue / kleber / lepidlo / lepidlo / клей / klijai	x 2 ZAM						

do montażu potrzebne są:
 are needed for assembly:
 sind erforderlich für die montage:
 jsou potřebné pro montáž:
 sú potrebné pre montáž:
 которые необходимы для сборки:
 Surinkimui reikės

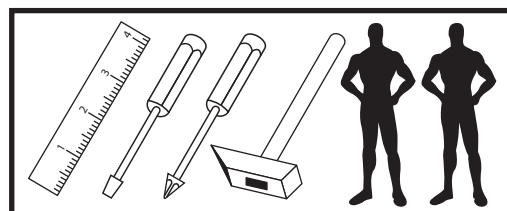




	CODE			
1	SZAFKA08_01	1157	385	1
2	SZAFKA08_02	800	400	1
3	SZAFKA08_03	764	384	1
4	SZAFKA08_04	763	287	3
5	SZAFKA08_05	759	230	4
6	SZAFKA08_06	759	139	1
7	SZAFKA08_07	60	764	1
8	SZAFKA08_08	300	80	2
9	SZAFKA08_09	707	80	1
10	SZAFKA08_10	1157	385	1
11	SZAFKA08HDF_01	1110	394	2
12	SZAFKA08HDF_02	737	303	1
13				
14				
15				

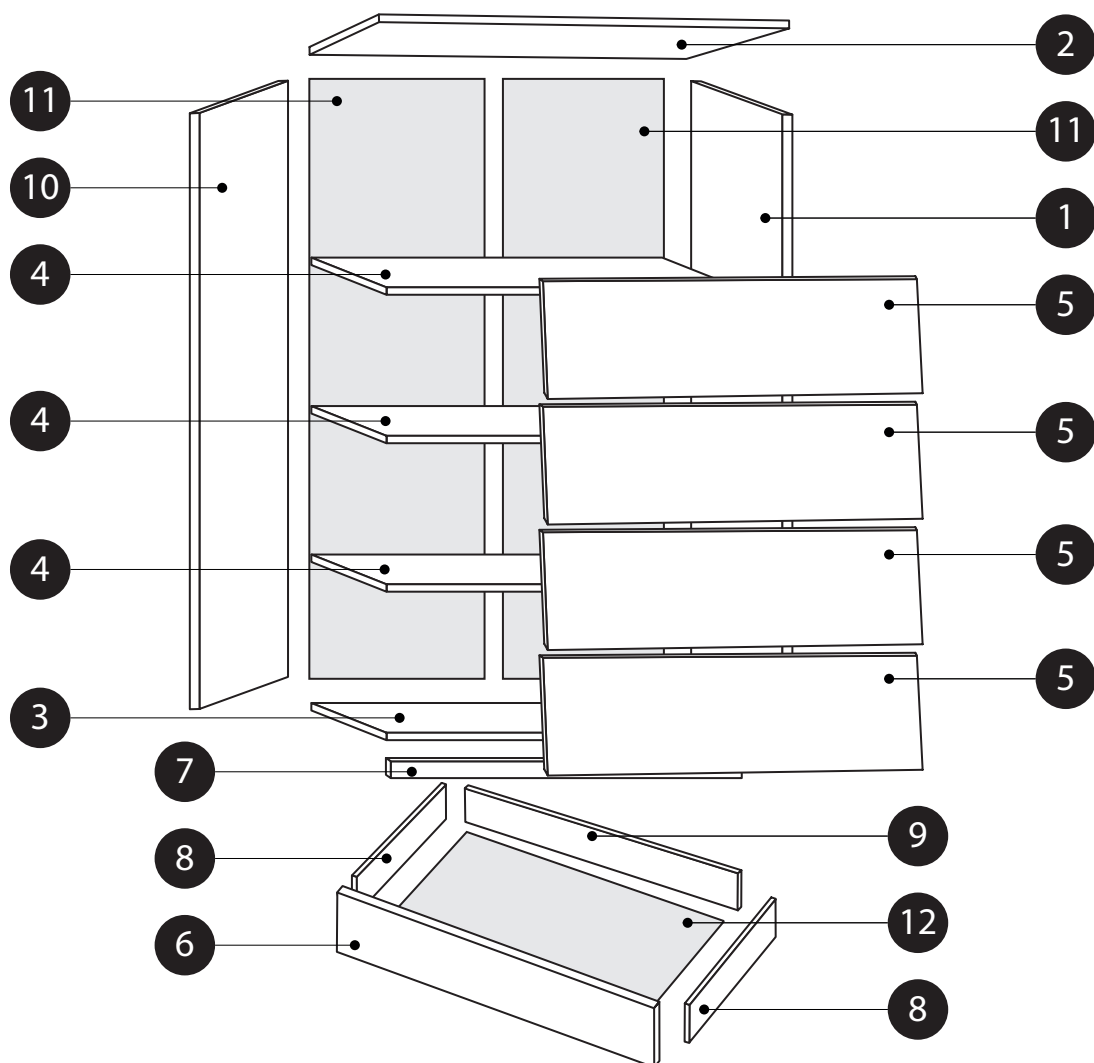

! UWAGA ! - w pierwszej kolejności wbijamy akcesoria „KK” i „MD” w blaty oraz boki.
WARNING! - The first accessory sticks "KK" and "MD" in the tops and sides.
WARNUNG! - Die erste Accessoire-Sticks "KK" und "MD" in den Spitzen und an den Seiten.
POZOR! - První příslušenství holí "KK" a "MD" v korunách a boky.
POZOR! - Prvé príslušenstvo palíc "KK" a "MD" v korunách a boky.
ВНИМАНИЕ! - Первый аксессуаров палочки "KK" и "MD" по вершинам и по бокам.
DĖMESIO! - Pirmiausiai furnitūrą KK ir MD įkalame į stalviršį ir šonus.

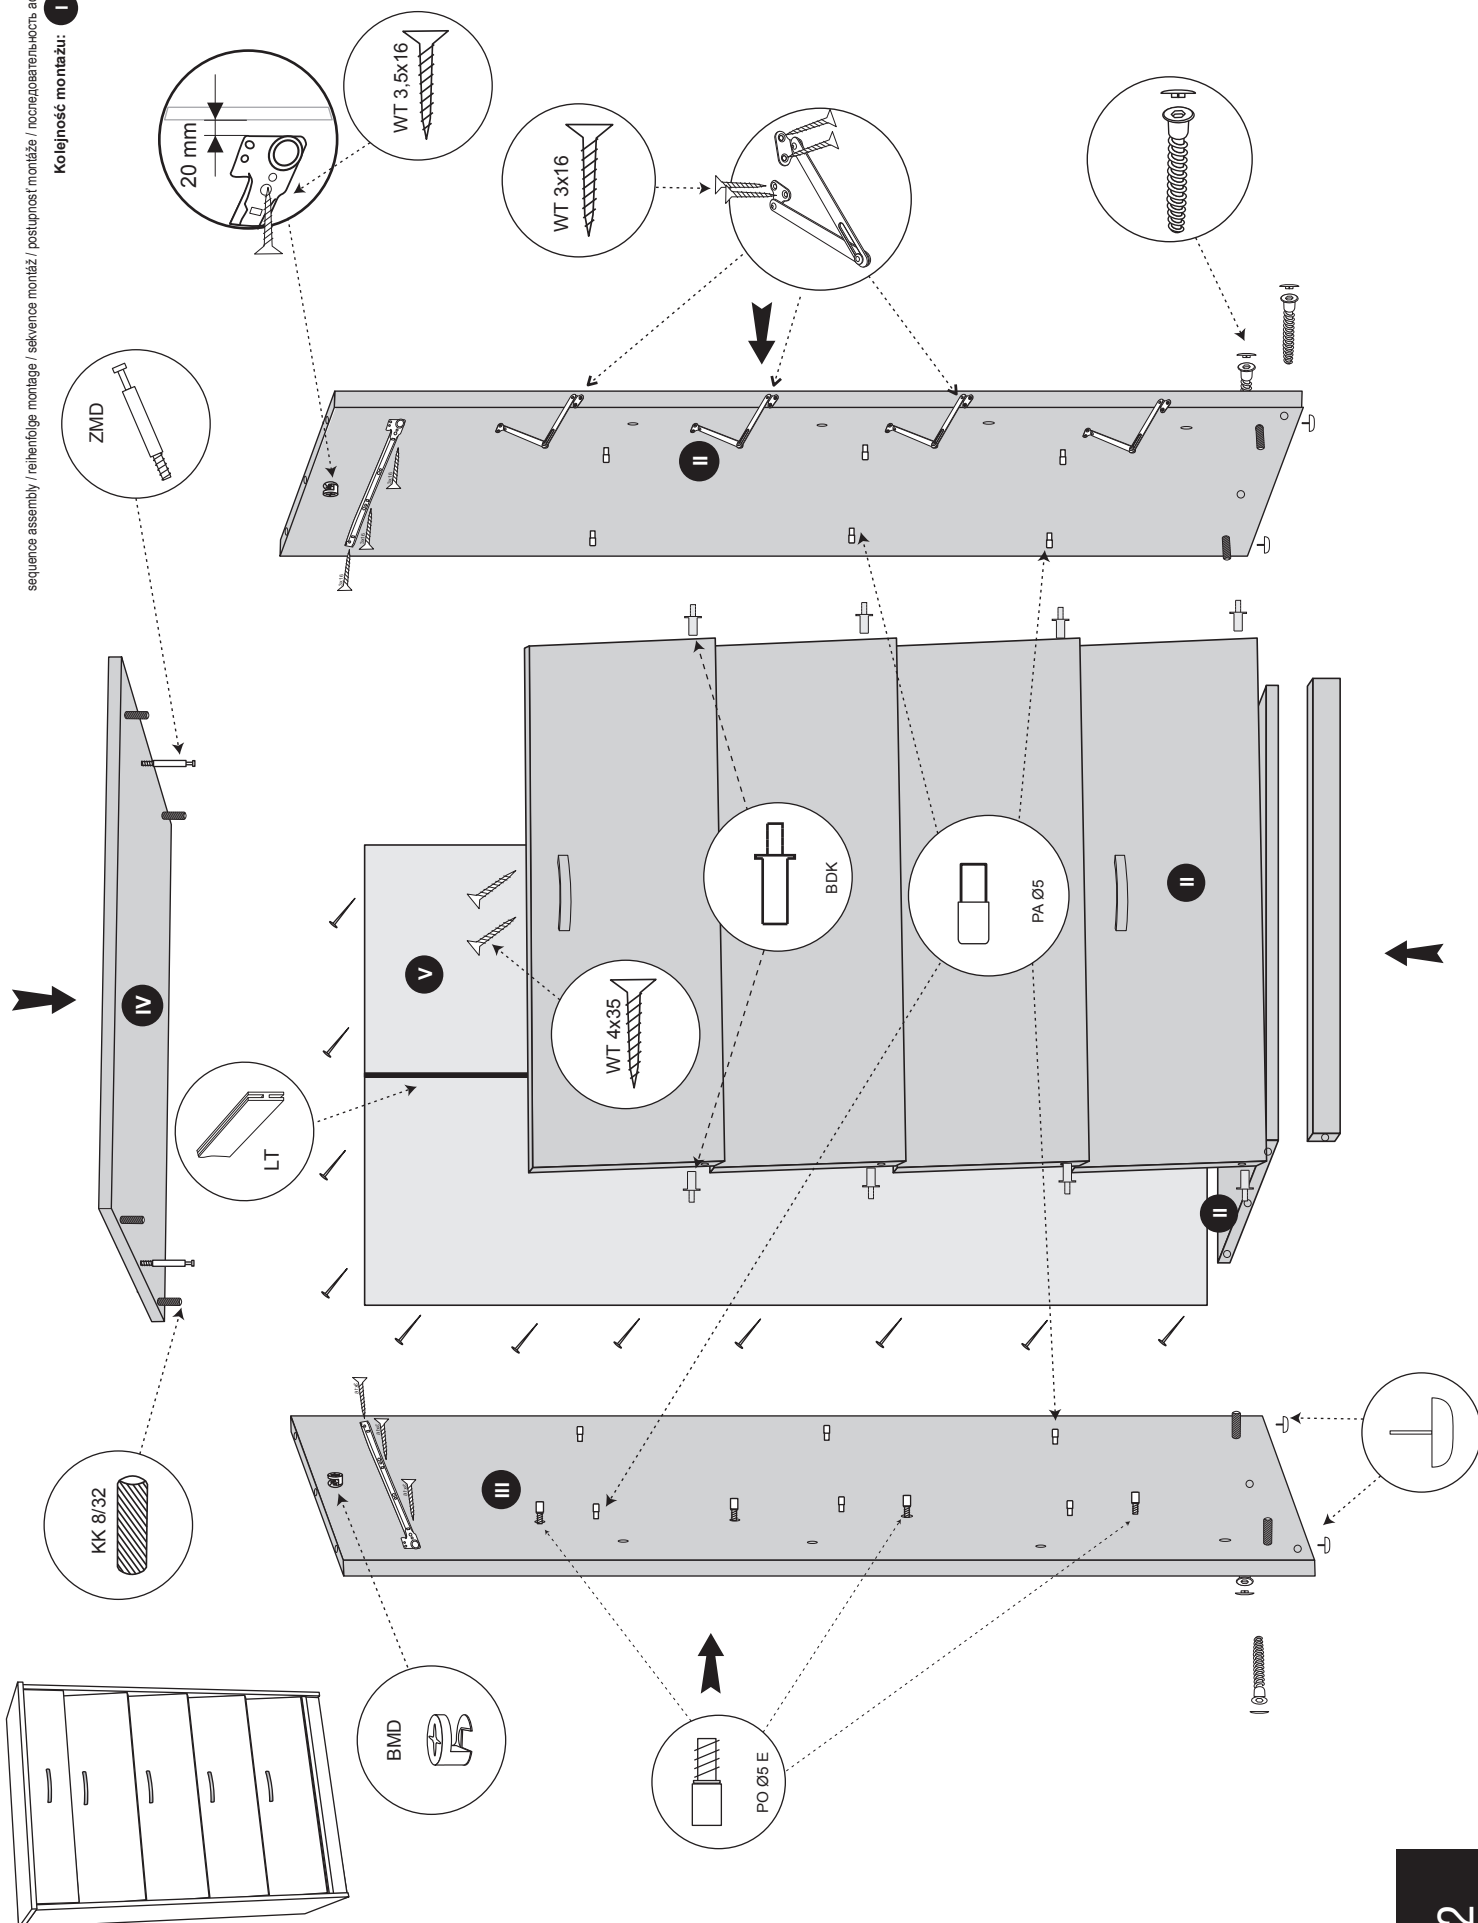



A

A

