

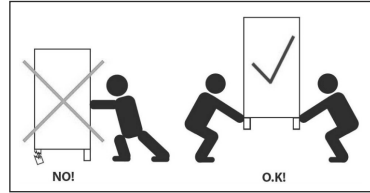
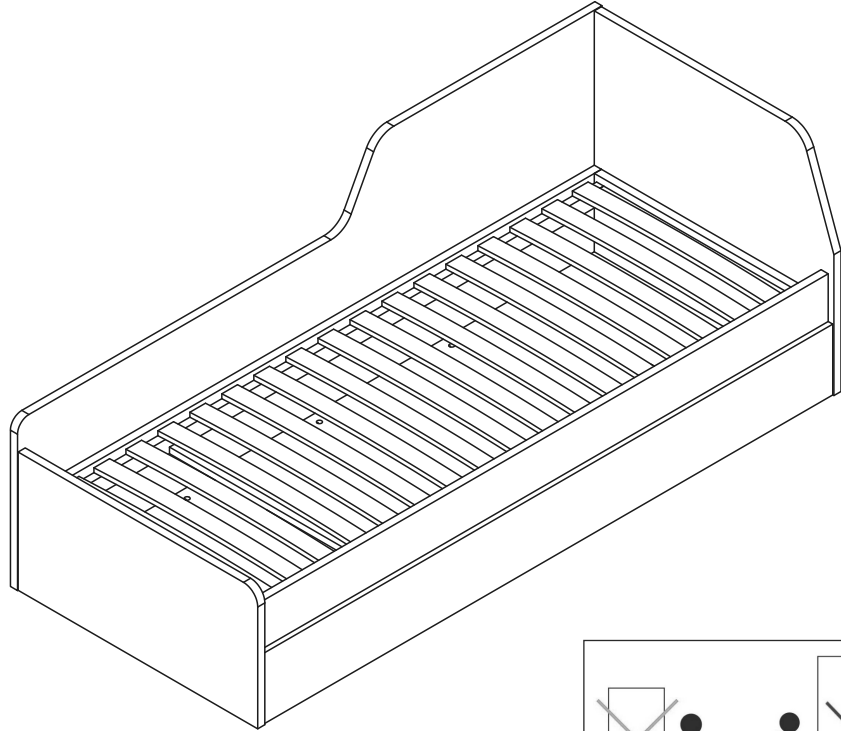
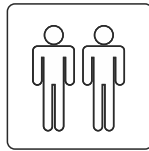


ZONDA Z21

Łóżko z pojemnikiem

















- | | |
|---|-------------------------------------|
| (D) Montageanleitung | (GB) Assembly instructions |
| (FR) Notice de montage | (IT) Istruzioni di montaggio |
| (NL) Handleiding voor de montage | (PL) Instrukcja montażu |
| (CZ) Montážní návod | (SK) Návod na montáž |
| (HU) Szerelési útmutató | (RO) Instrucțiuni de montaj |
| (TR) Montaj talimatı | (RU) ИНСТРУКЦИЯ ПО МОНТАЖУ |



2- 2,5



1

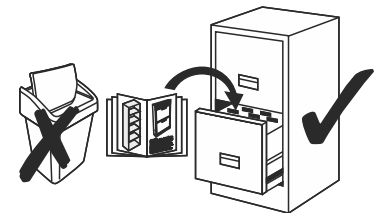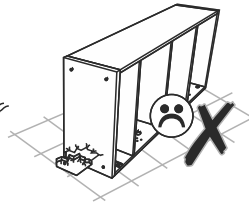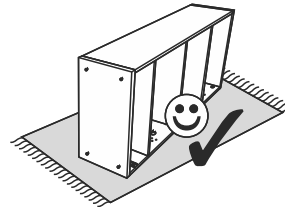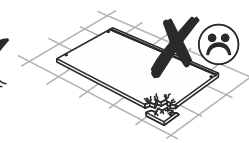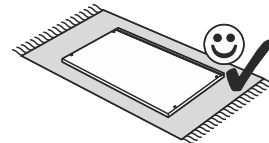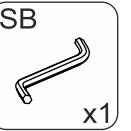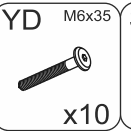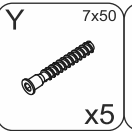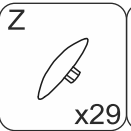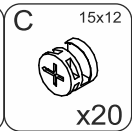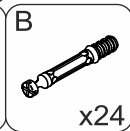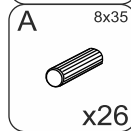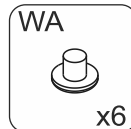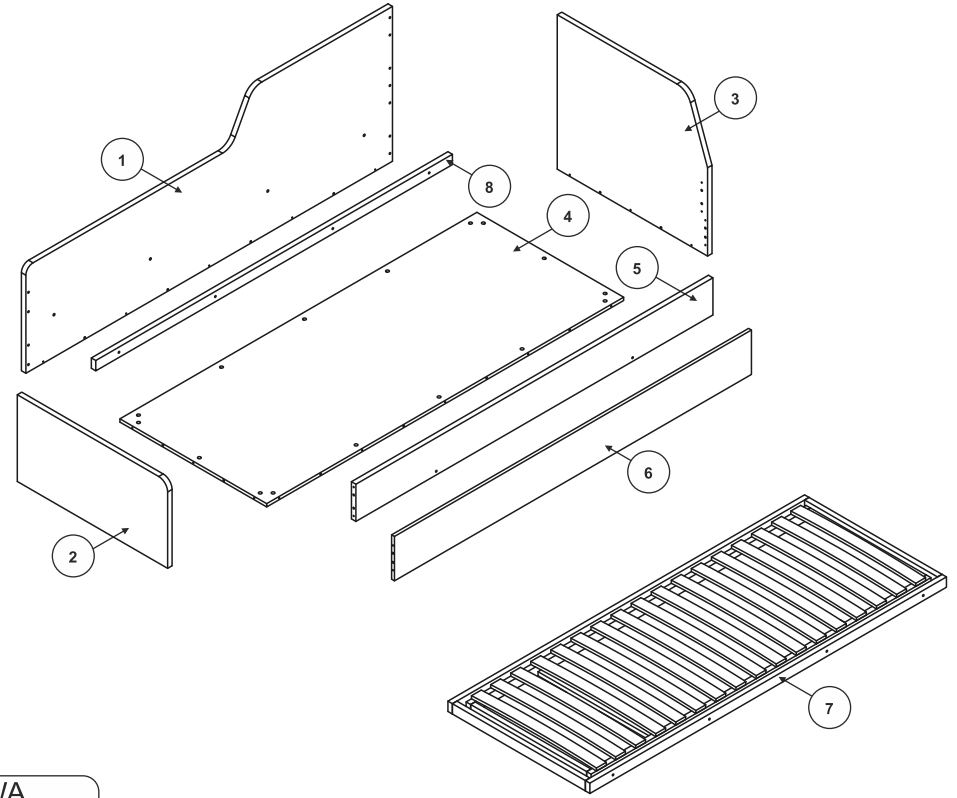

2


- A 8x35 x6
- B x14

3

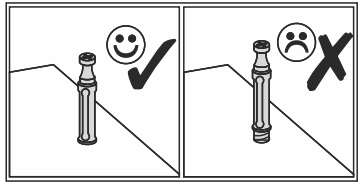
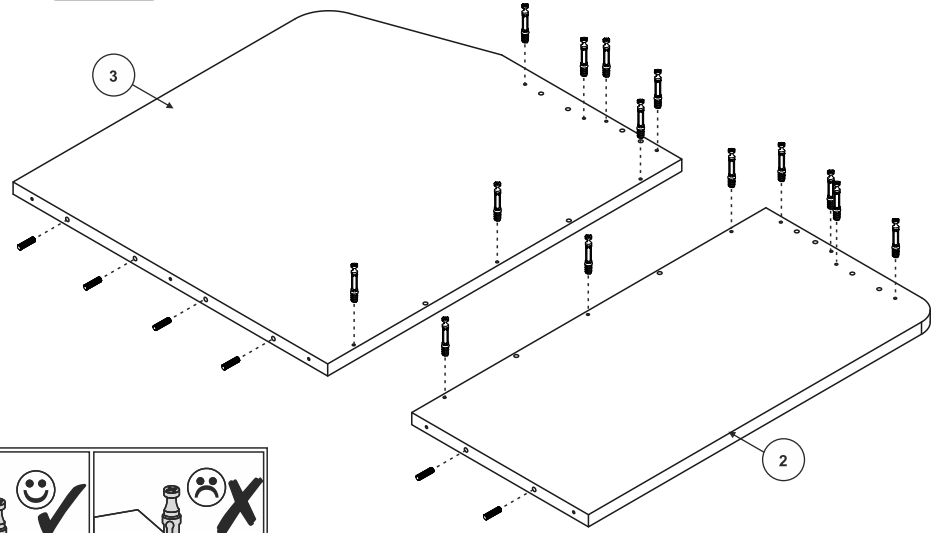


- YD M6x35 x4
- SB x1


4

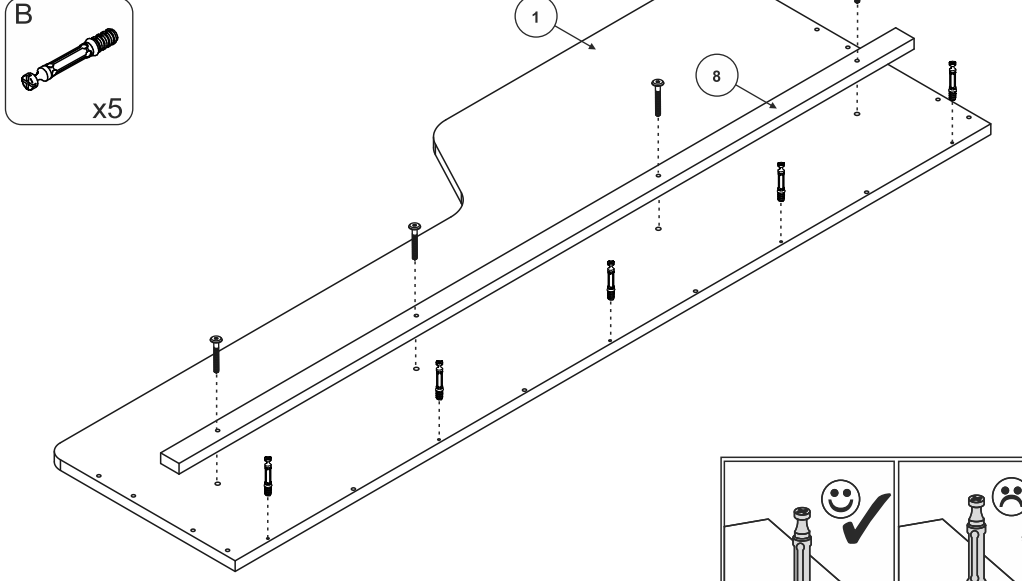

- B x5

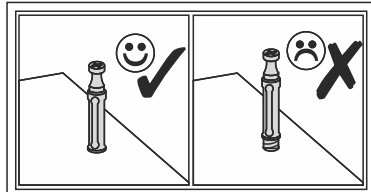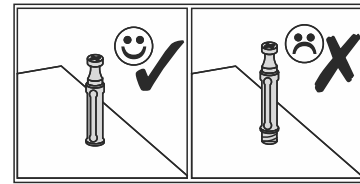

5

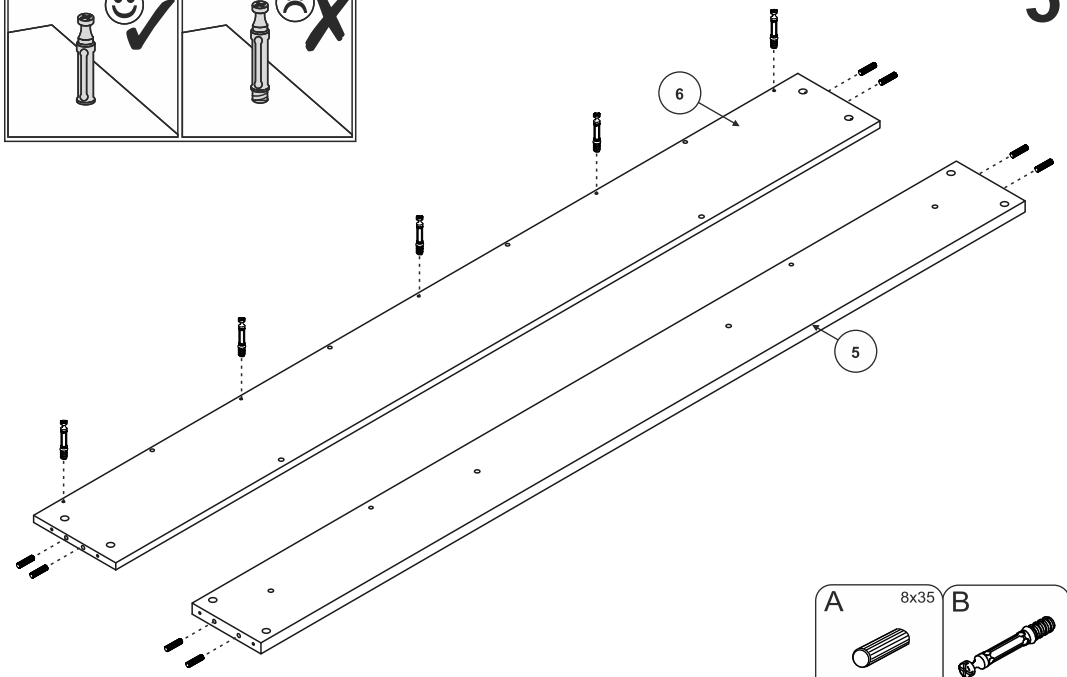

- A 8x35 x8
- B x5

- A 8x35 x12
- WA x6

6

