

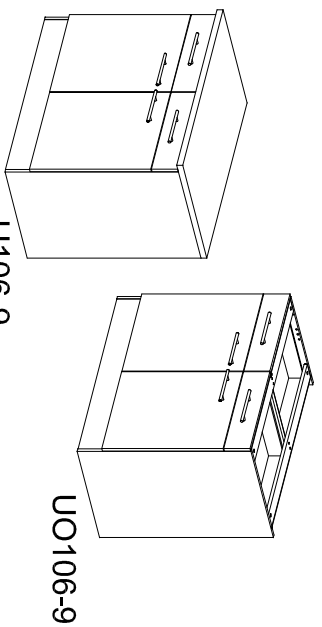
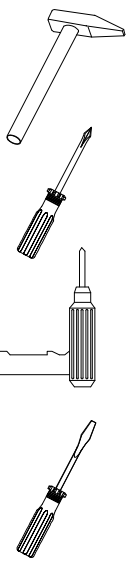


Montageanleitung









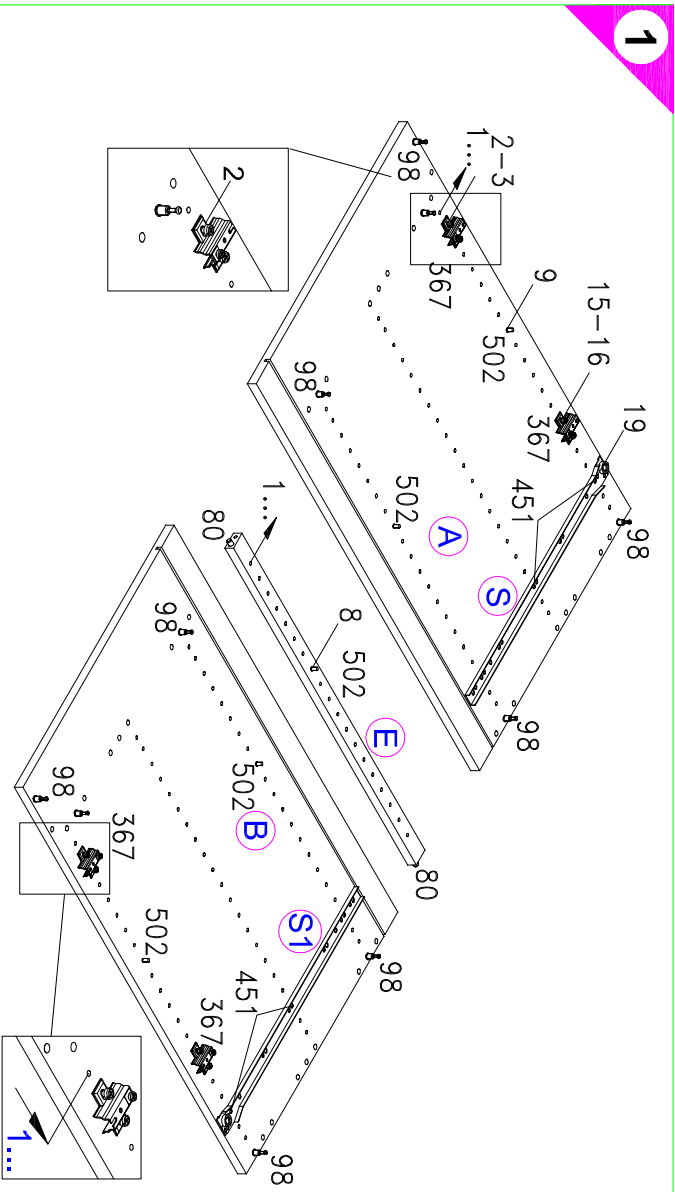


Service-Hotline
01805-678101
 0,14€ pro Minute
++49 für Österreich
 Auslandstarif pro Minute
service@optifit.de
 voor Nederland en België
00800-40119350
benelux@optifit.de

- 1** 10x Nr.98
- 2** 4x Nr.367
- 3** 5x Nr.502
- 8x 6,3x12,5 Nr.451
- 1x Ø5x30 Nr.81
- 2x Ø8x30 Nr.80
- 4x Nr.76
- 10x Ø8x30 Nr.80
- 6x Nr.76
- 6x Ø8x30 Nr.80
- 6x 7x42 Nr.78

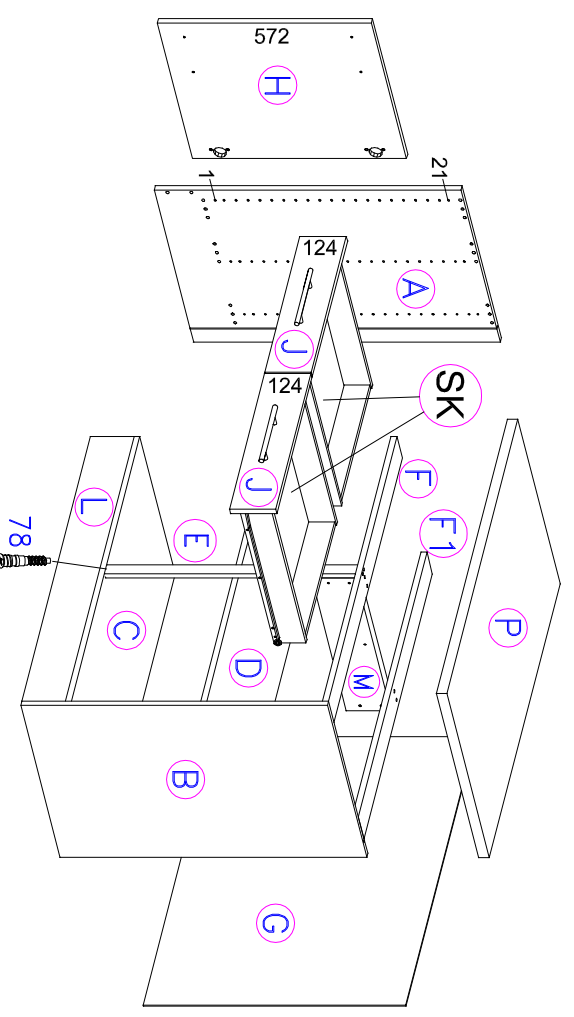

- 4** 10x Nr.204
- 5** 4x Nr.365
- 6** 4x 4x30 Nr.164
- 7** 2x 4x30 Nr.424
- 8** 4x 4x30 Nr.164
- 9** 2x 4x30 Nr.424

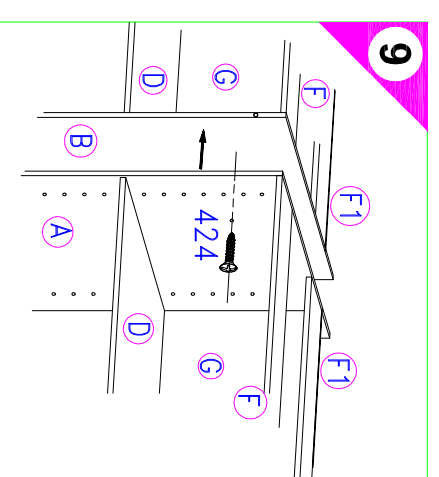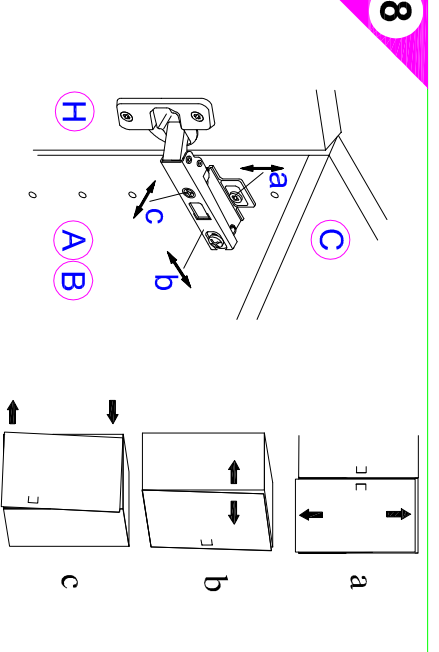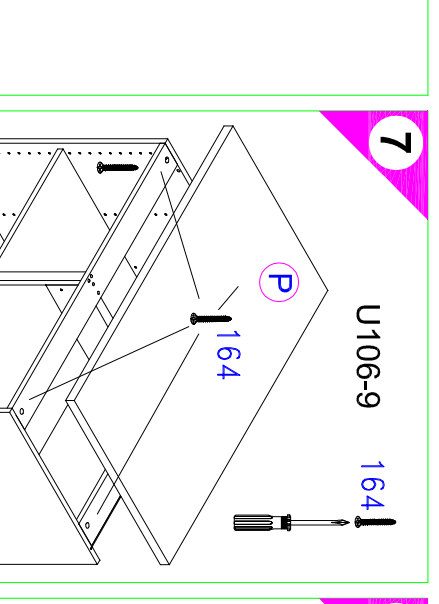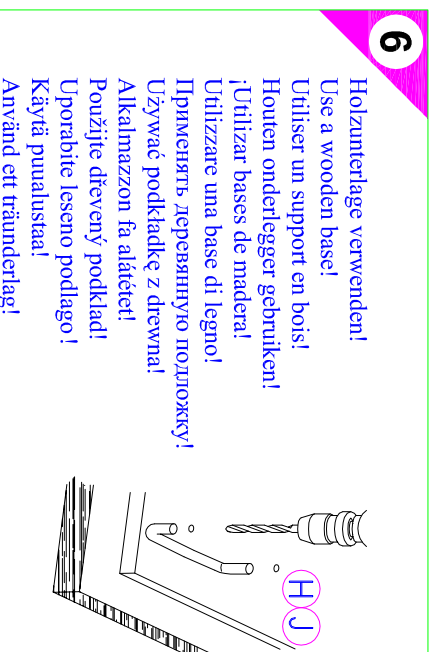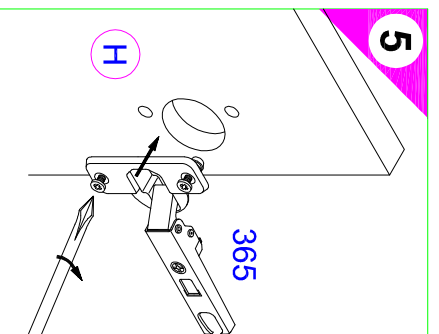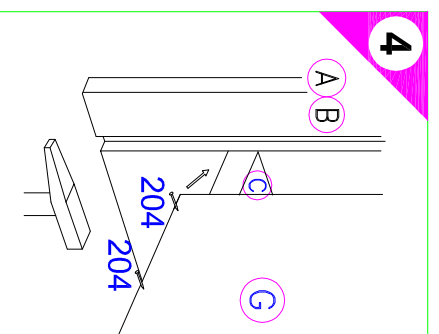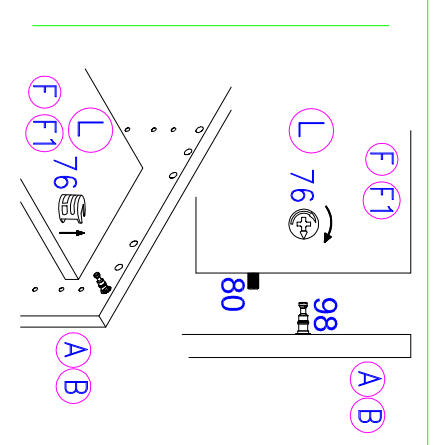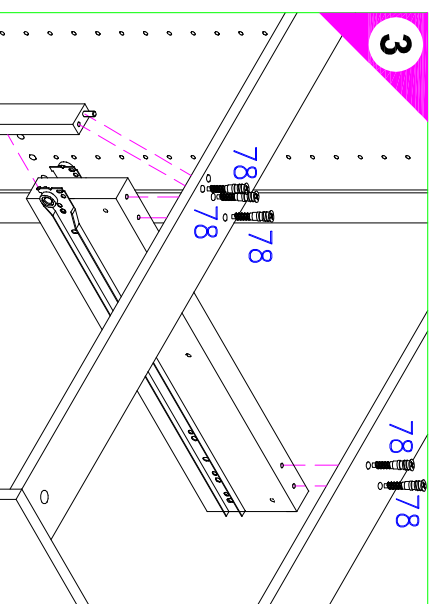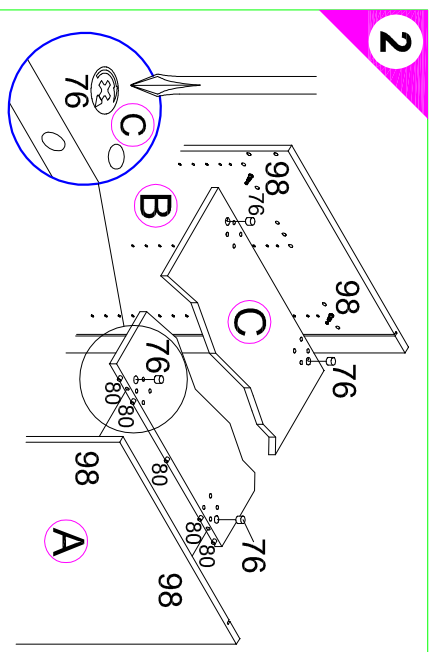

2
 Holzunterlage verwenden!
 Use a wooden base!
 Utiliser un support en bois!
 Houwen onderlegger gebruiken!
 !Utilizar bases de madera!
 Utilizzare una base di legno!
 Применять деревянную подложку!
 Uživať ročkladče z dreva!
 Alkalmazzon fa alátét!
 Použíjte dřevěný ročklad!
 Uprorabite leseno podlago!
 Käytä puualusta!
 Använd ett träunderlag!

7
 U106-9 164

8
 H A B C

9
 F1 D G B A F1

Ersatzteile/Spare parts/pièces de rechange/Reserveonderdelen/Piezas de recambio/Ricambi/Запасные части/Części zamienne/pótkalkatrészek/Náhradní části/Nadomestni deli/varaosat/reservdelar

100cm U106-9 A E961021 B E961022 C E951211 D E950301 E E940099 F E942971 G E970115 H E940612 J E940563 L E970971 M E940108 P E540101





100cm UO106-9 A E961021 B E961022 C E951211 D E950301 E E940099 F E942971 G E970115 H E940612 J E940563 L E970971 M E940108

500655.1A 12/07 ms



Montageanleitung

Service-Hotline
01805-678101
 0,14€ pro Minute
++49 für Österreich
 Auslandstarif pro Minute
service@optifit.de
 voor Nederland en België
00800-40119350
benelux@optifit.de

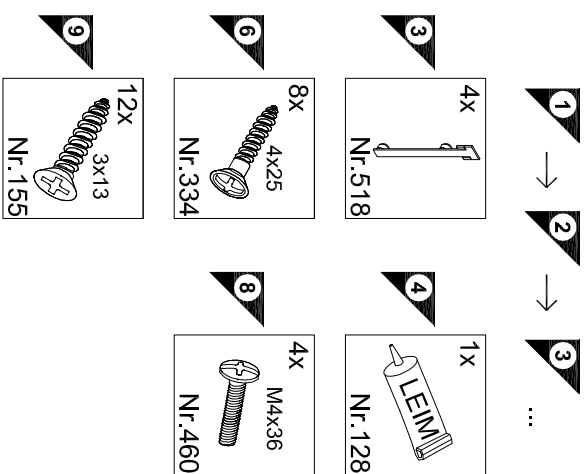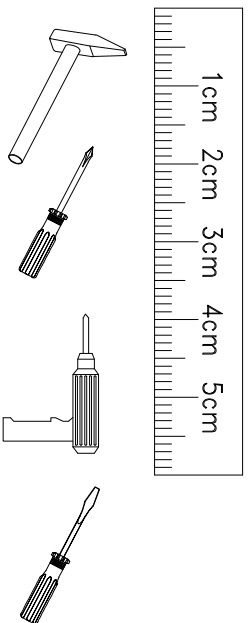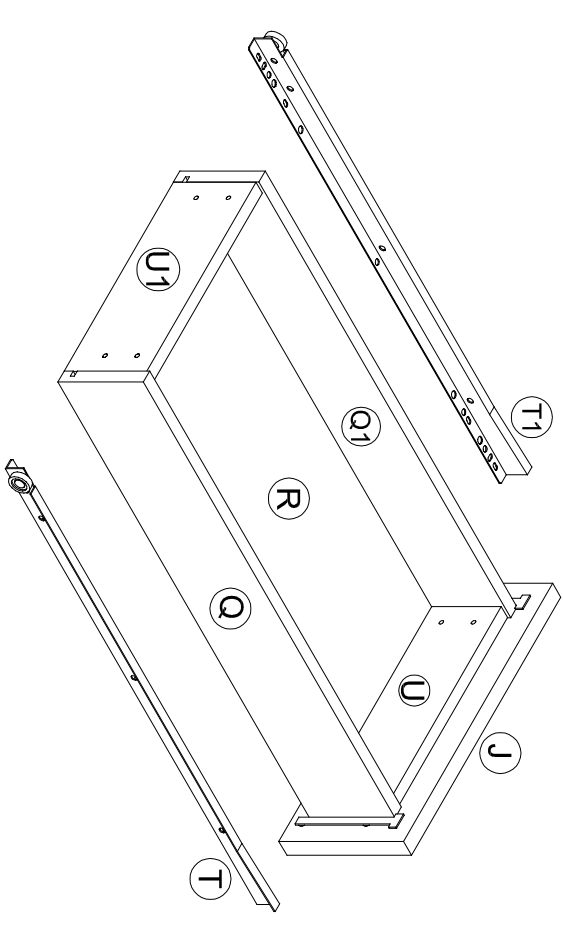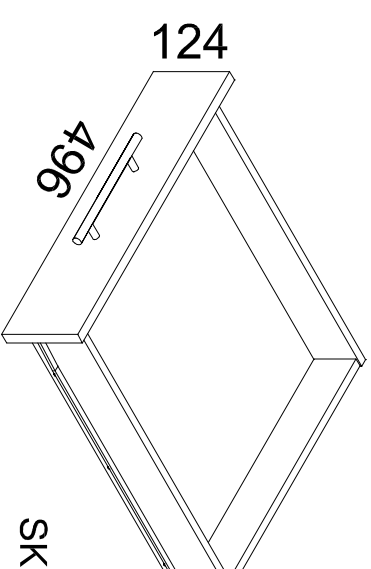

1 Holzunterlage verwenden!
 Use a wooden base!
 Utiliser un support en bois!
 Houten onderlegger gebruiken!
 Utilizar bases de madera!
 Utilizzare una base di legno!
 Применять деревянную подложку!
 Używaj podkładkę z drewna!
 Alkalmaazzon fa aláttét!
 Použijte dřevěný podklad!
 Uprabite leseno podlagro!
 Käytä puualustaa!
 Använd ett träunderlag!

2

3

4

5

6

7

8

9

Ersatzteile/Spare parts/pièces de rechange/Reserveonderdelen/Piezas de recambio/Risambji/Запасные части/Części zamienne/rófalakatrészek/Náhradní části/Nadomestni deli/vargaosat/reservdelar
 SK 50 | © E945400 © E945400 © E970151 © E946151 © E946150 © E945407 © E945407