

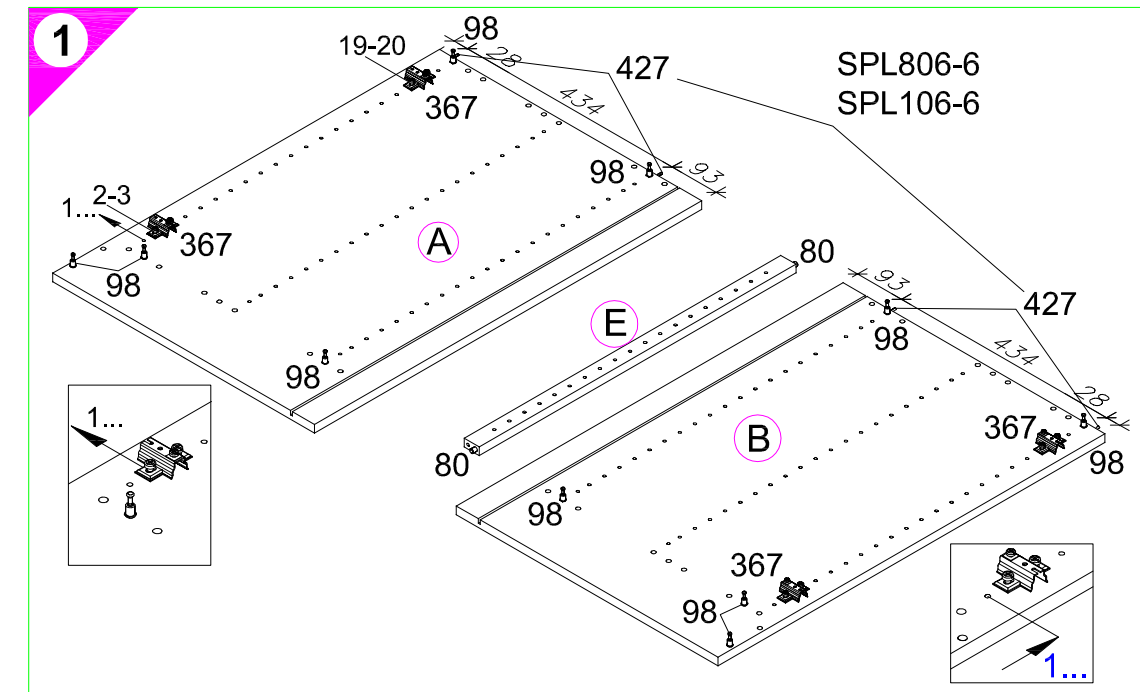
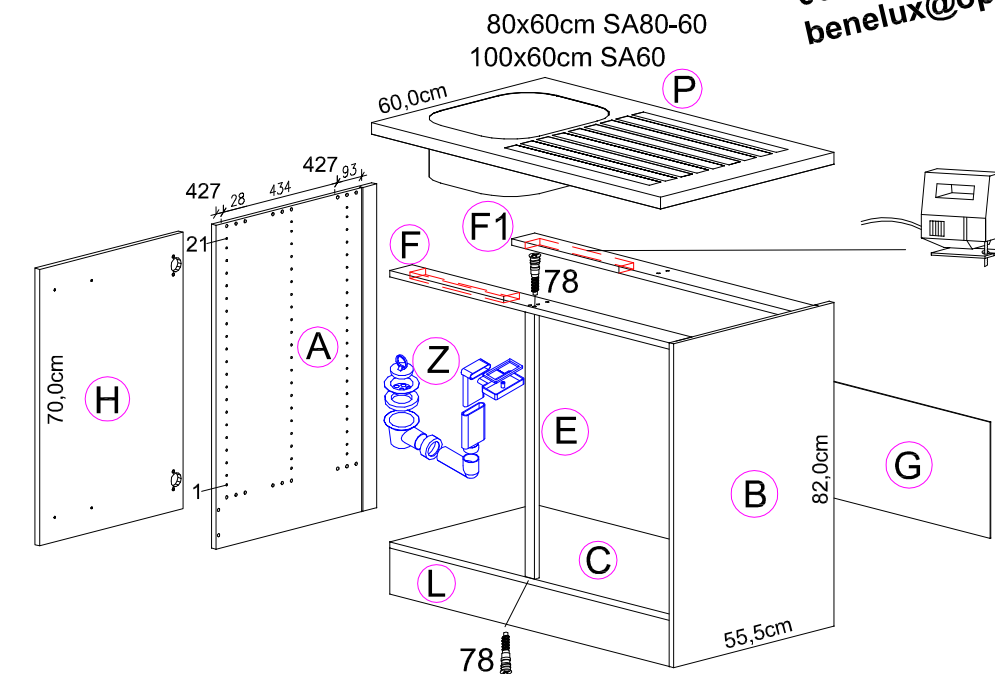
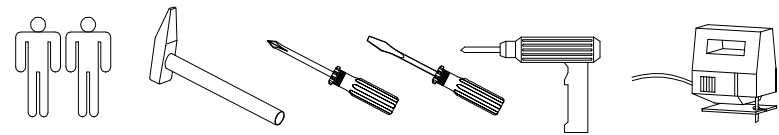

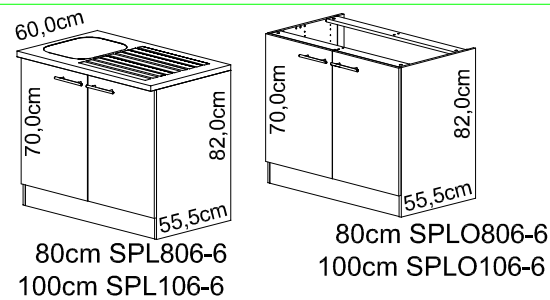
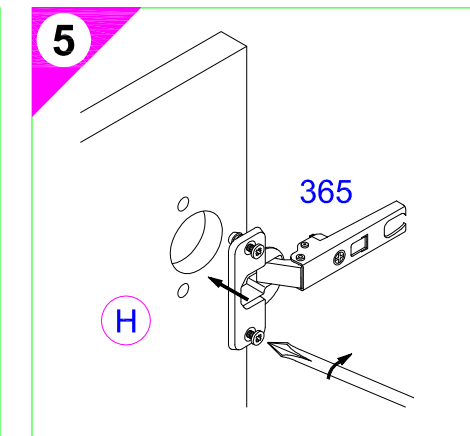
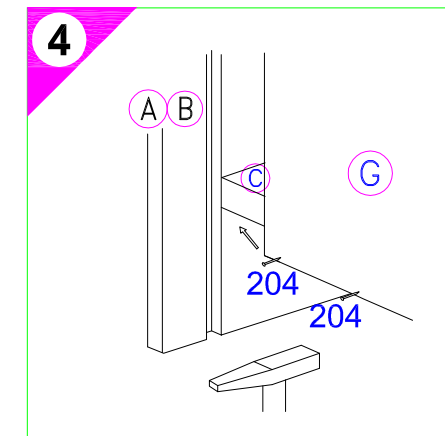
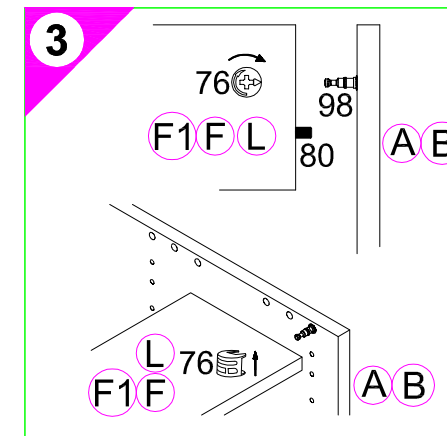
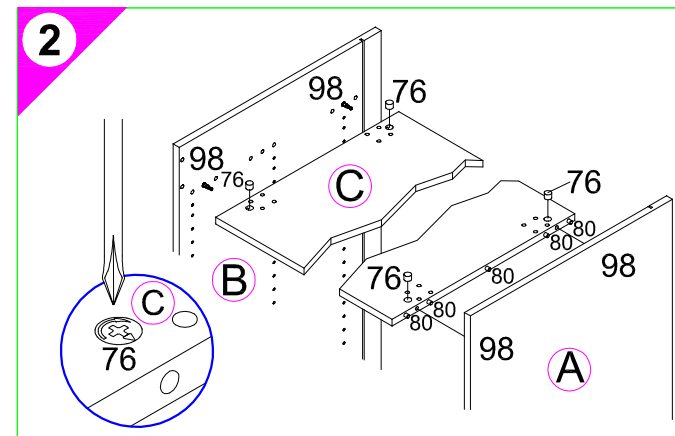
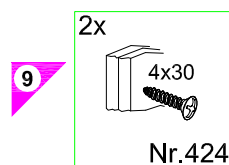
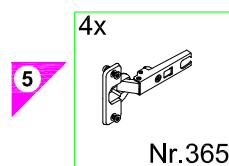
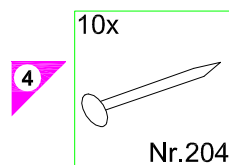
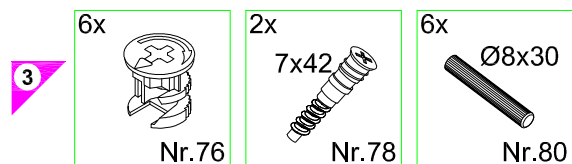
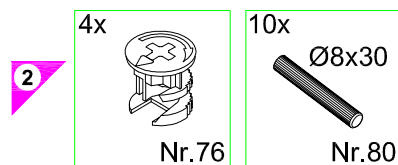


# Montageanleitung




Service-Hotline  
01805-678101  
0,14€ pro Minute  
++49 für Österreich  
Auslandstarif pro Minute  
service@optifit.de  
voor Nederland en België  
00800-40119350  
benelux@optifit.de

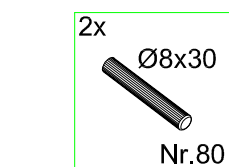

1 → 2 → 3 ...

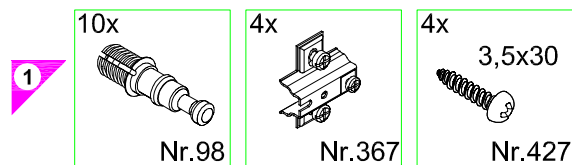

**6** Holzunterlage verwenden!  
Use a wooden base!  
Utiliser un support en bois!  
Houten onderlegger gebruiken!  
¡Utilizar bases de madera!  
Utilizzare una base di legno!  
Применять деревянную подложку!  
Używać podkładkę z drewna!  
Alkalmazzon fa alátétet!  
Použijte dřevěný podklad!  
Uporabite leseno podlago!  
Käytä puualustaa!  
Använd ett träunderlag!

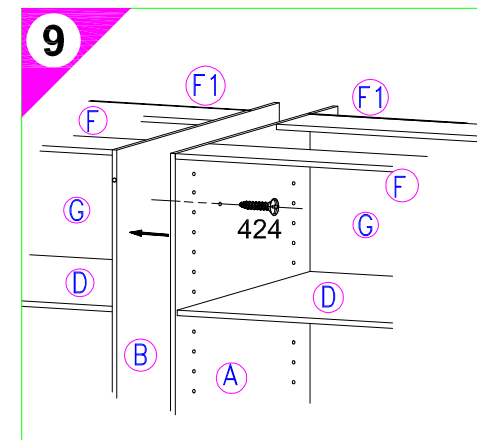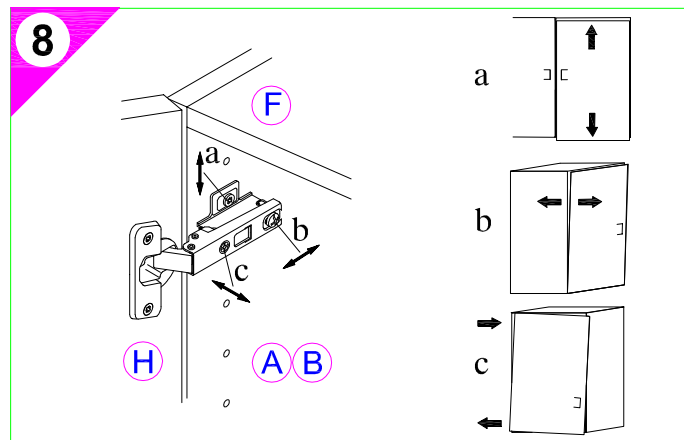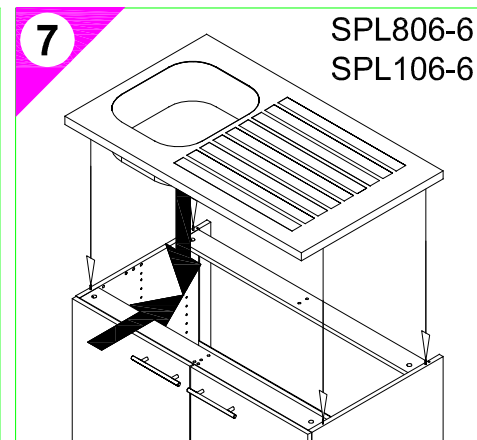

Ersatzteile/Spare parts/pièces de rechange/Reserveonderdelen/Piezas de recambio/Ricambi/Запасные части/Części zamienne/pótalkatrészek/Náhradní části/Nadomestni deli/varaosat/reservdelar

80cm SPL806-6	(A) E961021	(B) E961022	(C) E951212	(E) E940099	(F) E942972	(F1) E952972	(G) E445118	(H) E980623	(L) E970972	(P) E448271	(Z) E446480
80cm SPLO806-6	(A) E961021	(B) E961022	(C) E951212	(E) E940099	(F) E942972	(F1) E952972	(G) E445118	(H) E940623	(L) E970972		
100cm SPL106-6	(A) E961021	(B) E961022	(C) E951211	(E) E940099	(F) E942971	(F1) E952971	(G) E445116	(H) E980622	(L) E970971	(P) E446451	(Z) E446480
100cm SPLO106-6	(A) E961021	(B) E961022	(C) E951211	(E) E940099	(F) E942971	(F1) E952971	(G) E445116	(H) E980622	(L) E970971		