

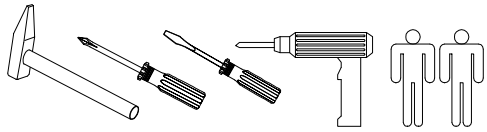

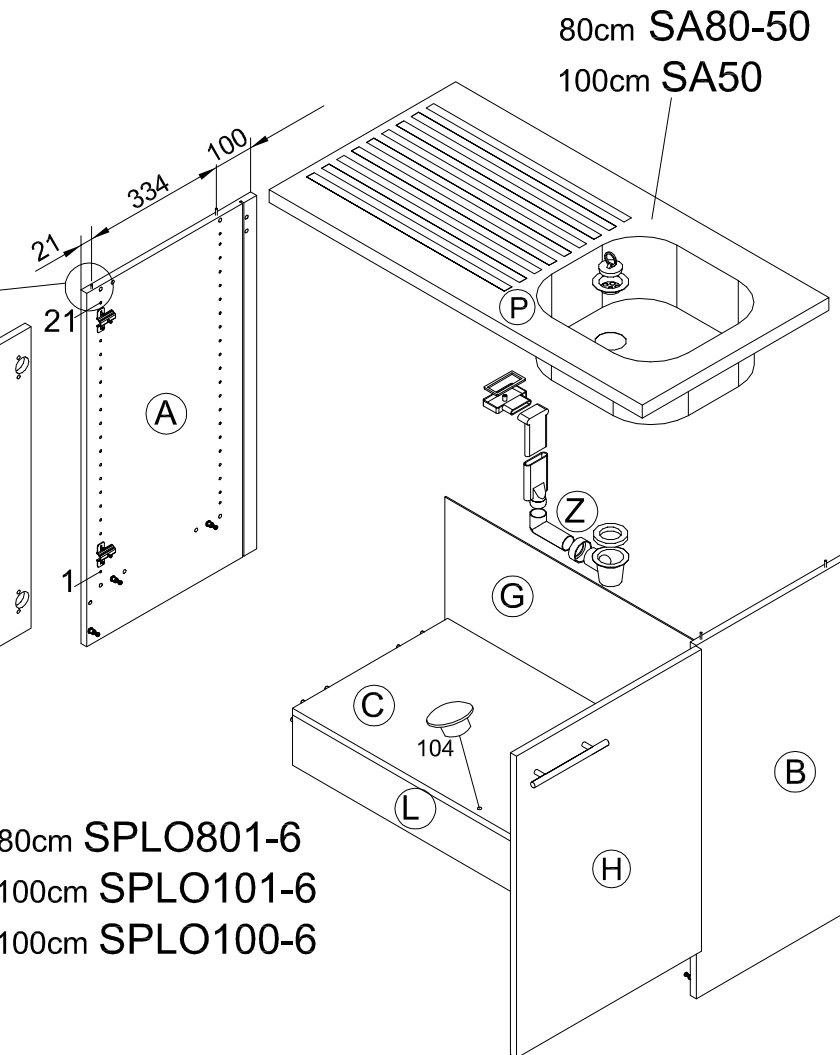


Montageanleitung

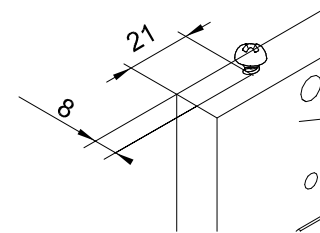



1 → 2 → 3 ...

1 6x Nr.98	4x Nr.367
4x SPL800-6 SPL100-6 3.5x30 Nr.427	1x Ø8/Ø13 Nr.104
6x Nr.76	10x 8x30 Nr.80
4x Nr.365	10x Nr.204



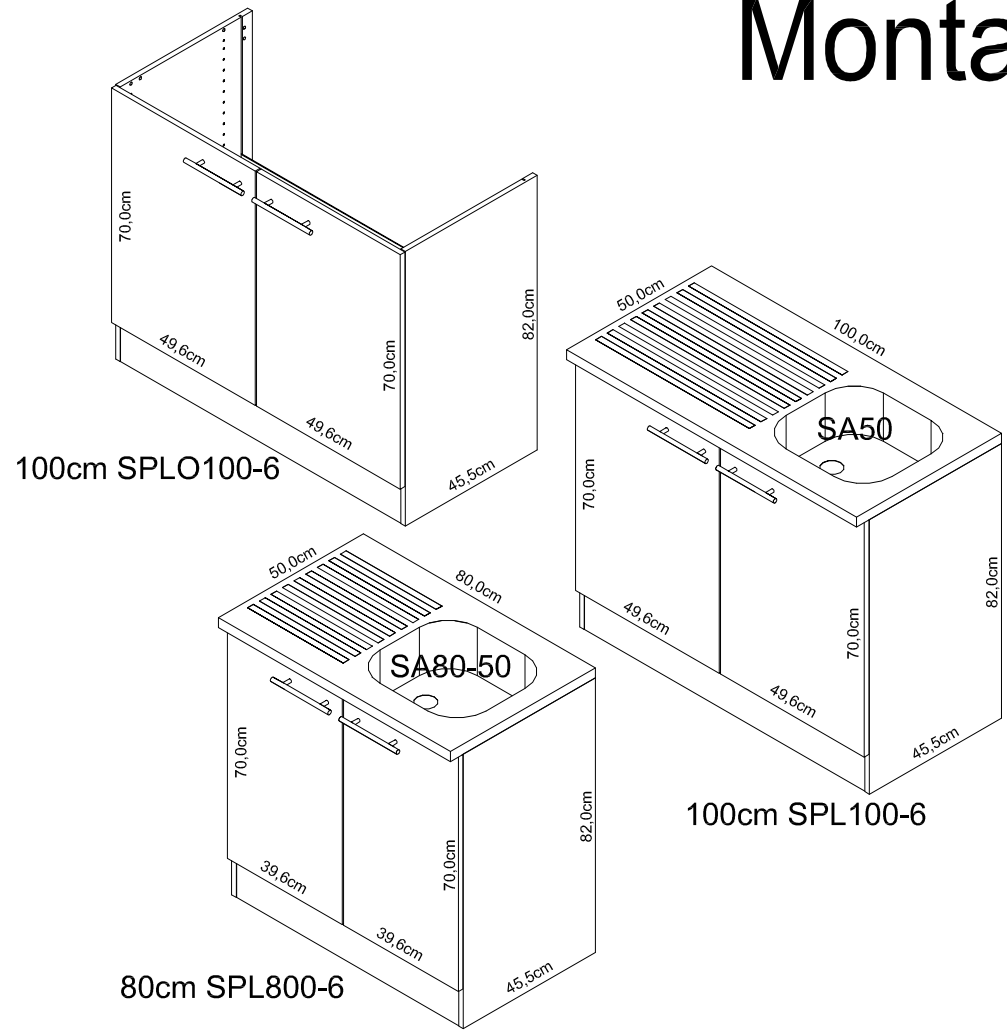


Service-Hotline
01805-678101
0,14€ pro Minute
++49 für Österreich
Auslandstarif pro Minute
service@optifit.de
voor Nederland en België
00800-40119350
benelux@optifit.de

80cm SPLO801-6
100cm SPLO101-6
100cm SPLO100-6

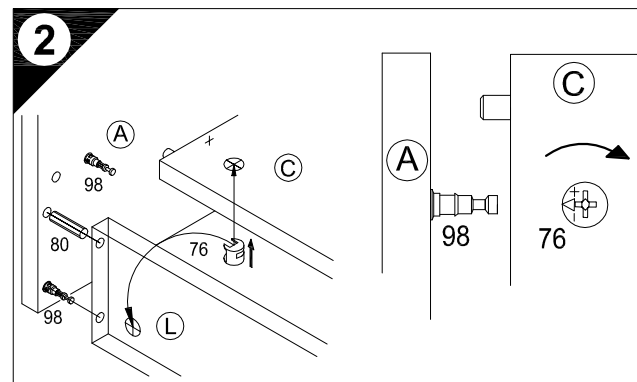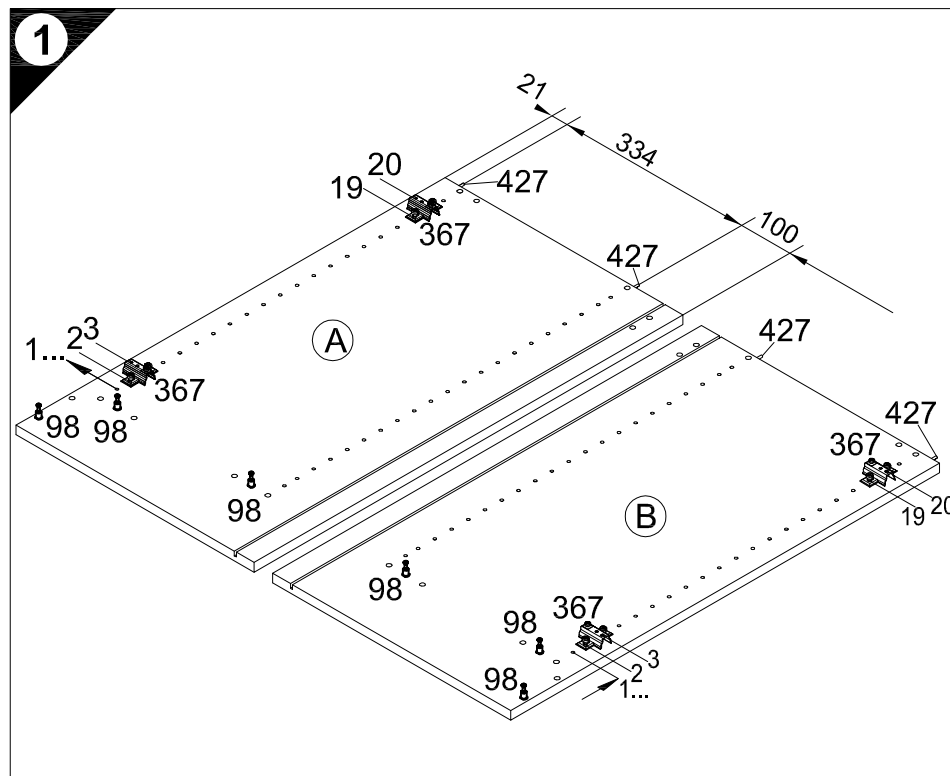

3 Holzunterlage verwenden!
Use a wooden base!
Utiliser un support en bois!
Houten onderlegger gebruiken!
¡Utilizar bases de madera!
Utilizzare una base di legno!
Применять деревянную подложку!
Używać podkładkę z drewna!
Alkalmazzon fa alátétet!
Použijte dřevěný podklad!
Uporabite leseno podlago!
Käytä puualustaa!
Använd ett träunderlag!

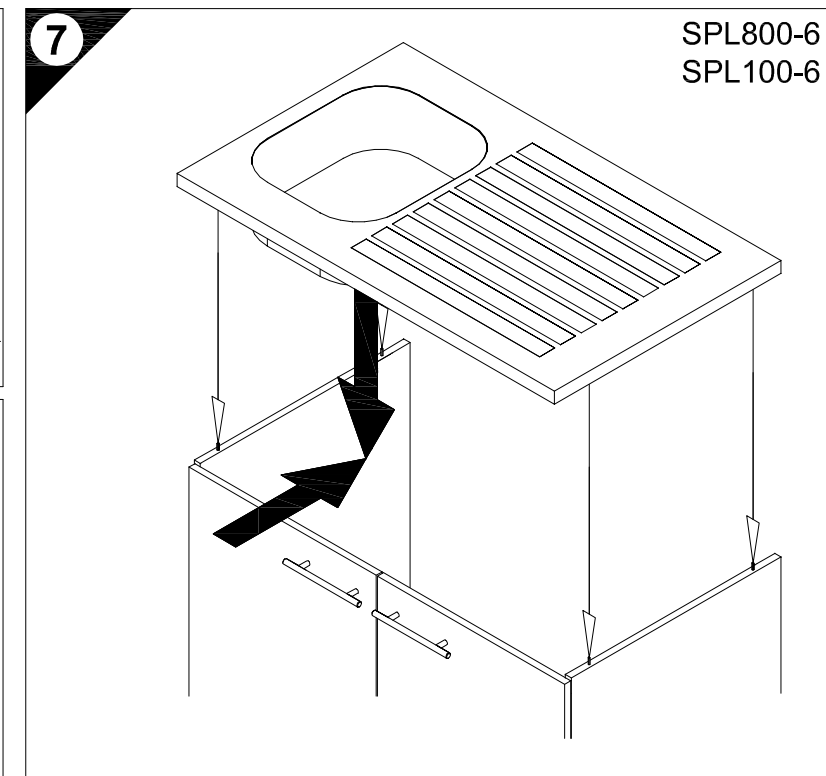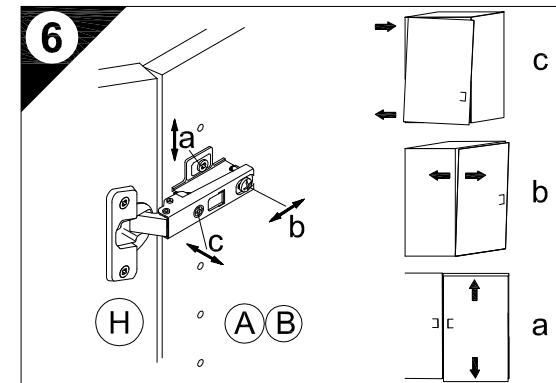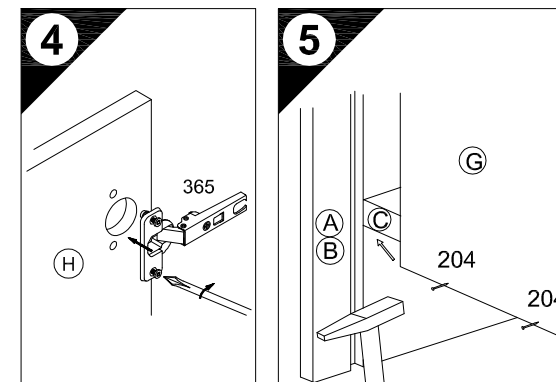

Ersatzteile/Spare parts/pièces de rechange/Reserveonderdelen/Piezas de recambio/Ricambi/Запасные части/Części zamienn/pótalkatrészek/Náhradní části/Nadomestni deli/varaosat/reservdelar

SPL800-6	(A) E962025	(B) E962026	(C) E962222	(G) E445118	(H) E980623	(L) E970972	(P) E448270	(Z) E446480
SPL100-6	(A) E962025	(B) E962026	(C) E962221	(G) E445116	(H) E980622	(L) E970971	(P) E446450	(Z) E446480
SPLO100-6	(A) E962025	(B) E962026	(C) E962221	(G) E445116	(H) E980622	(L) E970971		