

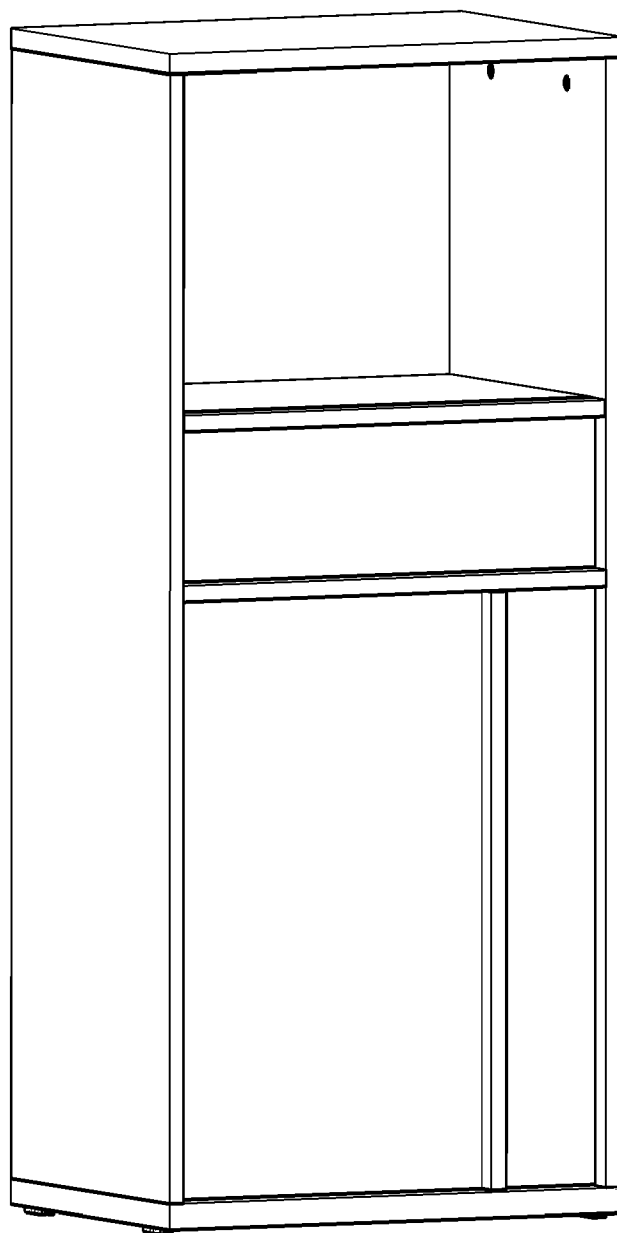



















PHILOSOPHY PH-06

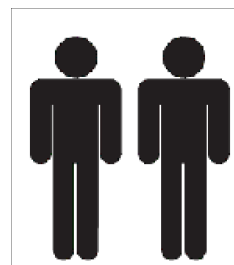

Company: "DIG-NET" LENART Sp. j
63-611 Mroczeń 65a
e-mail: dignet@home.pl



Potrzebne narzędzia / Benötigttes Werkzeug / Required tools / Potřebné nástroje / Potrebne nástroje / Необходимые инструменты

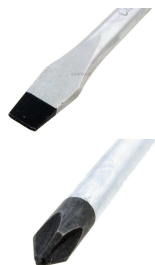

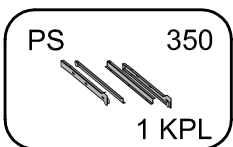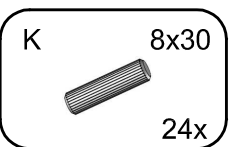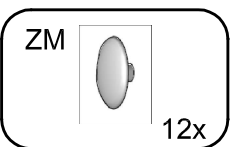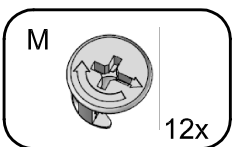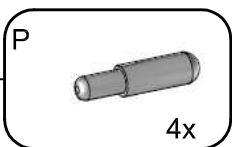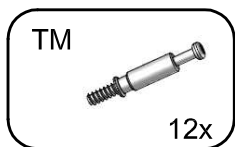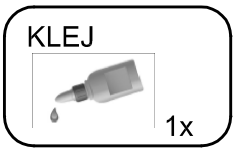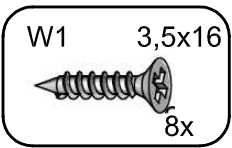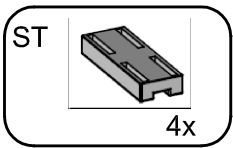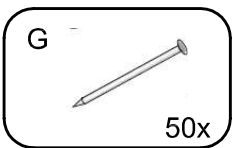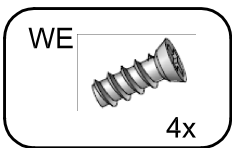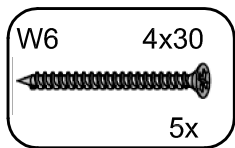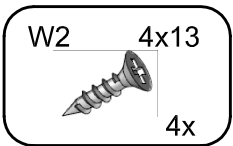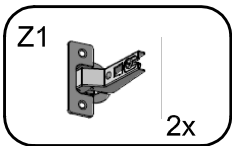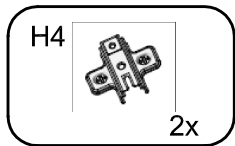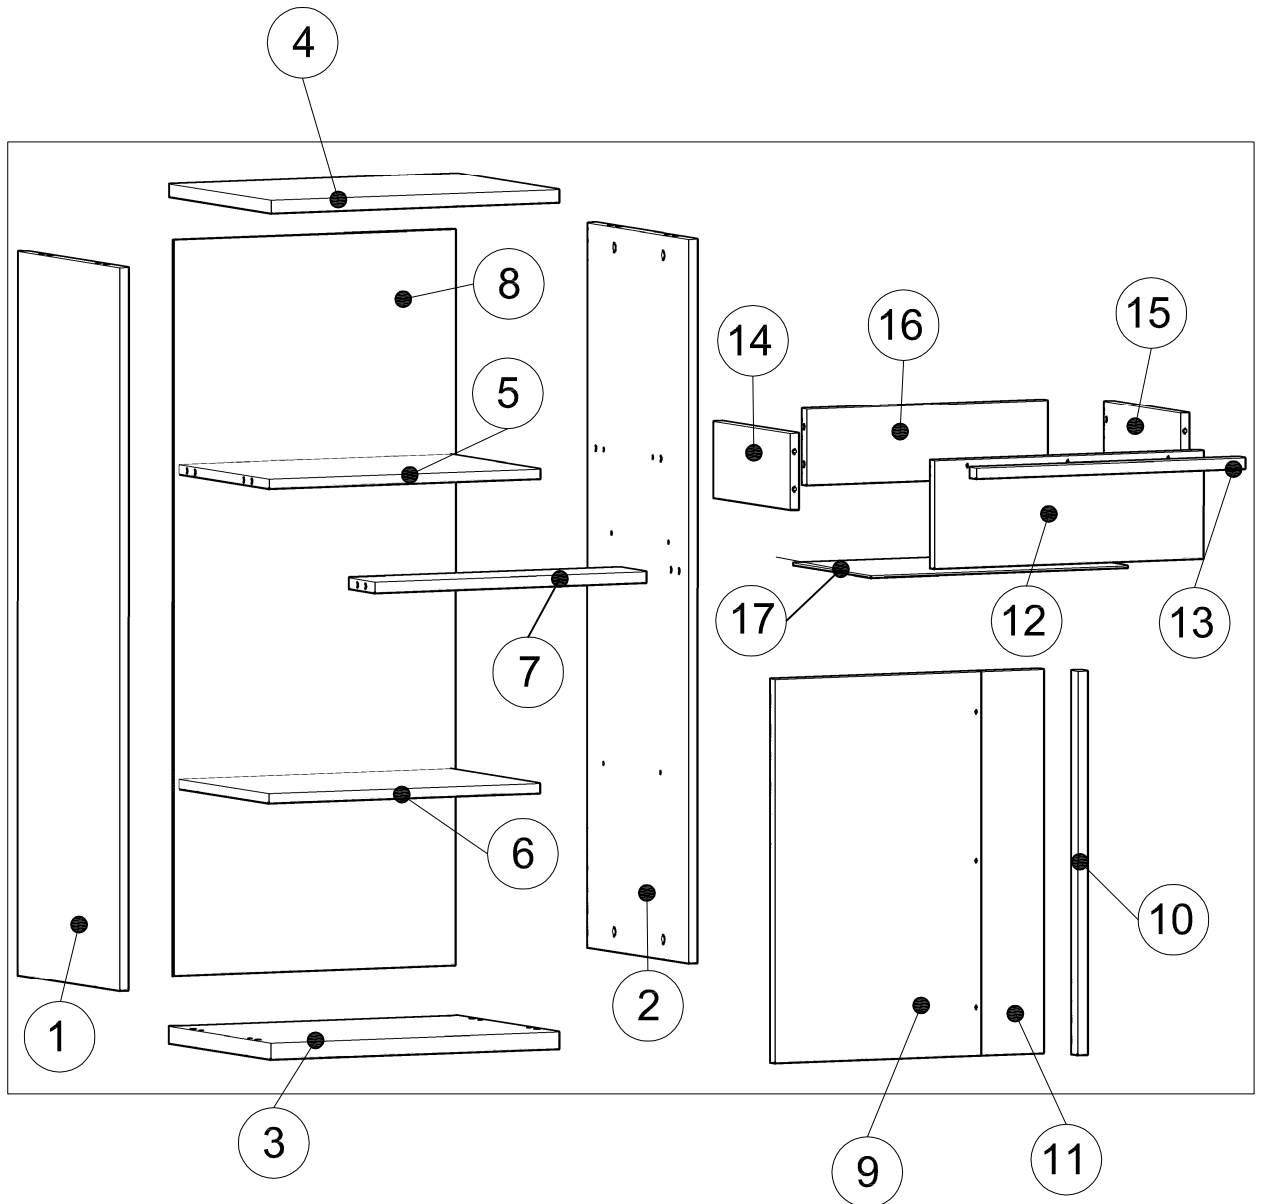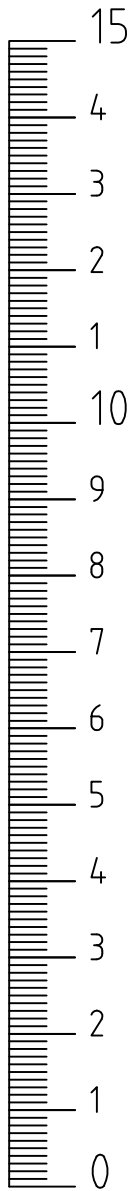


Proszę sprawdzić kompletność okuć przed montażem
 Bitte überprüfen Sie die Vollständigkeit der Fittings vor der Montage
 Please check the completeness of the fittings before assembly

Prosím zkontrolujte úplnost konektorů před instalací
 Prosím skontrolujte úplnosť konektorov pred inštaláciou
 Пожалуйста, проверьте комплектность фурнитуры перед установкой

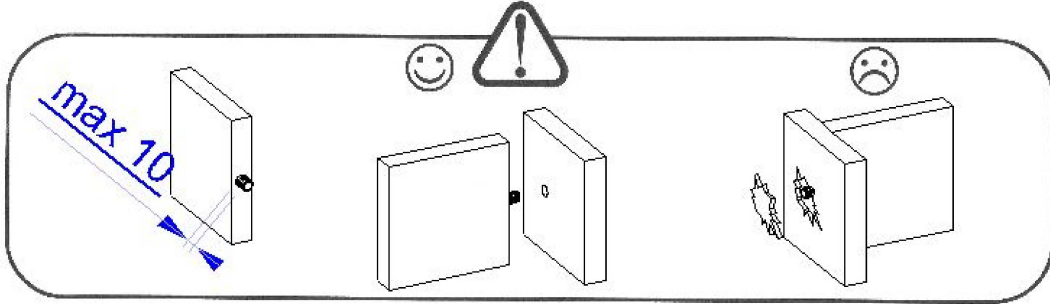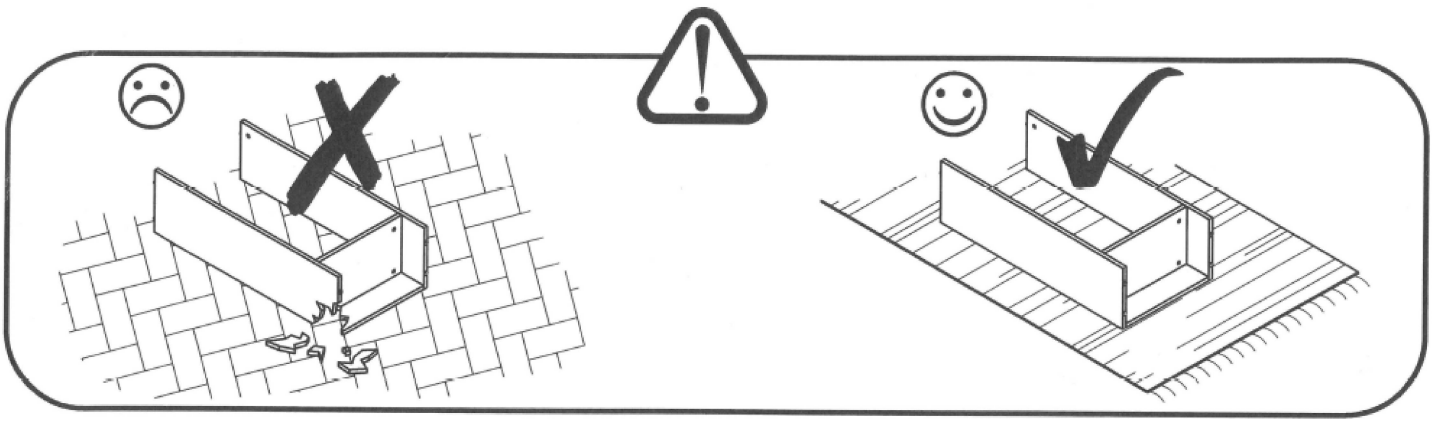

1

ST



4x

W1

3,5x16







4x










TM







8x

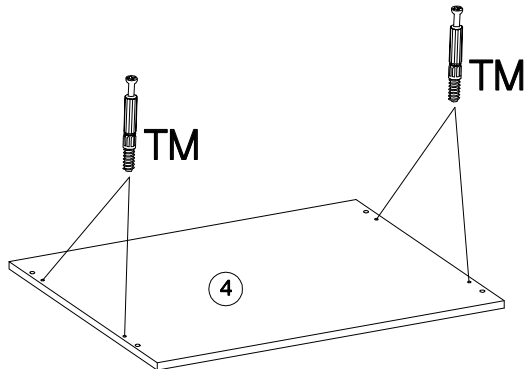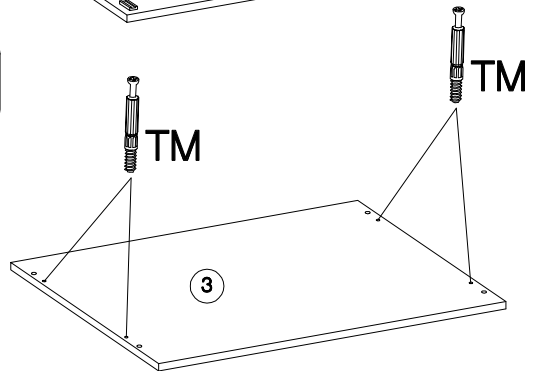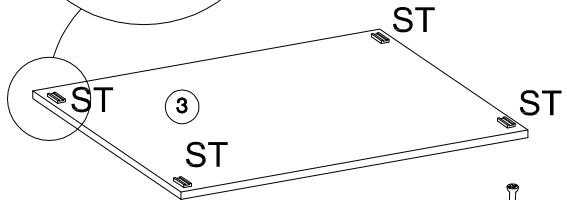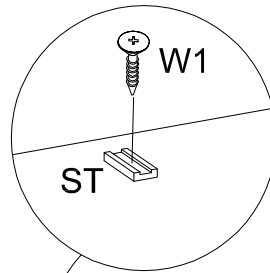








2

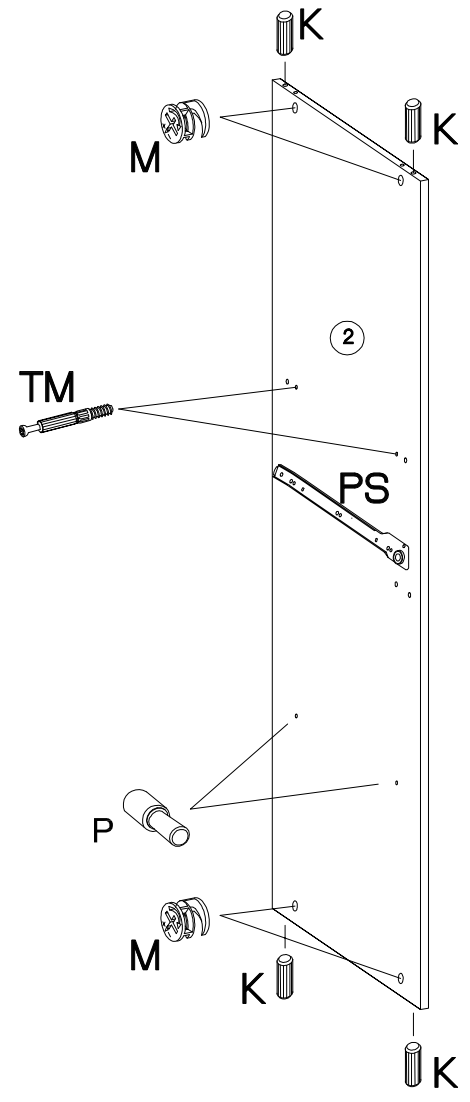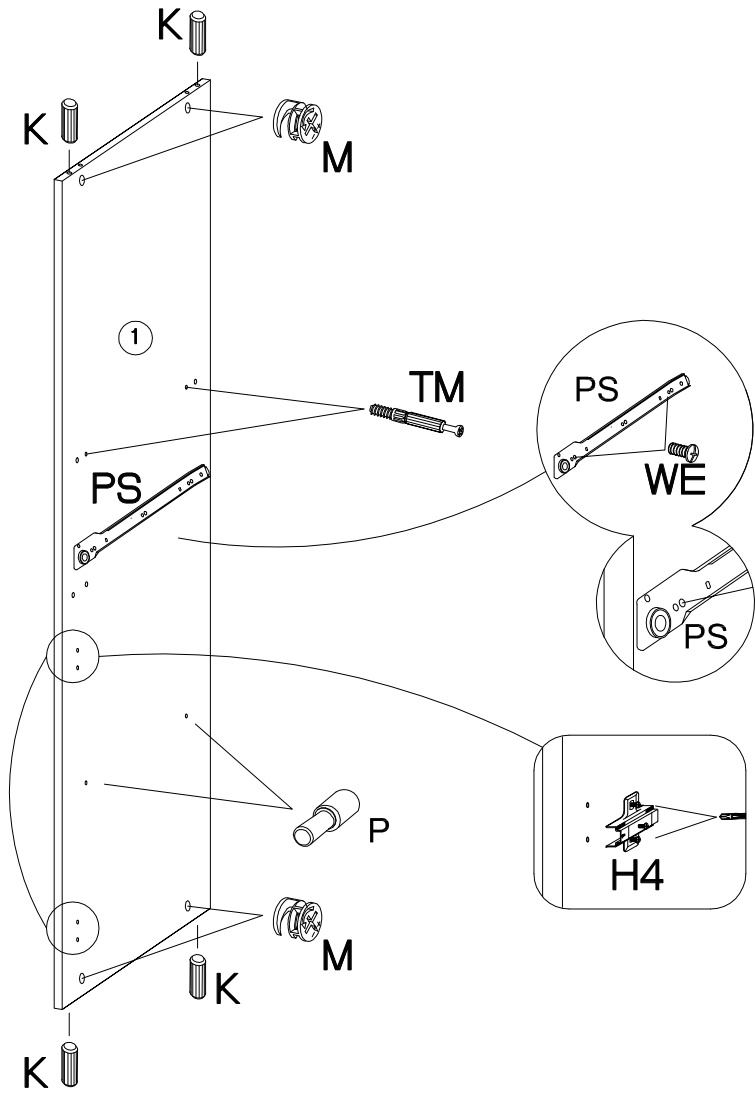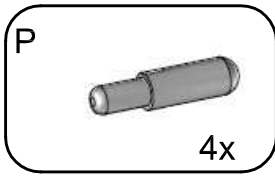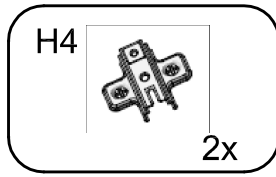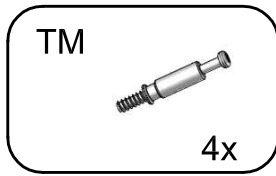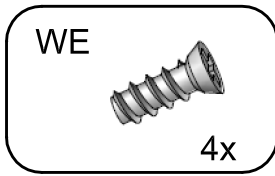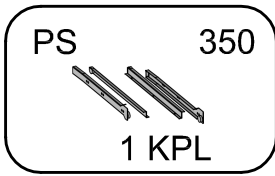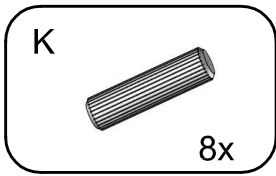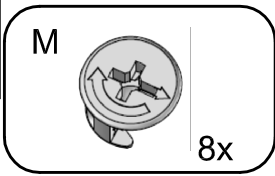


3

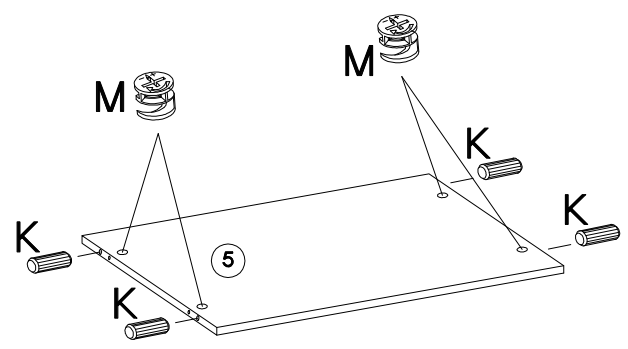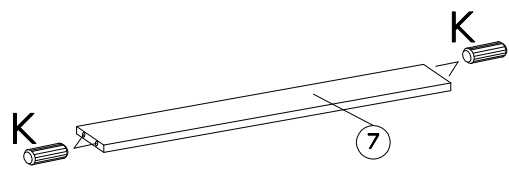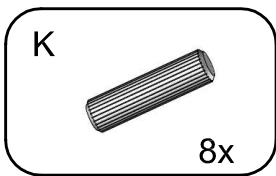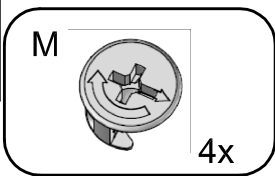







4

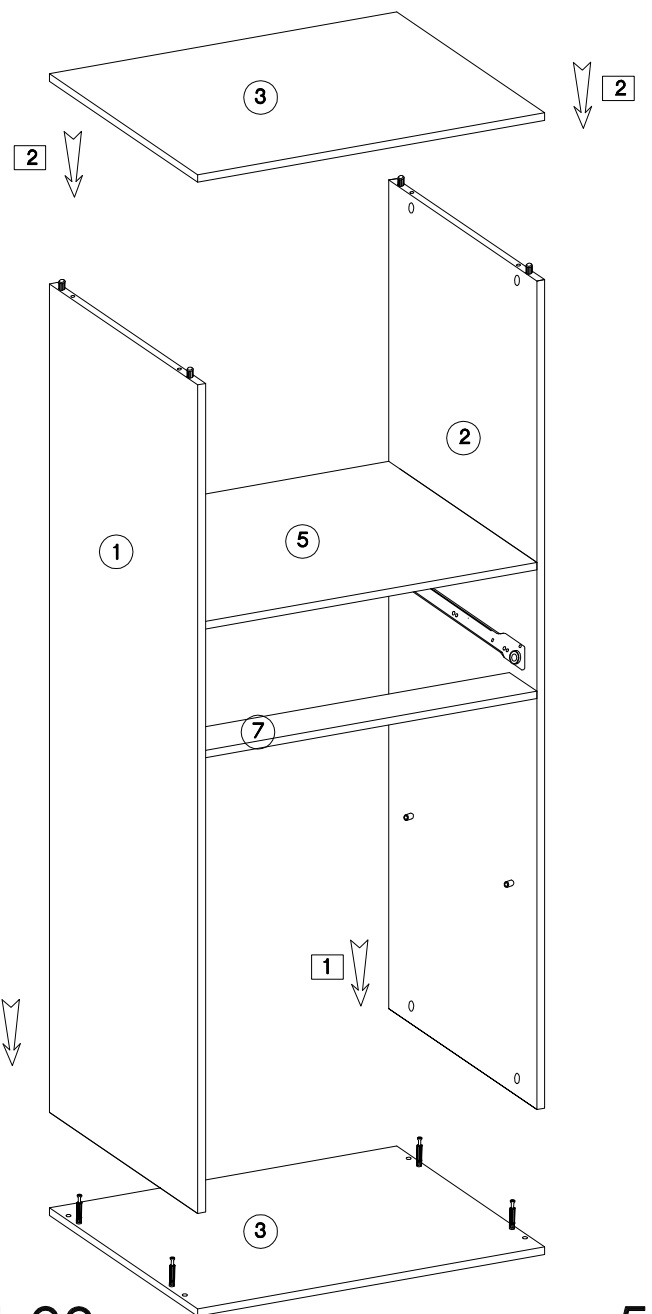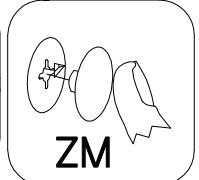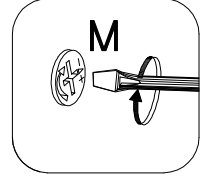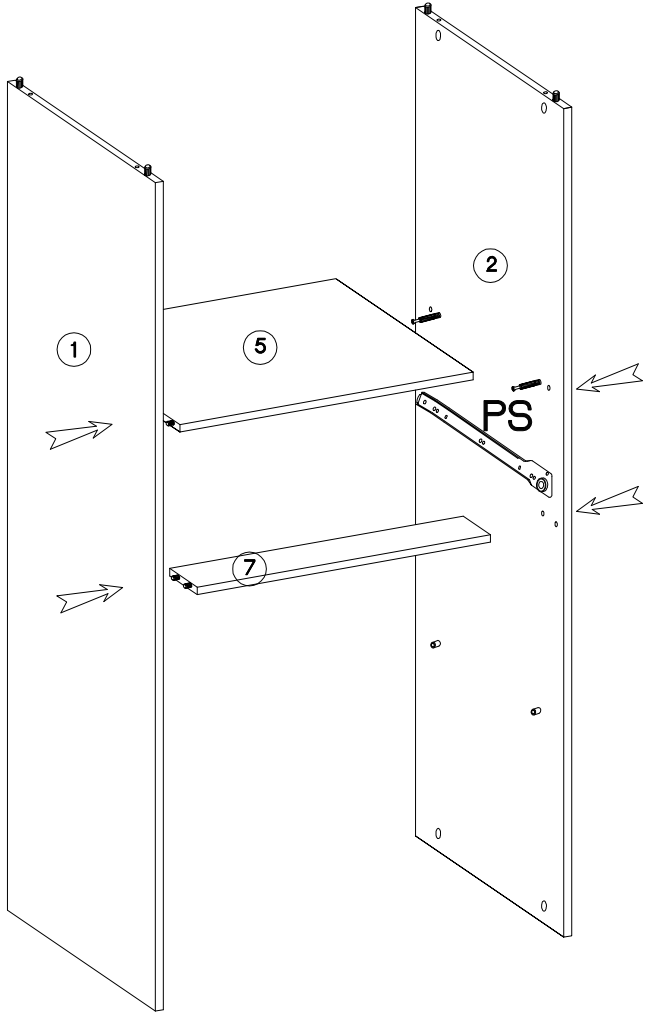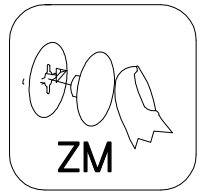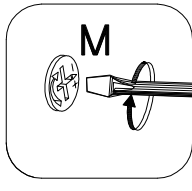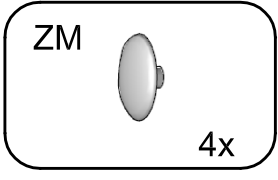


5

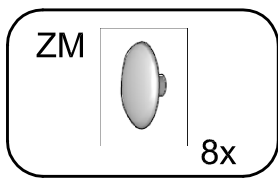

6

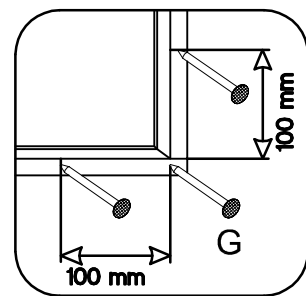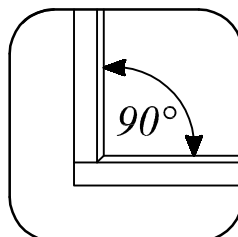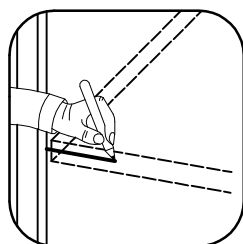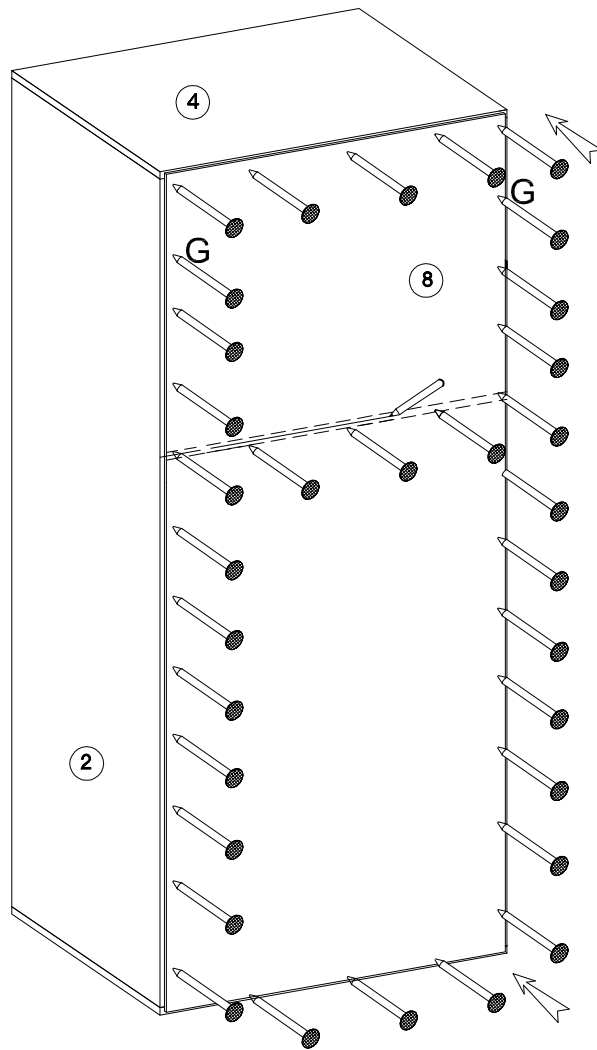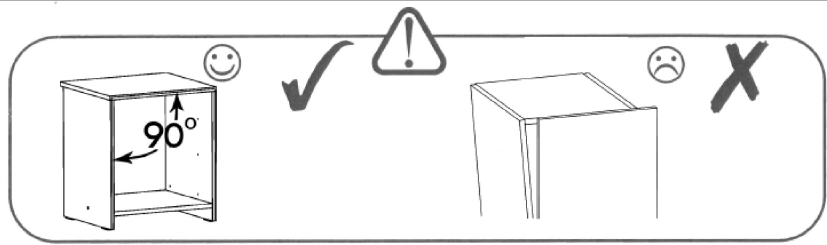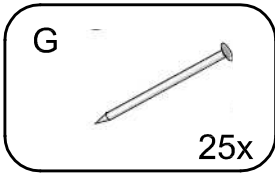

7

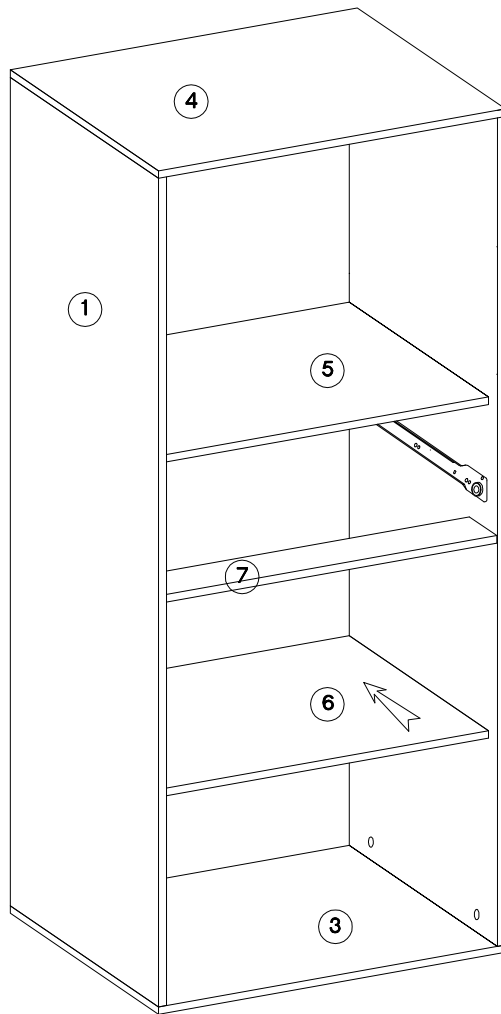

8

K



8x

W6

4x30




3x

KLEJ



1x

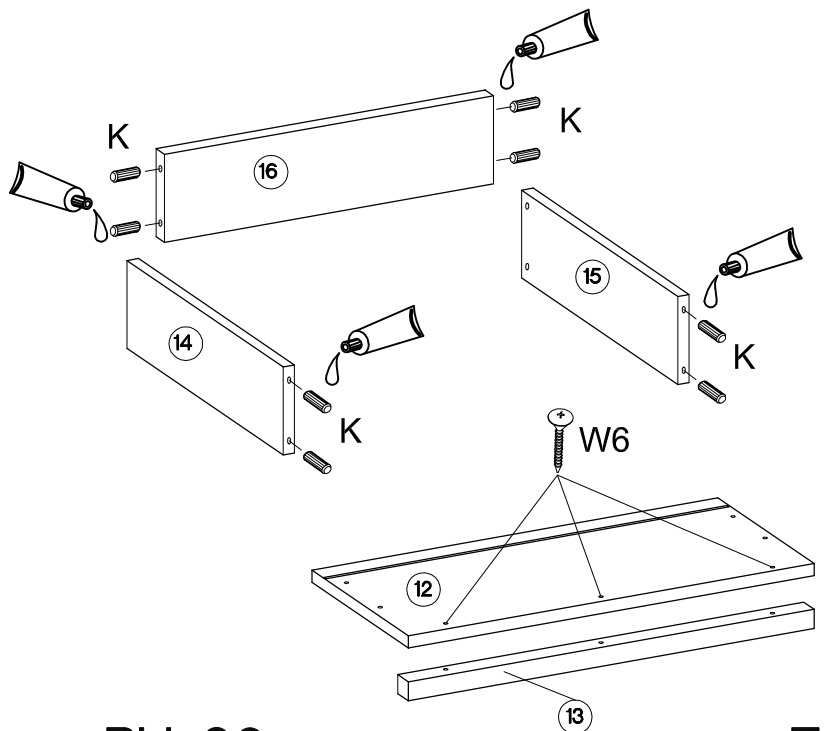

PH-06


7/10

9

KLEJ



1x


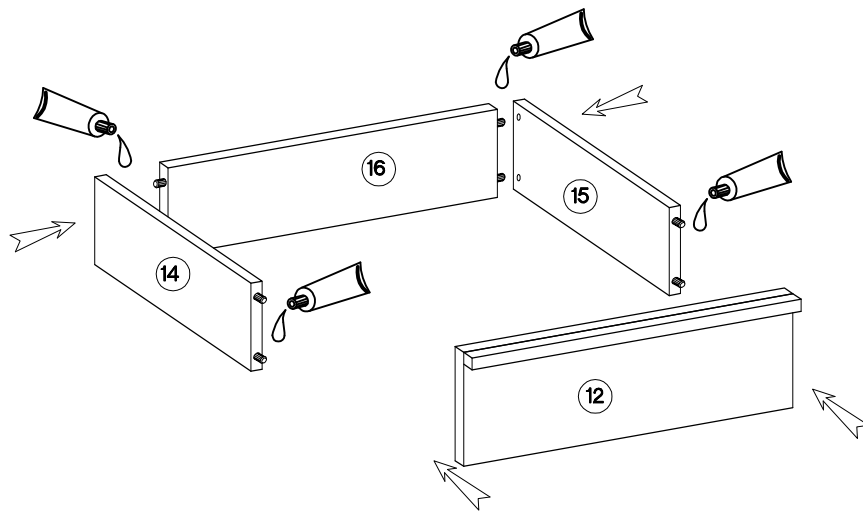


10

G




30x

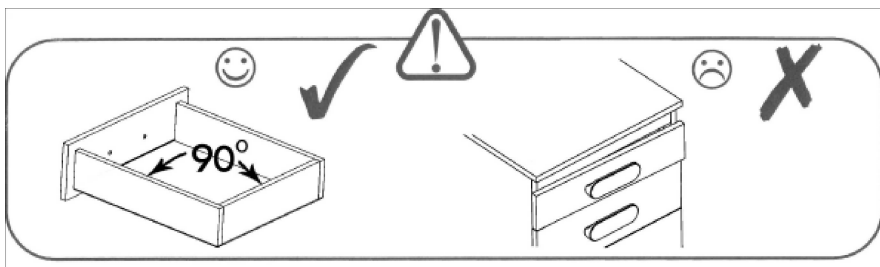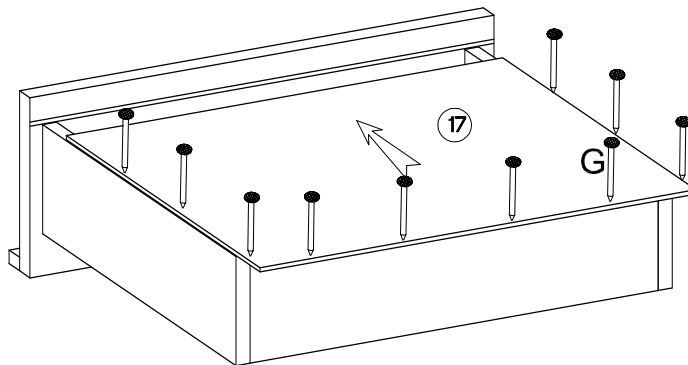

11

PS

350






1 KPL

W1





3,5x16



4x

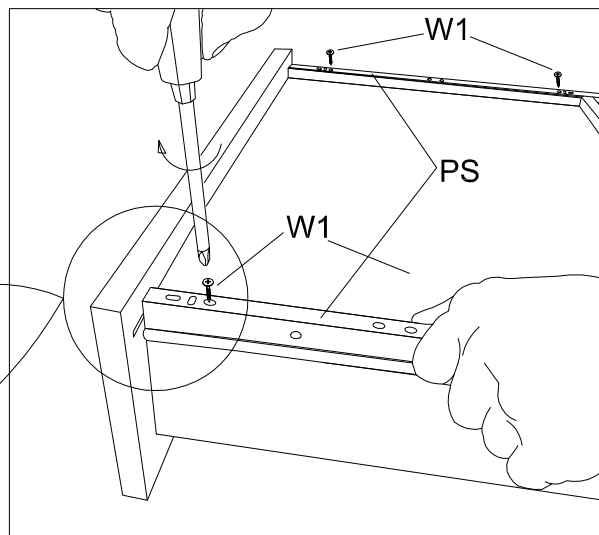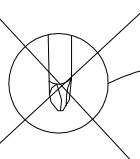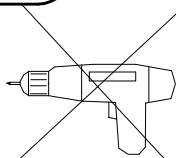

12

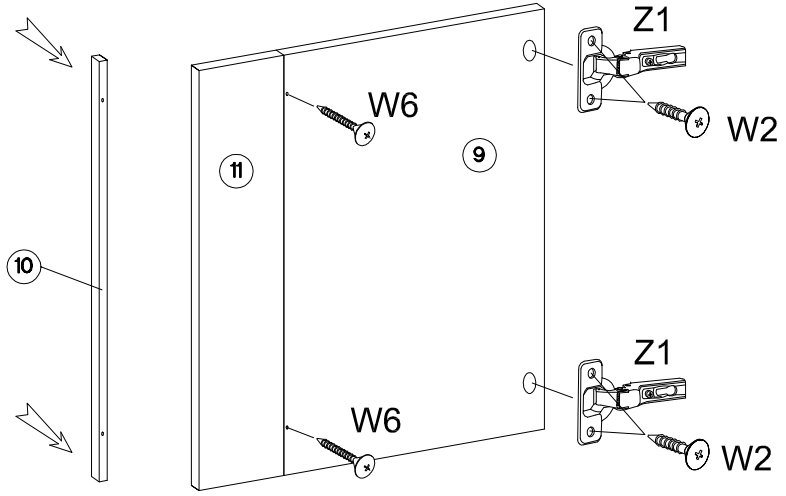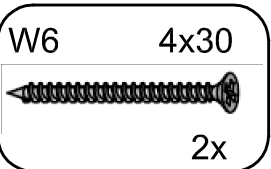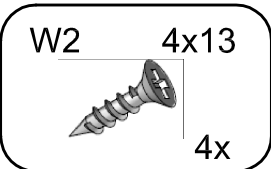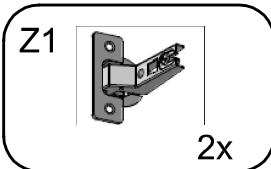

13

