



SAV
SPAREPARTS
KUNDEDIENST
POST VENTAS
SERVICE NA VERKOOP
SERVIZIO POST-VENDITA
SERVICO DEPOIS DE VENDA
SERWIS POGWARANCYJNY

1888 1

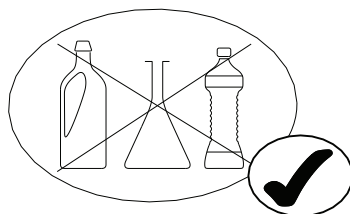


(FR) MEUBLES A FIXER AU MUR:
- FIXER LE MEUBLE AU MUR AVEC LES ATTACHES PREVUES A CET EFFET
- VERIFIER QUE LES VIS ET LES CHEVILLES UTILISEES SONT ADAPTEES AU SUPPORT

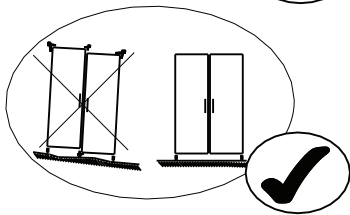

(ES) MUEBLES A FIJAR EN LA PARED:
- FIJAR EL MUEBLE EN LA PARED CON LAS GRAPAS PREVISTAS
- COMPROBAR QUE LOS TORNILLOS Y LAS CLAVIJAS UTILIZADAS SON ADAPTADAS AL SOPORTE


(PT) MOVEIS A FIXAR NA PAREDE:
- FIXAR O MOVEL NA PAREDE COM OS PRENDES PREVISTOS
- VERIFICAR QUE OS PARAFUSOS E AS CAVILHAS UTILIZADOS SAO ADAPTADOS AO SUPORTE

(EN) FURNITURES TO BE HOLD ON THE WALL:
- HOLD THE FURNITURE ON THE WALL WITH THE FASTENINGS PROVIDED FOR THIS PURPOSE
- CHECK THAT THE SCREW AND PEGS FIT WITH THE SUPPORT

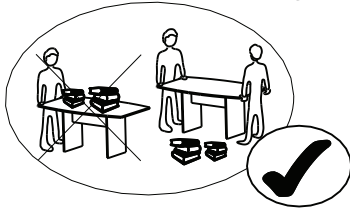



(IT) MOBILI DA FISSARE AL MURO:
- FISSARE IL MOBILE AL MURO CON LE FLANGIE PREVISTE A TALE SCOPO
- VERIFICARE CHE LE VITI ED I PERNI USATI SIANO ADATTI A QUEL TIPO DI SUPPORTO

(PL) MEBL PRZEZNACZONY DO ZAINSTALOWANIA NA SCIANIE:
- NALEŻY ZAMONTOWAC TEN MEBL NA SCIANIE PRZEZNACZONYMI DO TEGO CELU UCHWYTAMI
- NALEŻY SPRAWDZIĆ CZY ŚRUBY I KOSZULKI SĄ ODPOWIEDNIEJ WIELKOŚCI W STOSUNKU DO UCHWYTÓW

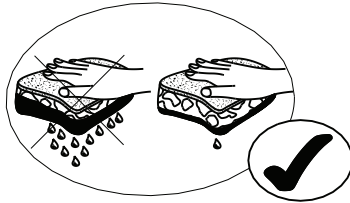


(DE) MOEBEL AN DER MAUER ZU BEFESTIGEN:
- BEFESTIGEN SIE DAS MOEBELSTUECK MIT DEN DAFUER VORGESEHENEN BEFESTIGUNGSHAKEN
- UEBERPRUEFEN SIE BITTE DASS DIE SCHRAUBEN UND DUEBEL MIT DEM MATERIAL DER MAUER UEBEREINSTIMMEN

(NL) MEUBELS DIE AAN DE MUUR GEFIXEERD MOETEN WORDEN:
- FIXEER HET MEUBEL AAN DE MUUR MET DE DAARVOOR BESTEMDE HAKEN
- VERFIEER OF DE GEBRUIKTE SCHROEVEN BIJ DE BEVESTIGINGSHAAK HOEKEN

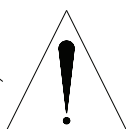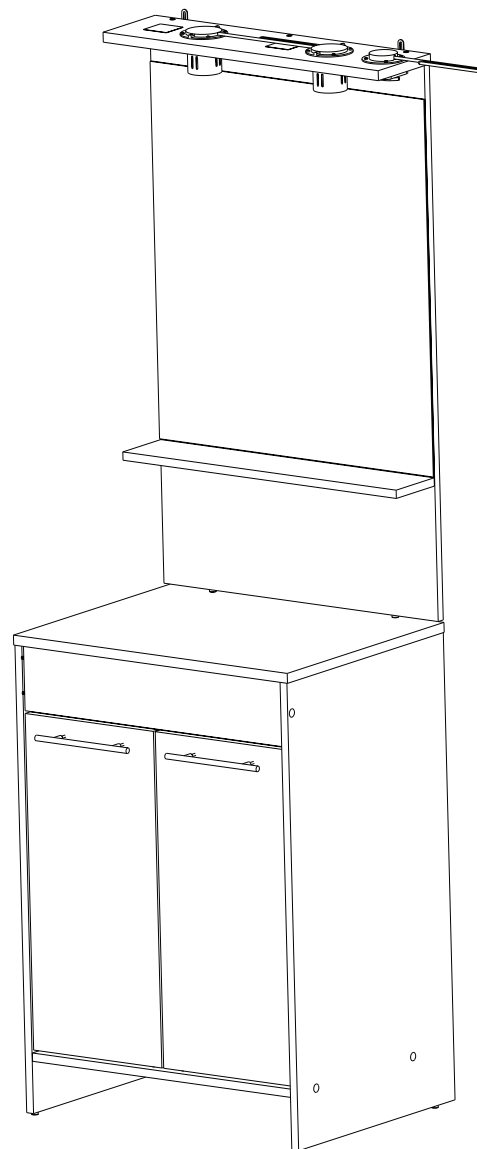

2H 00MN

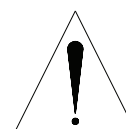

(FR) SECURITE
RESPECTER LES INSTRUCTIONS DE MONTAGE DECRIES DANS LA NOTICE.

(EN) CAUTION
FOLLOW CAREFULLY THE ASSEMBLING INSTRUCTIONS DESCRIBED IN THE DIRECTIONS.

(DE) SICHERHEITSVORSCHRIFTEN
BEACHTEN SIE BITTE UNBEDINGT DIE ANGEgebenEN AUFBAUVORSCHRIFTEN.


(ES) SEGURIDAD
RESPECTAR LAS INSTRUCCIONES DE MONTAJE DESCRIBIDAS EN EL FOLLETO.

(NL) VEILIGHEID
DE IN DE GEBRUIKSAANWIJZING BESCHREVEN INSTRUCTIES RESPECTEREN.















(IT) SICUREZZA
RISPETTARE LE ISTRUZIONI DI MONTAGGIO DESCRITTE NEEL'AVVERTENZA.







(PT) SEGURANCA
RESPEITAR AS INSTRUCOES DE MONTAGEM DESCRITAS NA INSTRUCCOES DE USO.

(PL) UWAGA
PROSZĘ PRZESTRZEGAC INSTRUKCJI MONTAŻU.




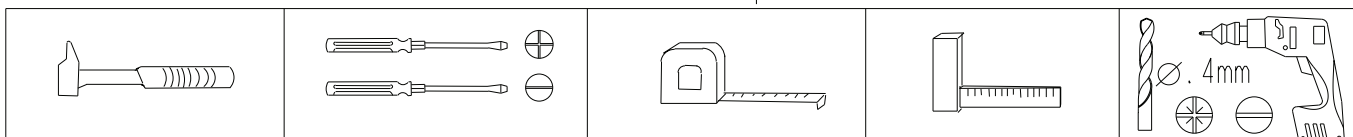


REP	DIM	QTE
1	846 x 465	1
2	846 x 465	1
3	600 x 466	1
4	566 x 389	1
5	566 x 325	1
6	609 x 281	2
7	1006 x 601	1
8	603 x 155	1
9	599 x 113	1
10	566 x 117	1
11	565 x 348	1
12	683 x 600	1

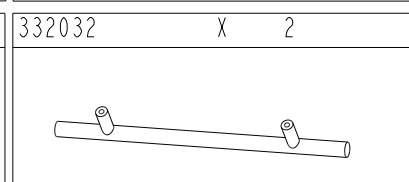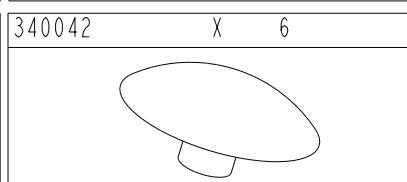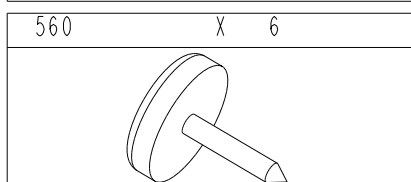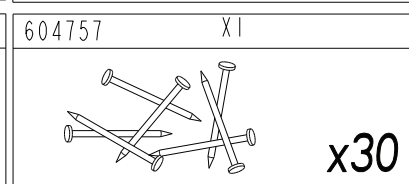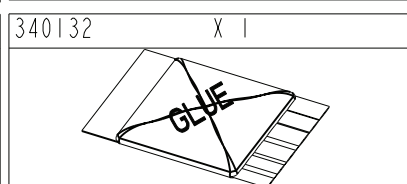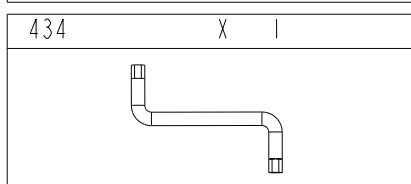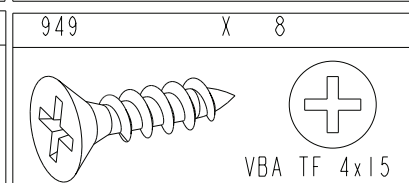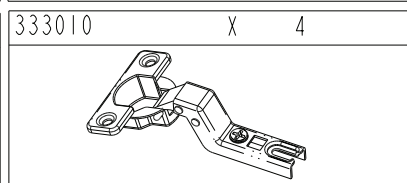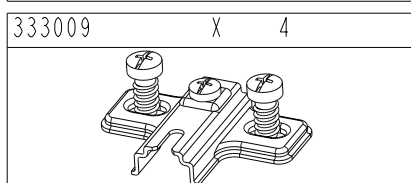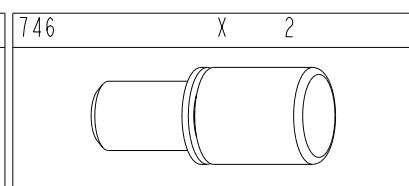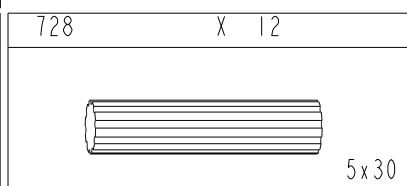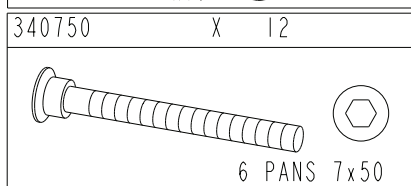
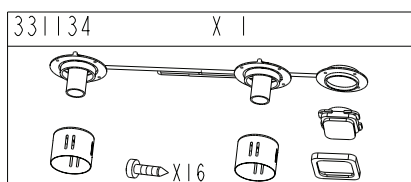
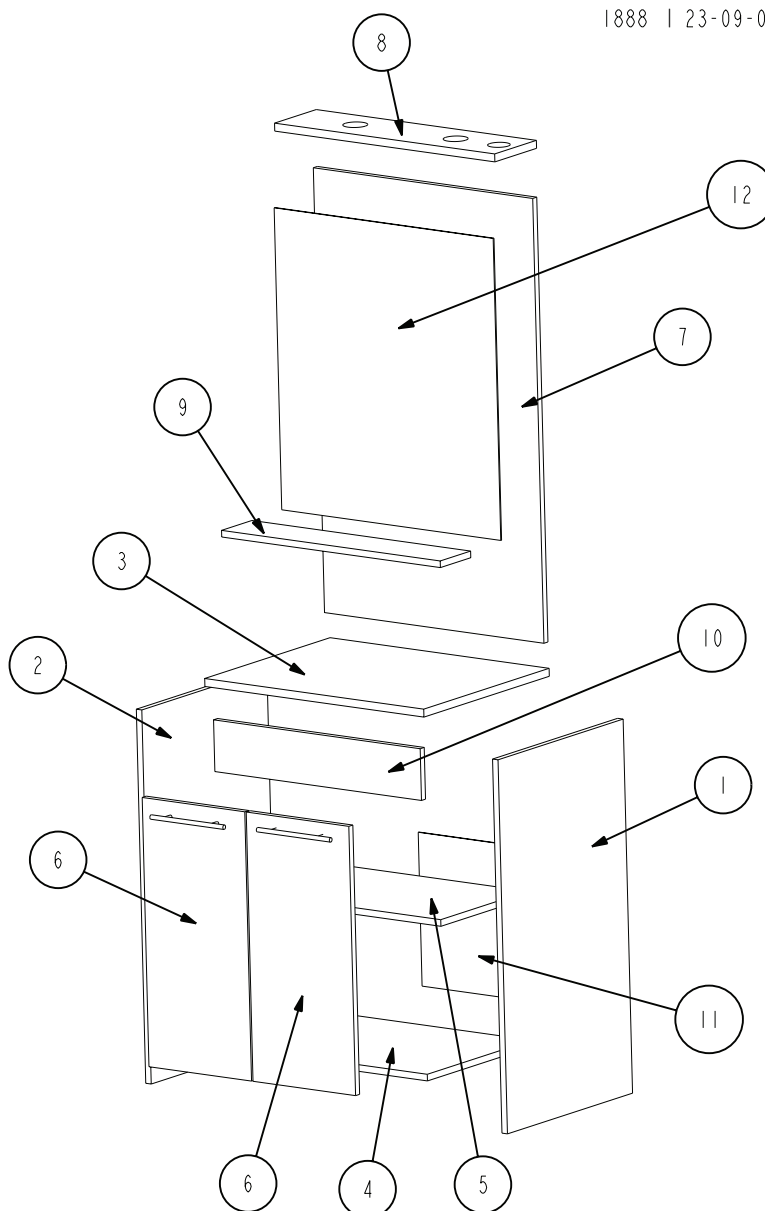


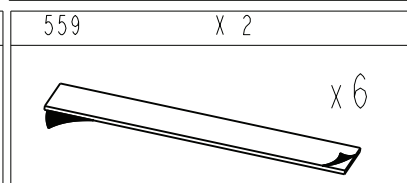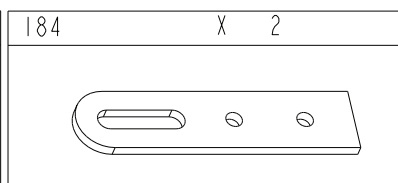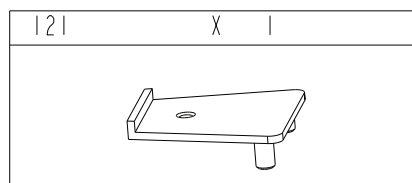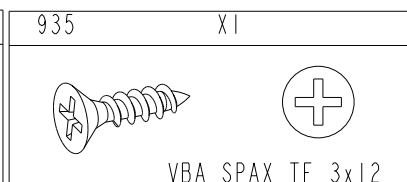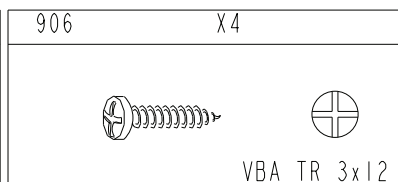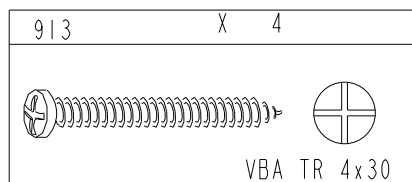

1

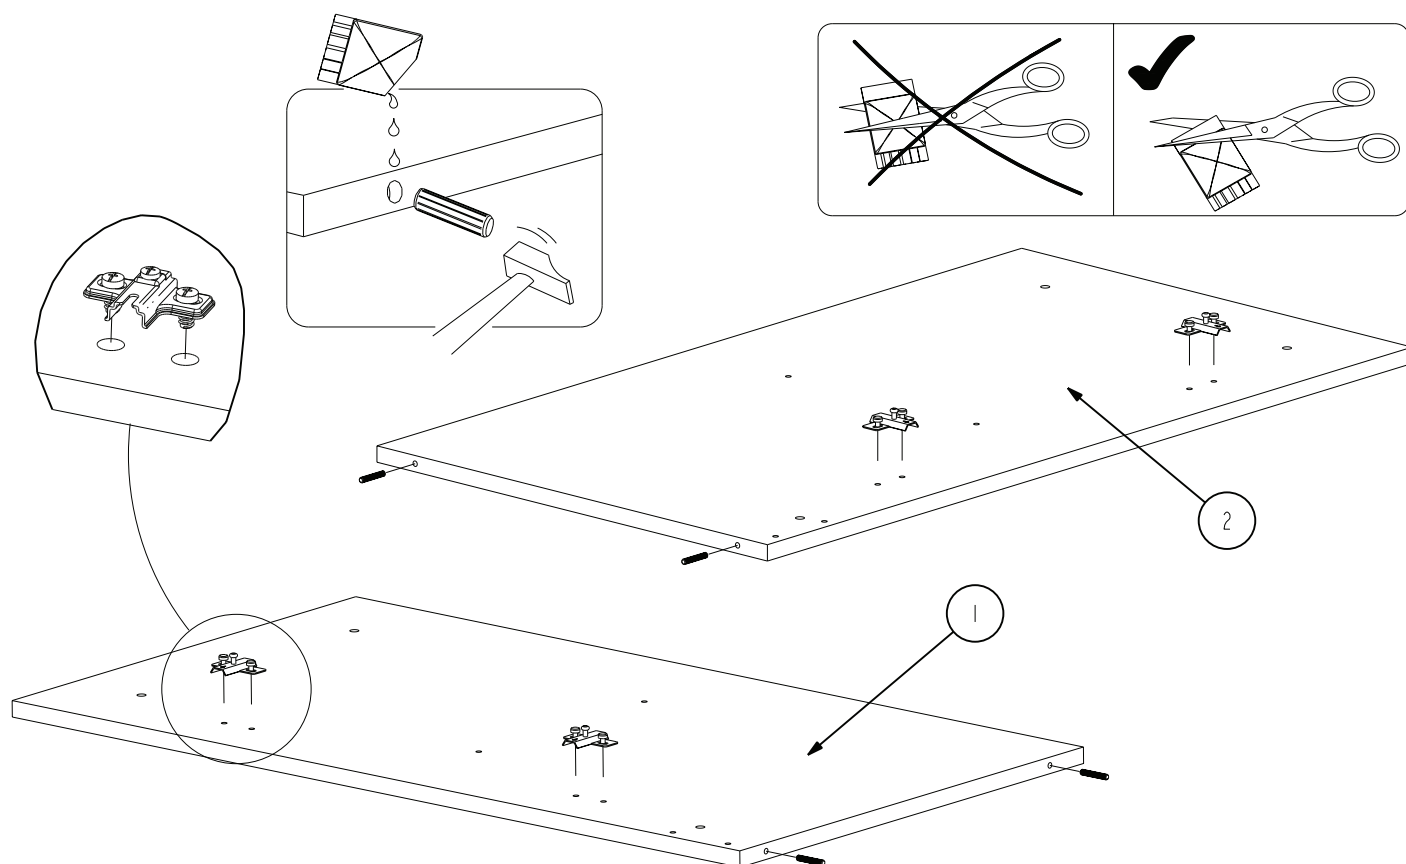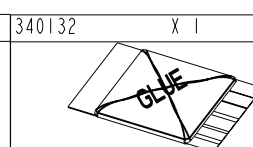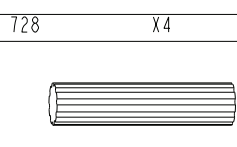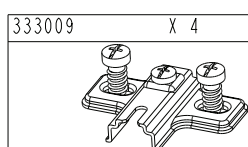

2

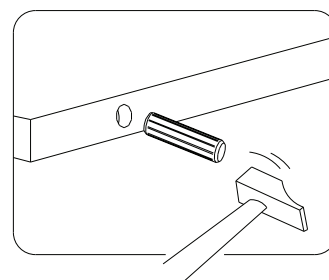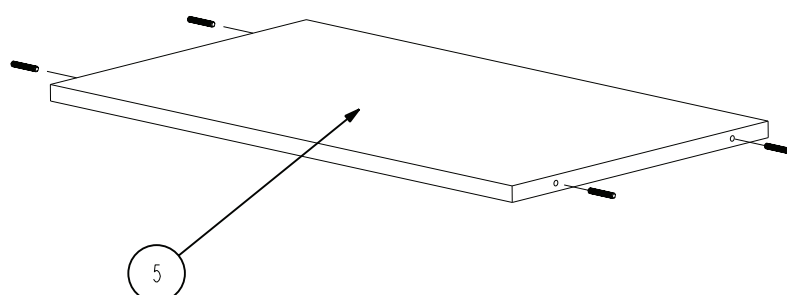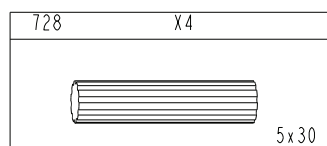

728	X 4	935	X 1	121	X 1
 5x30		 VBA SPAX TF 3x12			


340750	X 6	434	X I
 6 PANS 7x50			



5

560

X 4






604757

X1




x30

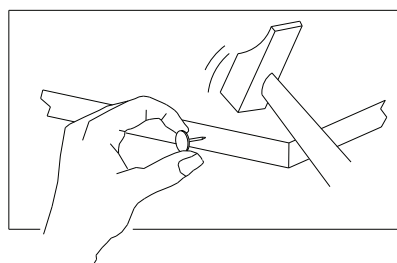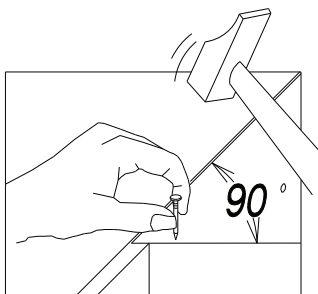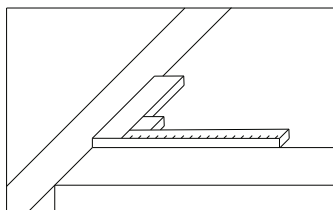

390



30

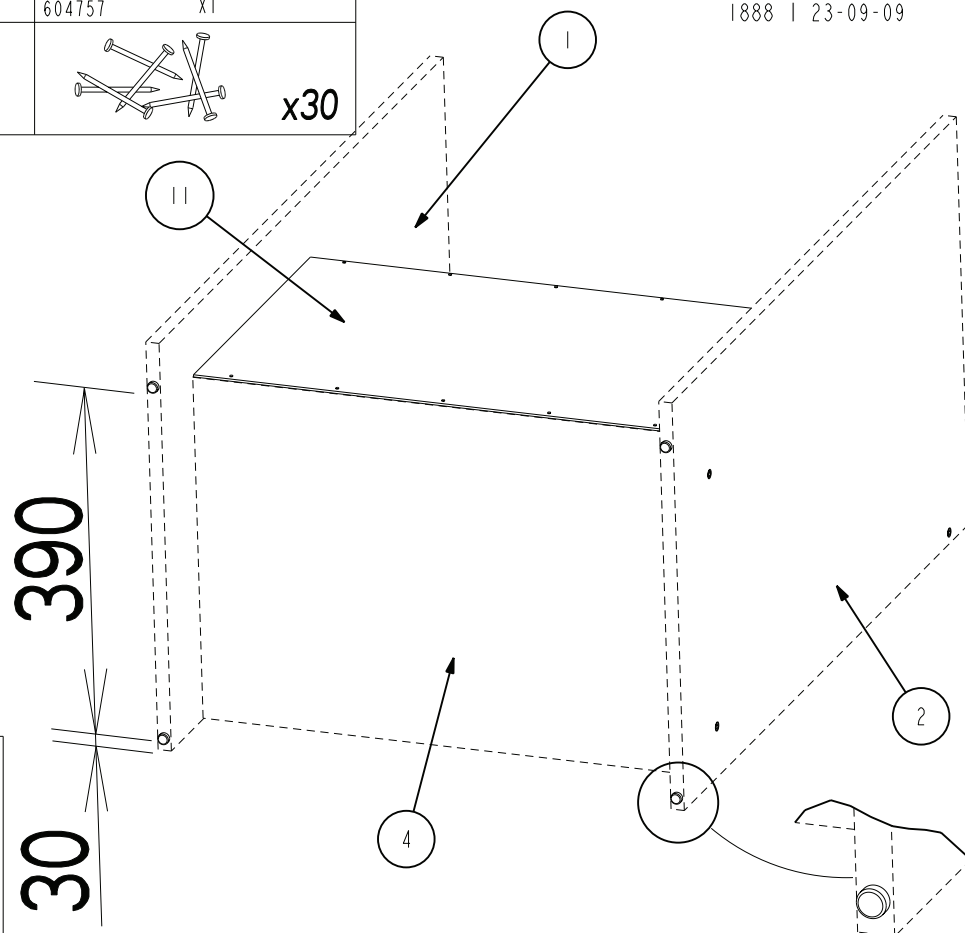

6




340132

X 1

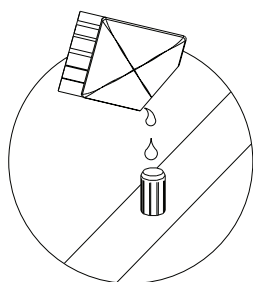


746

X 2

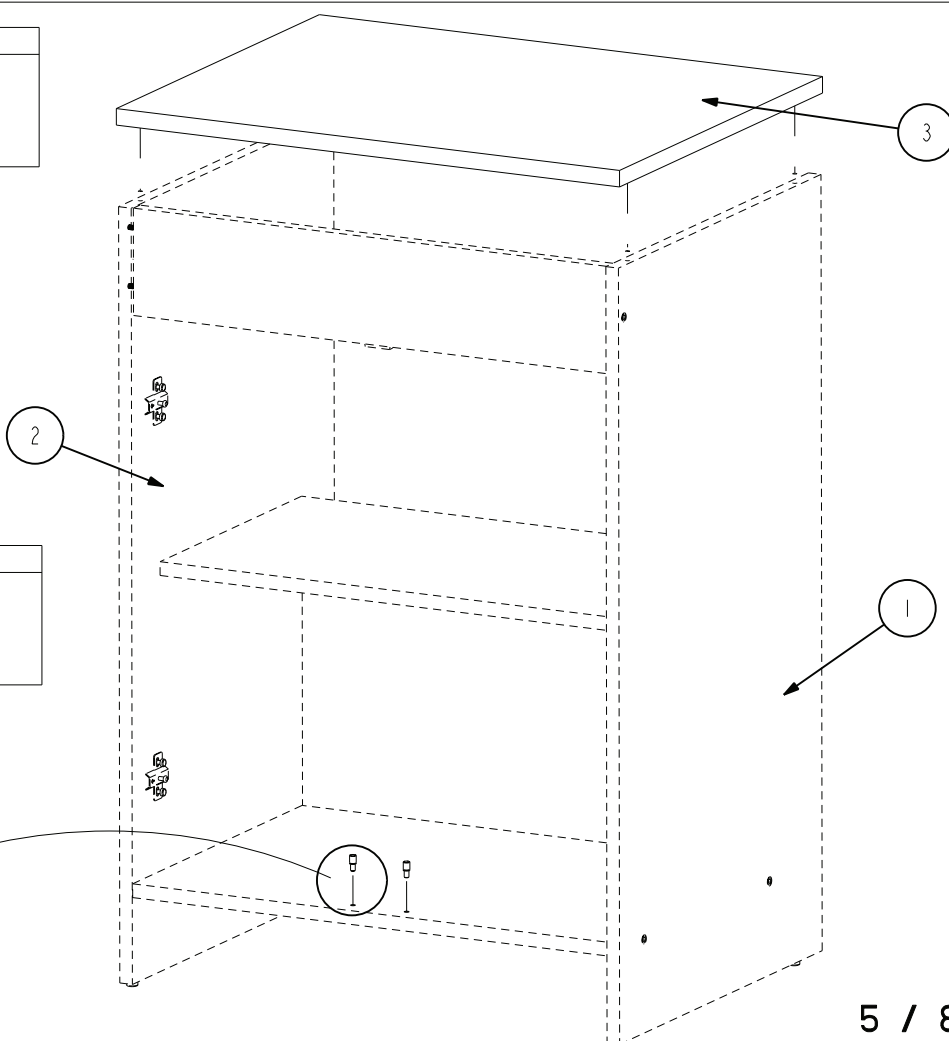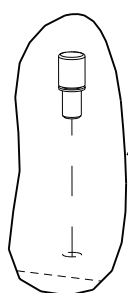

333010	X 4	949	X 8	332032	X 2	1888	23-09-09
							
		VBA TF 4x15				VBA TR 4x30	

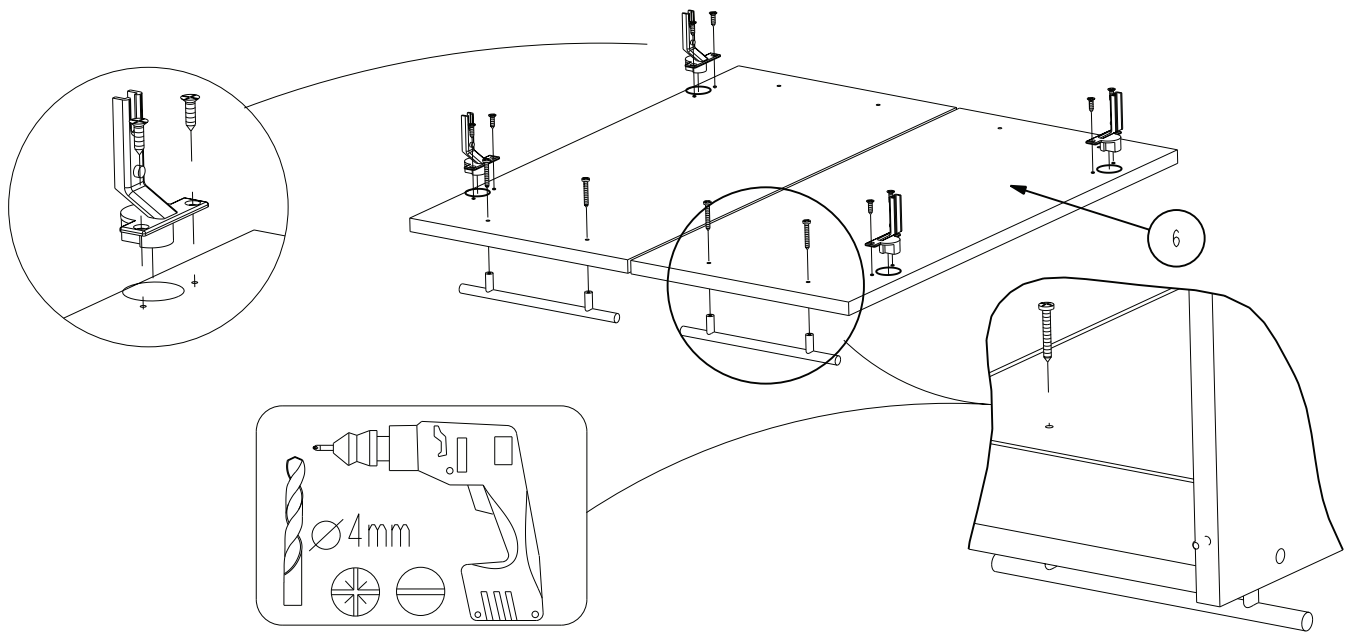

8

1. Diagram showing the installation of the hinge plate onto the cabinet door. The hinge plate is attached to the door with screws. A circular inset shows a close-up of the hinge plate being secured with screws.

2. Diagram showing the installation of the hinge arm onto the cabinet frame. The hinge arm is attached to the frame with screws. A circular inset shows a close-up of the hinge arm being secured with screws.

3. Diagram showing the final assembly of the cabinet door. The door is attached to the frame, and the hinge arm is secured. A circular inset shows a close-up of the hinge arm being secured with screws.




4. Diagram showing the final assembly of the cabinet door. The door is attached to the frame, and the hinge arm is secured. A circular inset shows a close-up of the hinge arm being secured with screws.

5. Diagram showing the final assembly of the cabinet door. The door is attached to the frame, and the hinge arm is secured. A circular inset shows a close-up of the hinge arm being secured with screws.

6. Diagram showing the final assembly of the cabinet door. The door is attached to the frame, and the hinge arm is secured. A circular inset shows a close-up of the hinge arm being secured with screws.




6 / 8

9

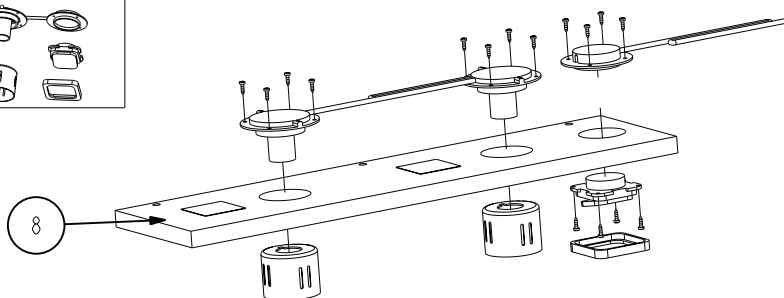
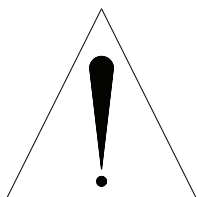
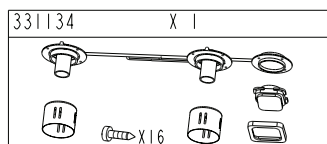


SUIVRE LE DOCUMENT ANNEXE POUR LE MONTAGE DES JOINT DOUILLE


10

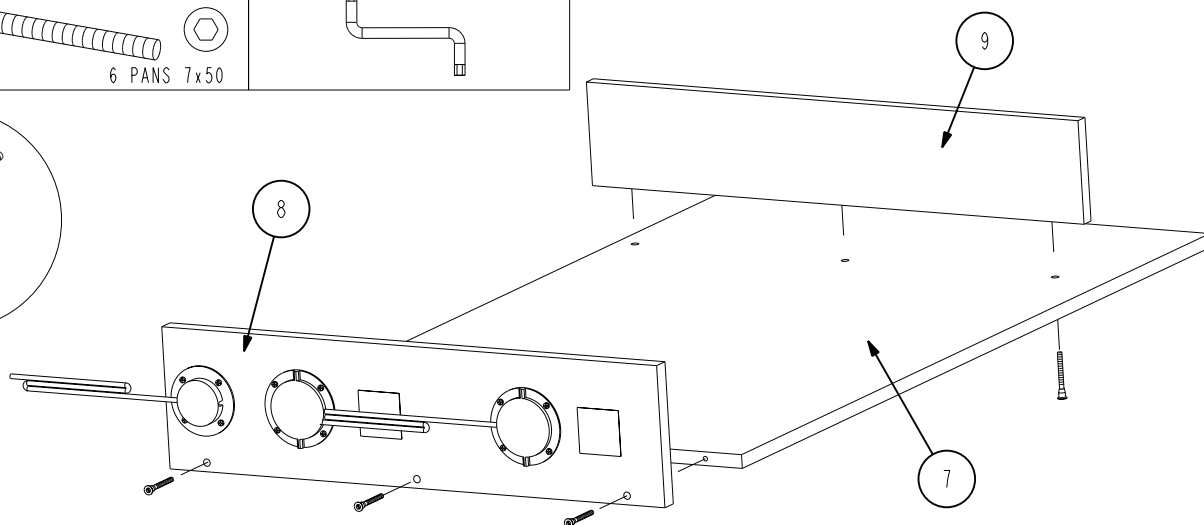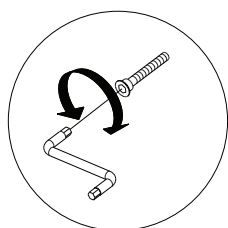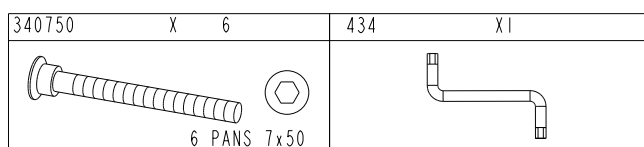



11

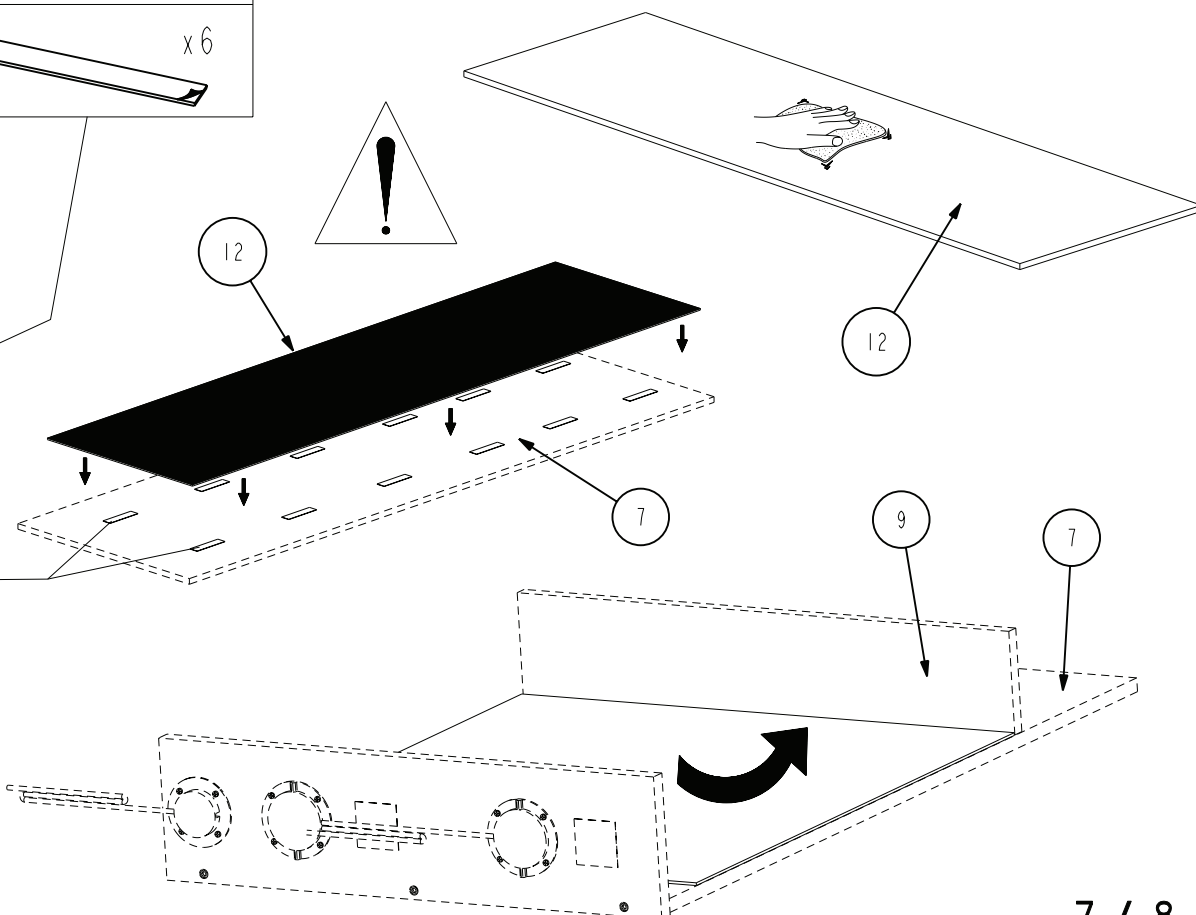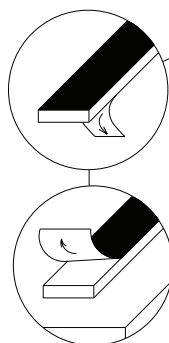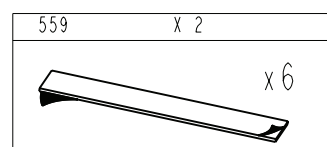

12

906	X 4	184	X 2	560	X 2
					
VBA TR 3x12					

1888 | 23-09-09

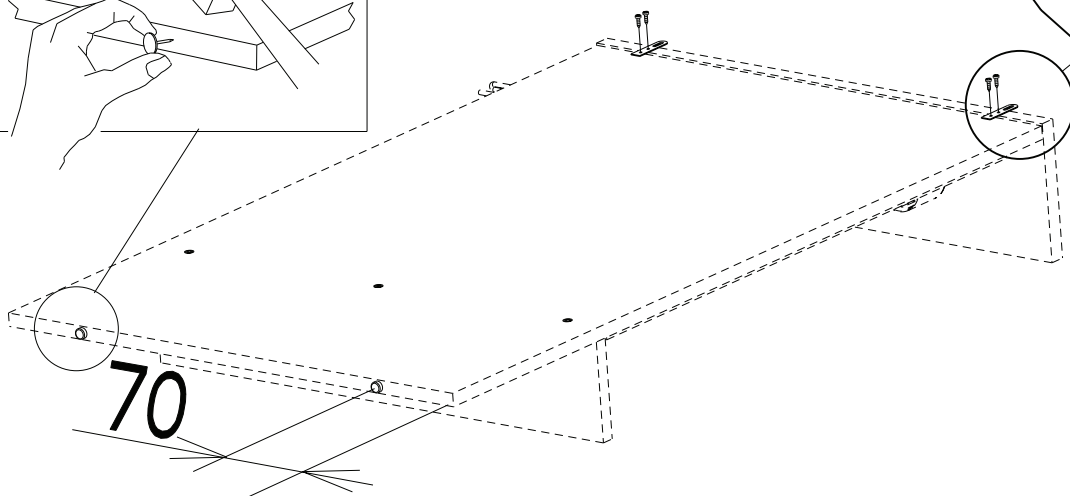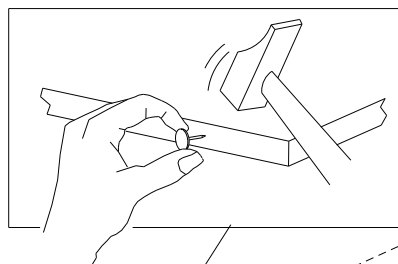

13

340042	X 6
	

