

Montageanleitung

Assembly instructions

Instructions de montage

Instrucciones de montaje

Istruzioni per il montaggio

Инструкция для монтажа

Instrukcja montażu

Montážní návod

Návod na montáž

Szerelési utasítás

Инструкция за монтаж

Kurulum Talimatları

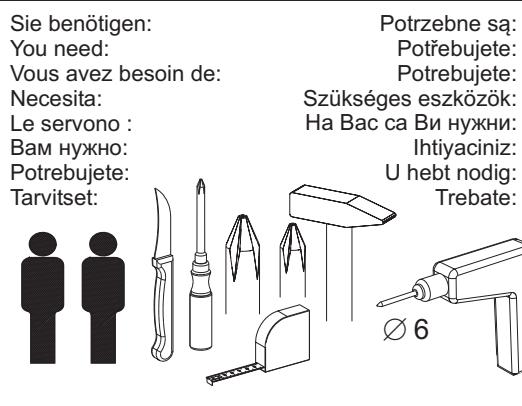
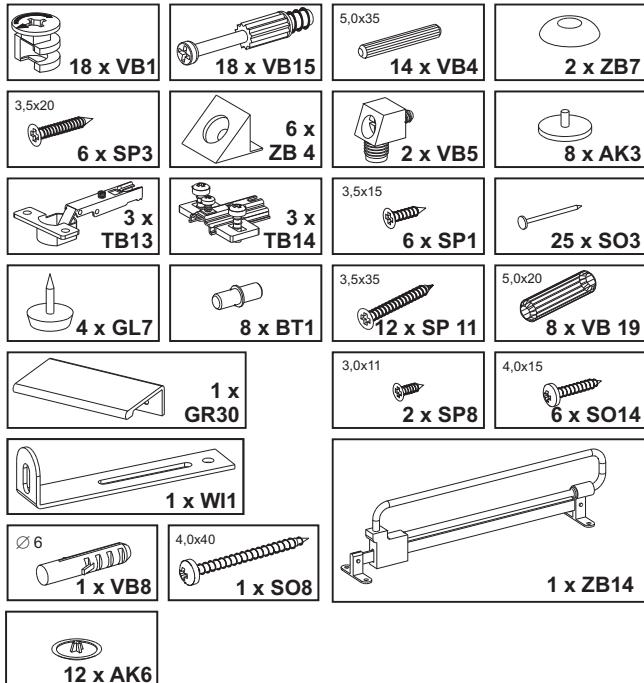
Navodilo za montažo

Montagehandleiding

A sen nus o h je

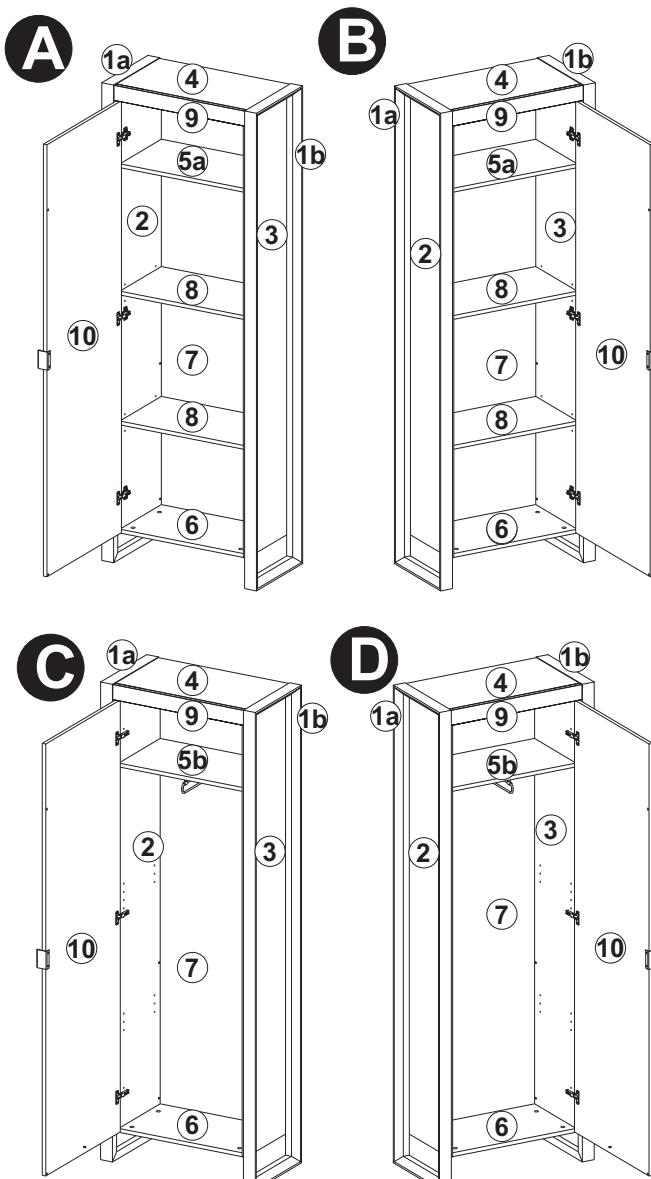
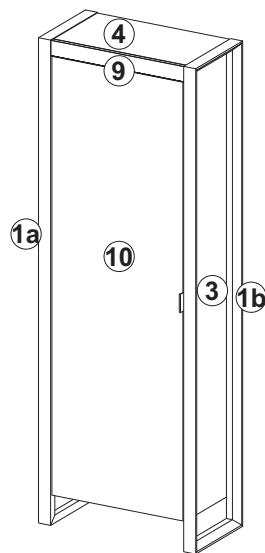
Upute o montaži

Beschläge / fittings / Ferrures pour meubles / Herrajes / Guarnizioni / Железные оправы для мебели / Okucia / Kování / Kovanie / Vasalások / обков / Parçaları / okovje / Hang- en sluitwerk / helat / Obloge

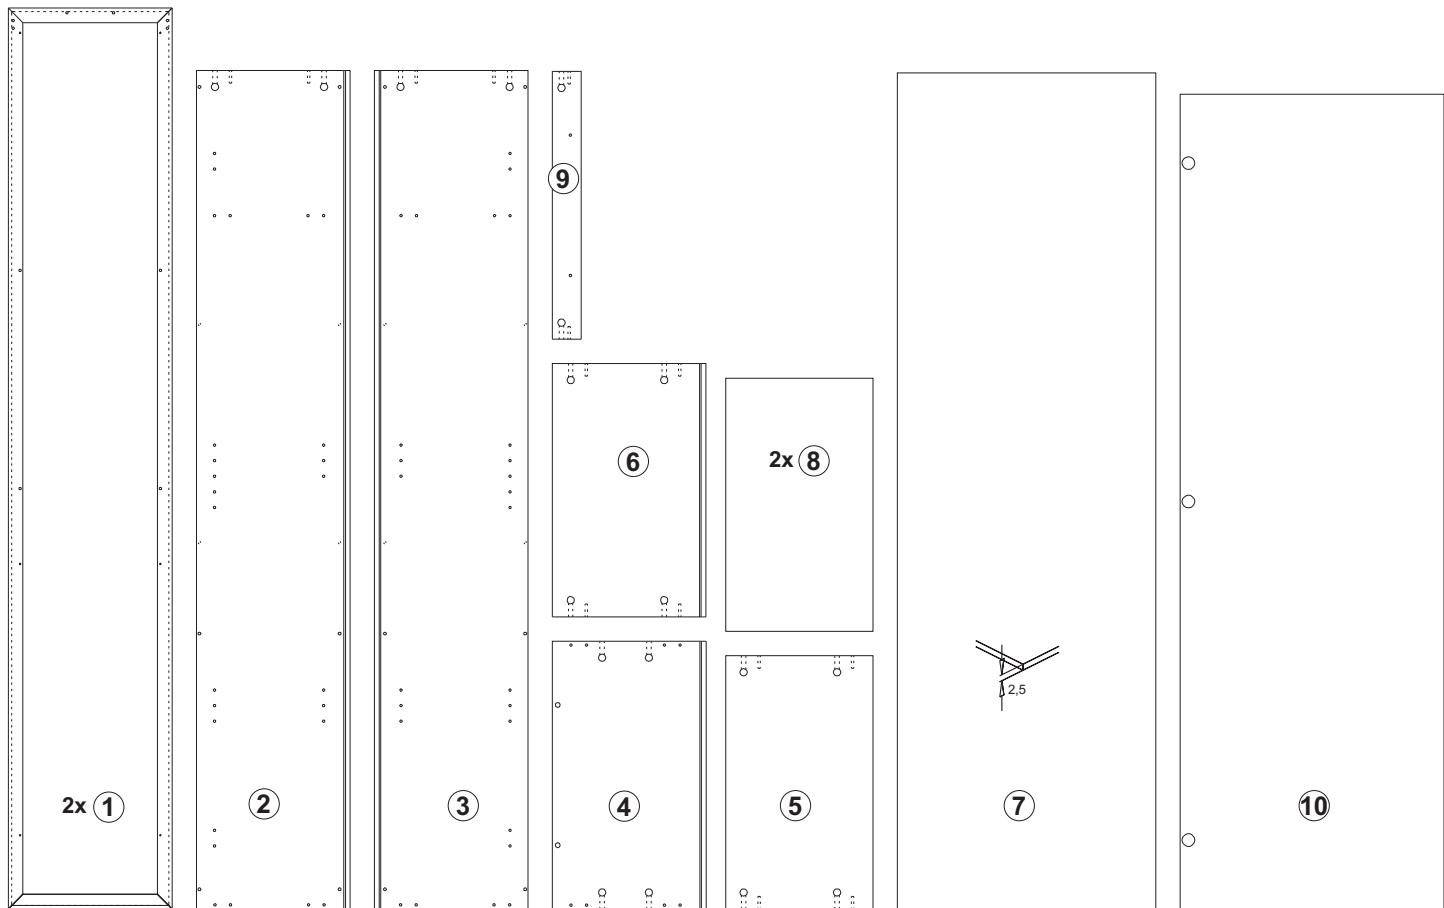


FRAME 8

Art.-Nr. 361-008



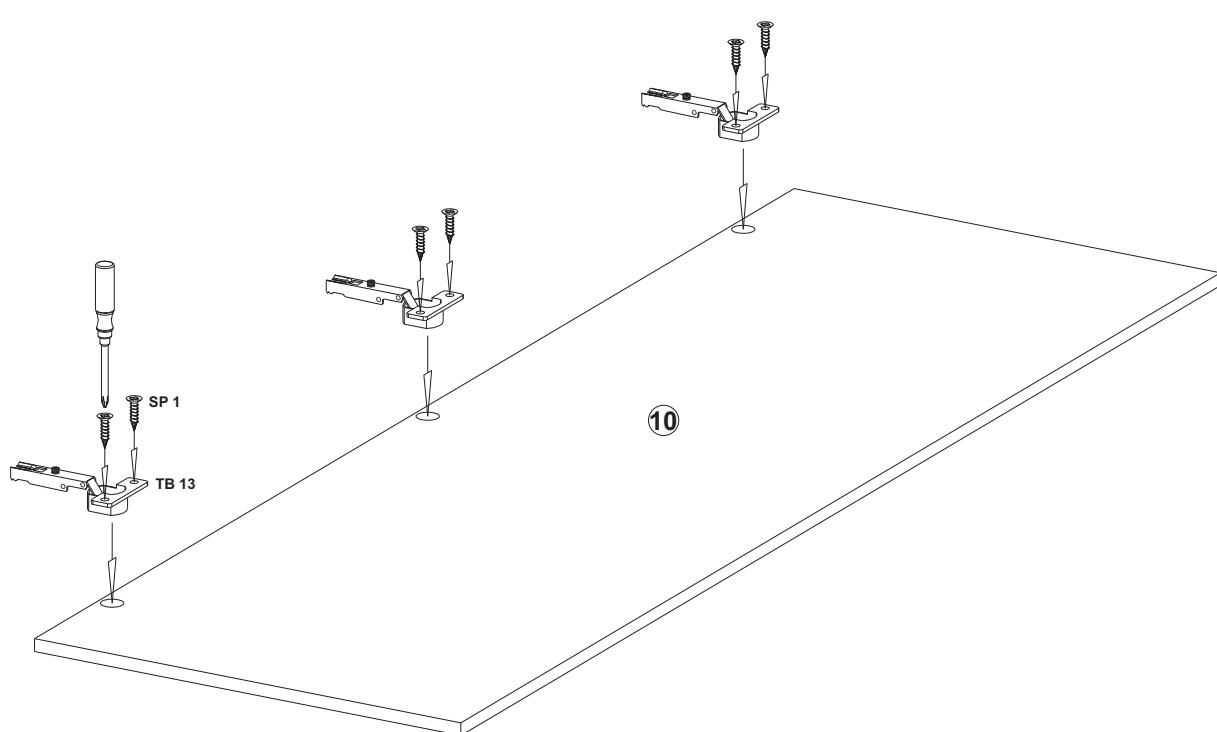
Teile / article / Pièces / Piezas / Pezzi / части / Części / Díly / Diely / Alkatrészek / части / parçalar / dele / Onderdelen / osat / Dijelovi

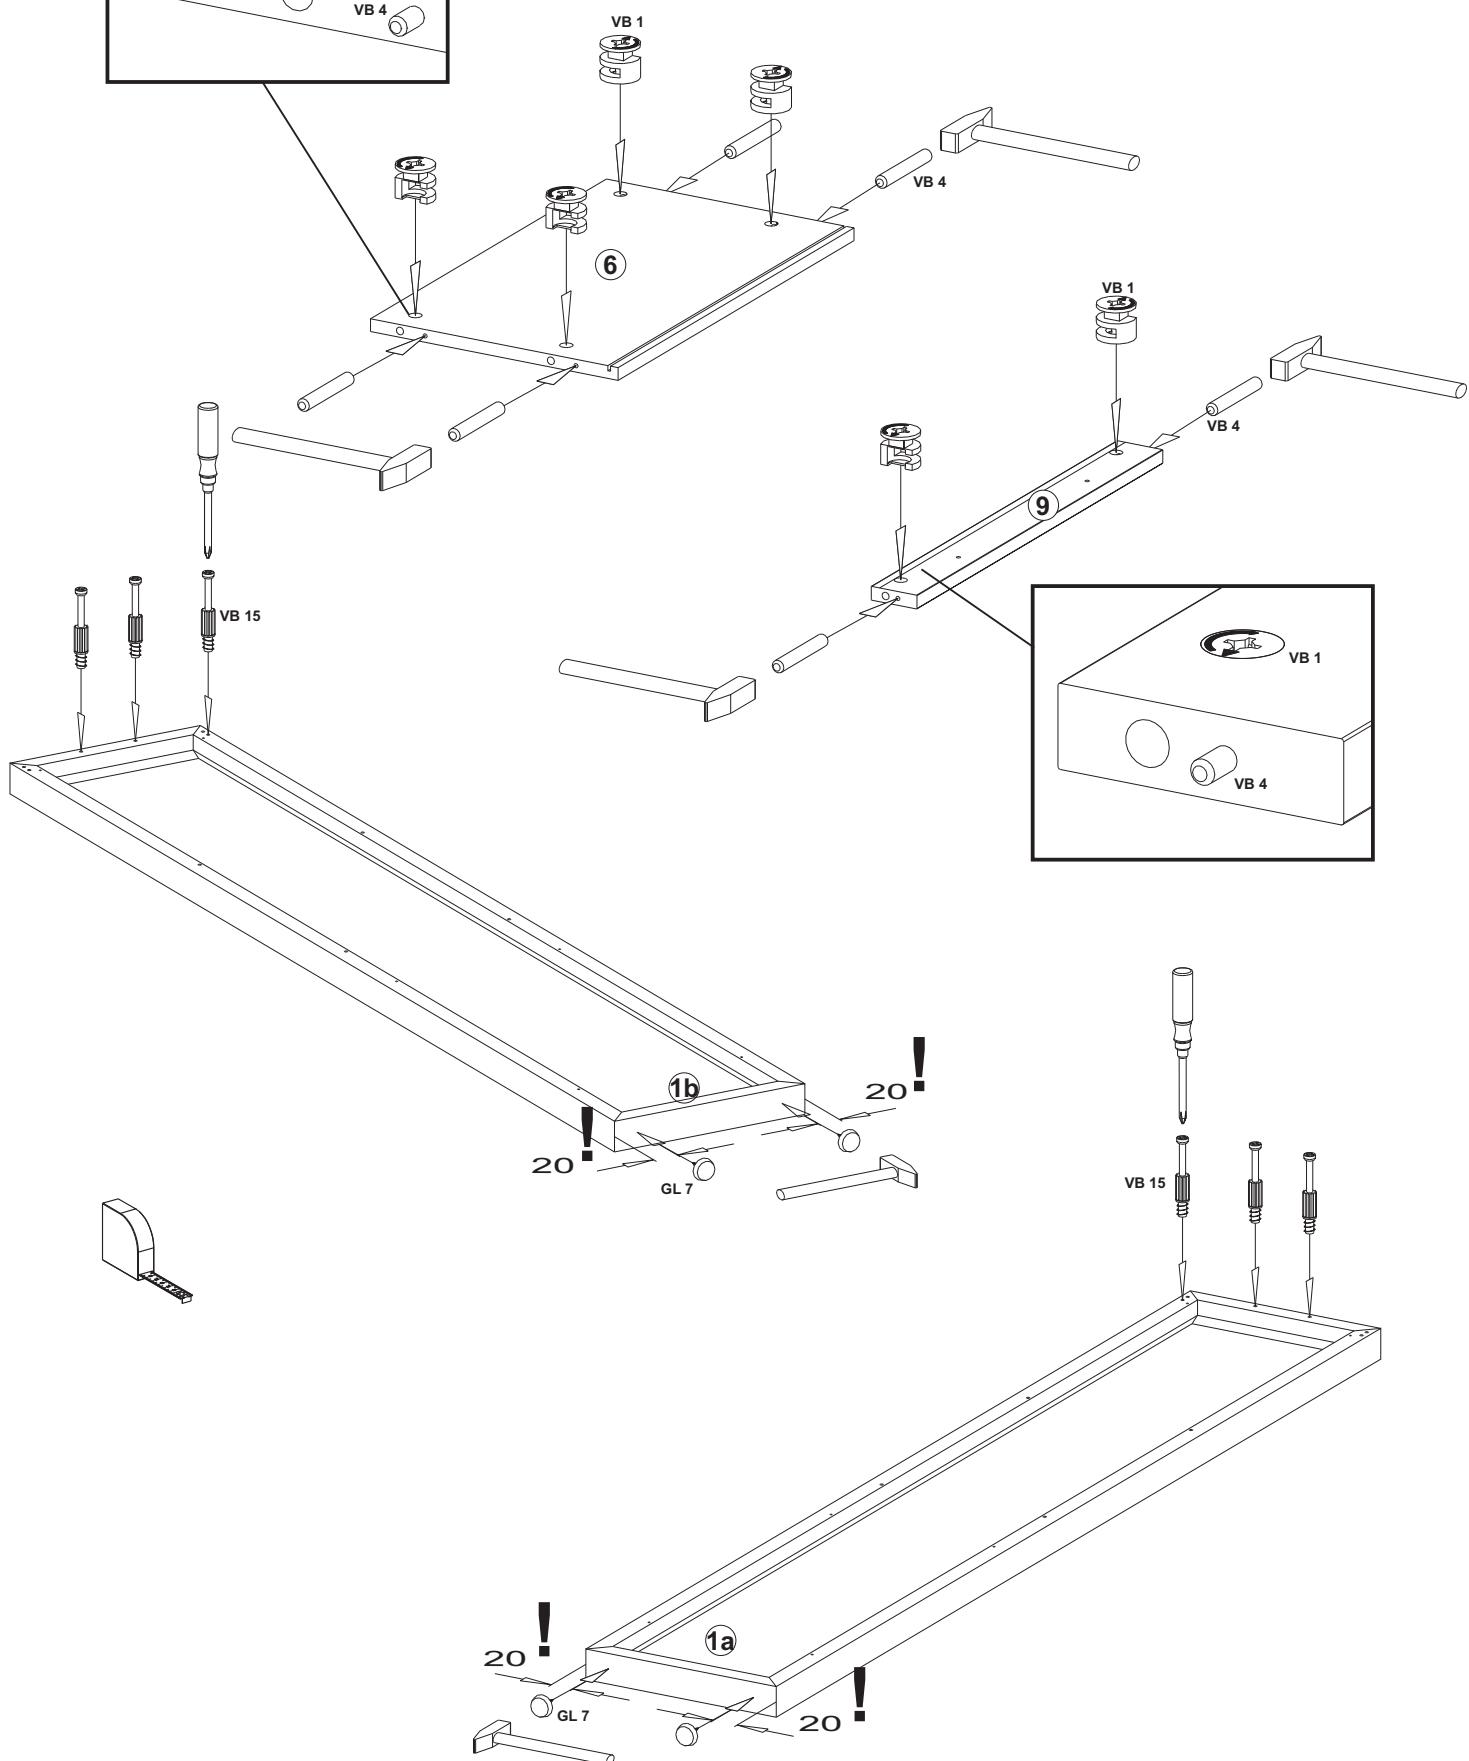


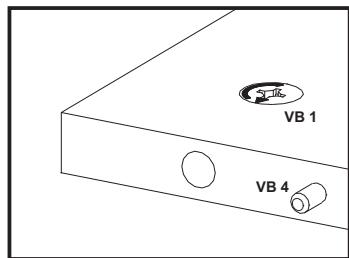


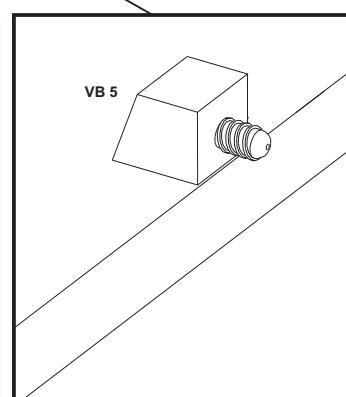
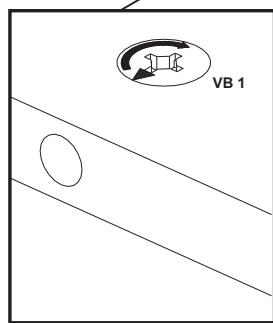
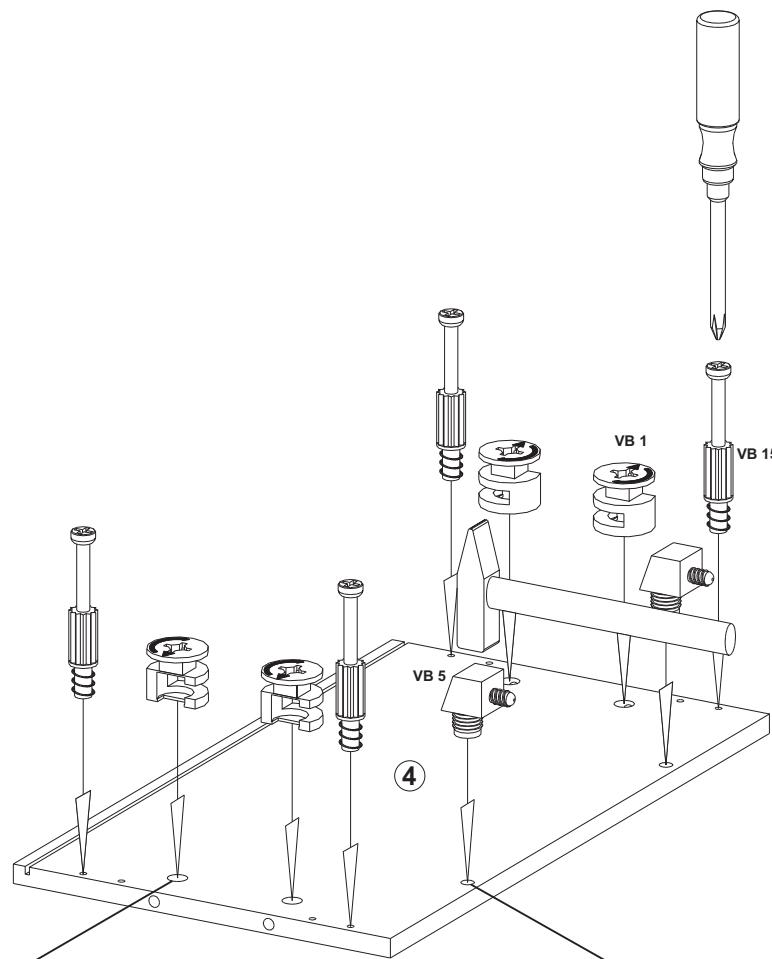
A

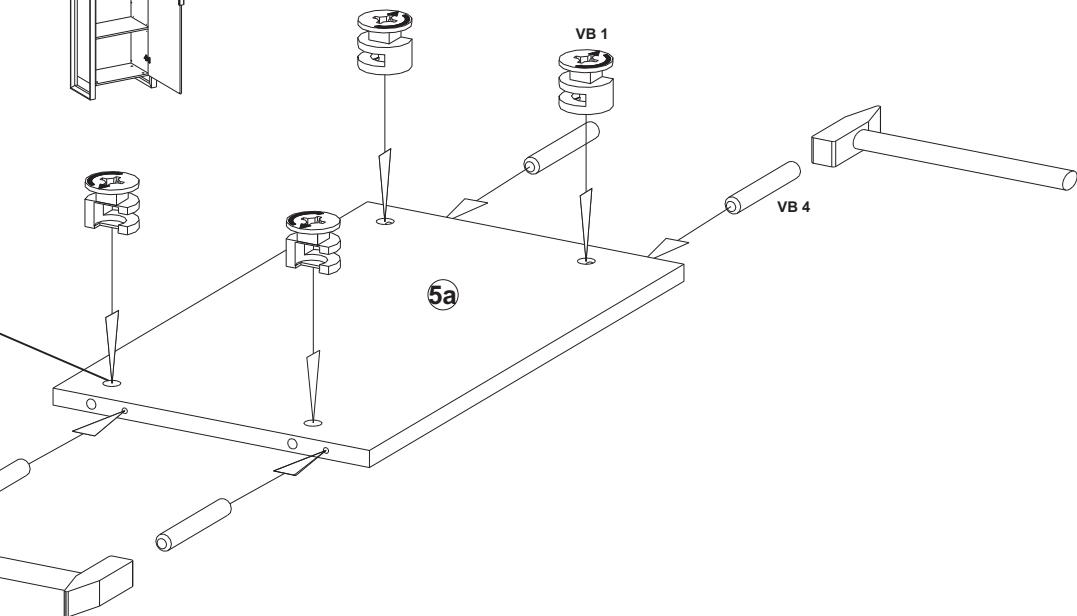
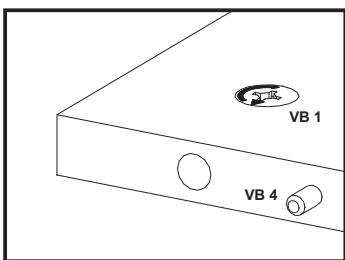

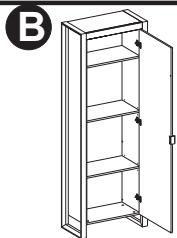
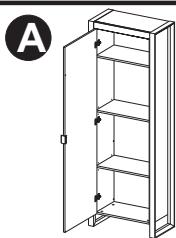
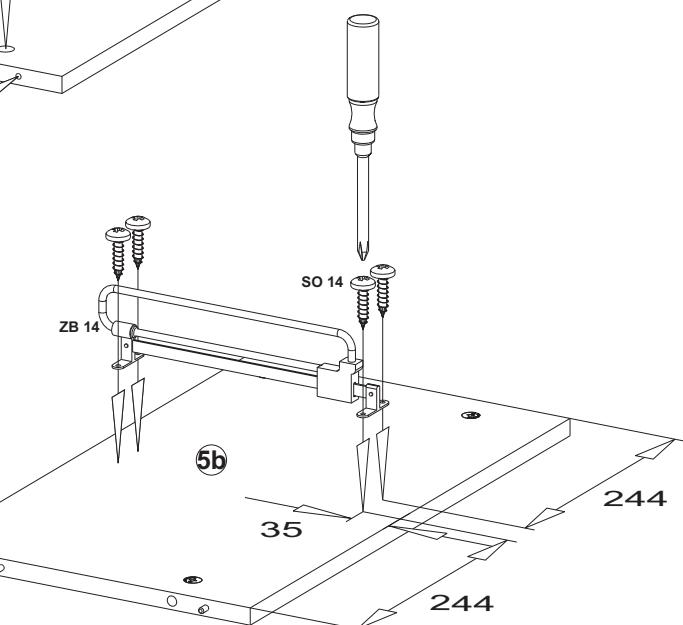
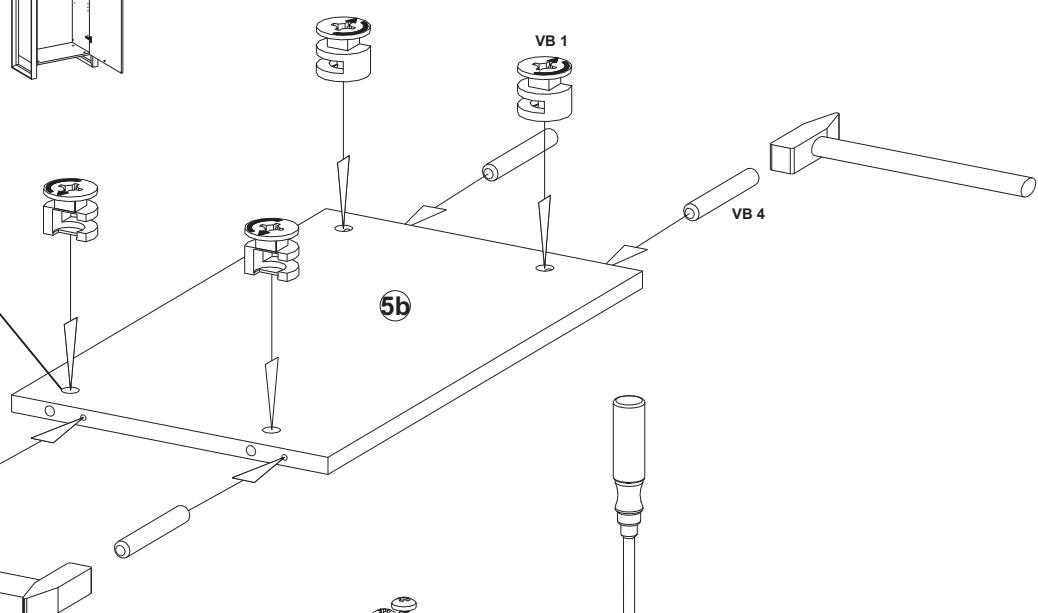
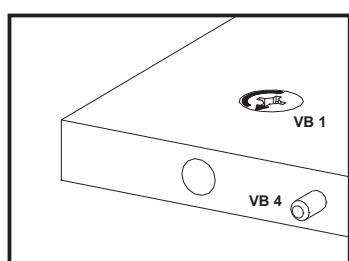


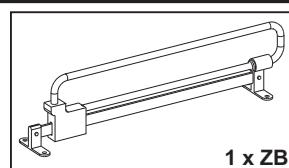
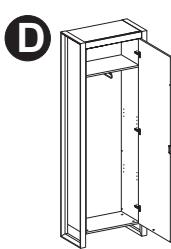
3 x
TB13

3,5x15
6 x SP1



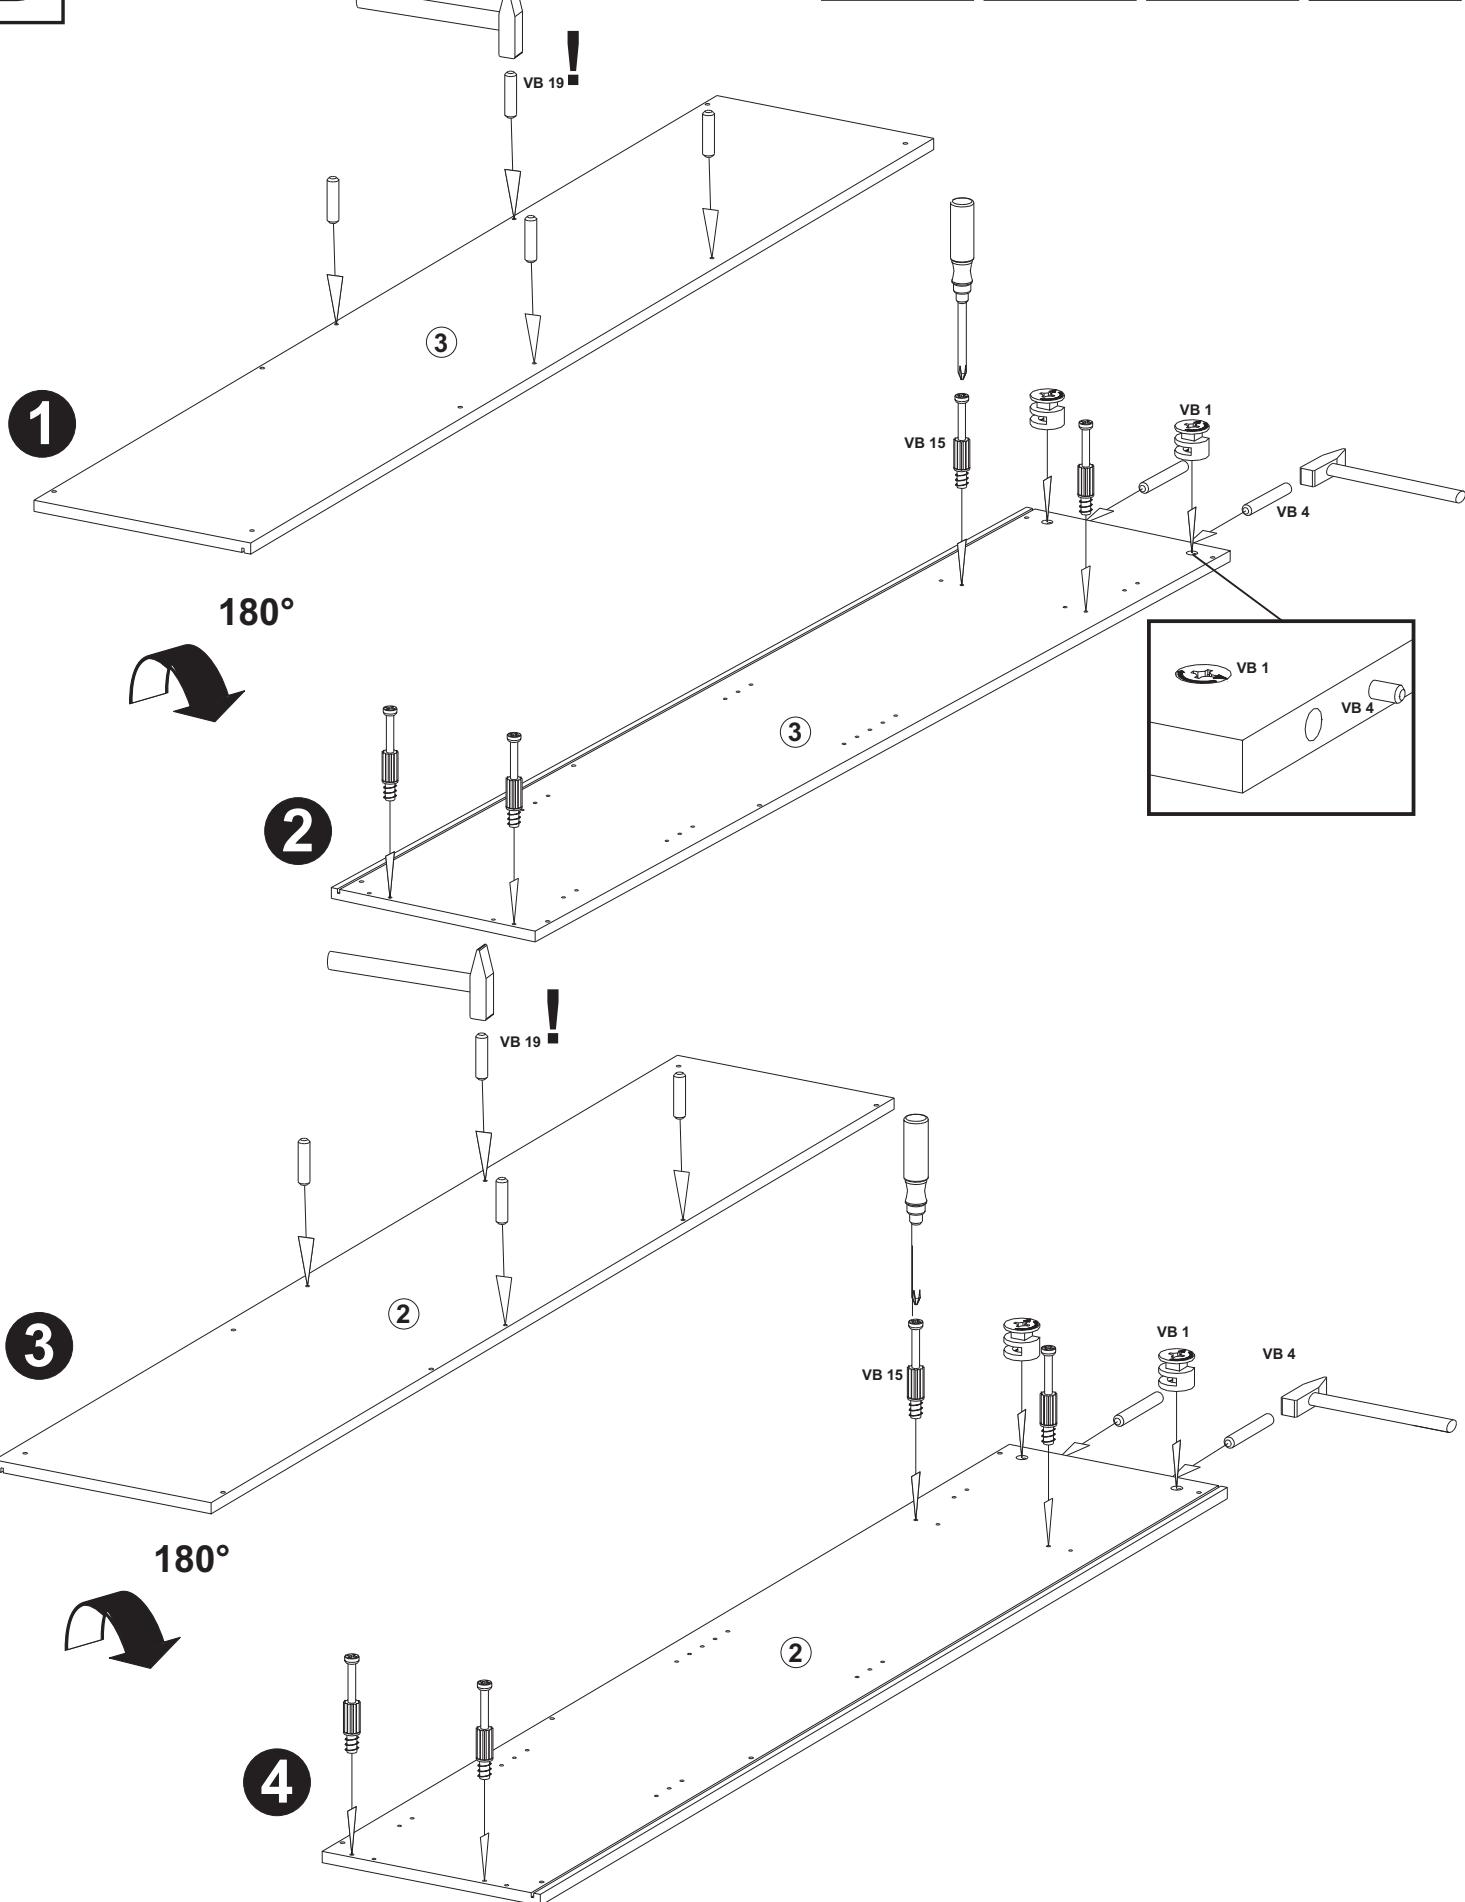
B

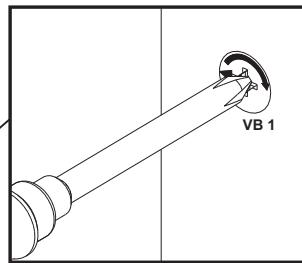
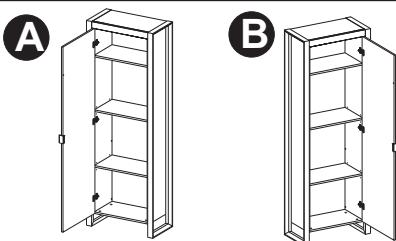
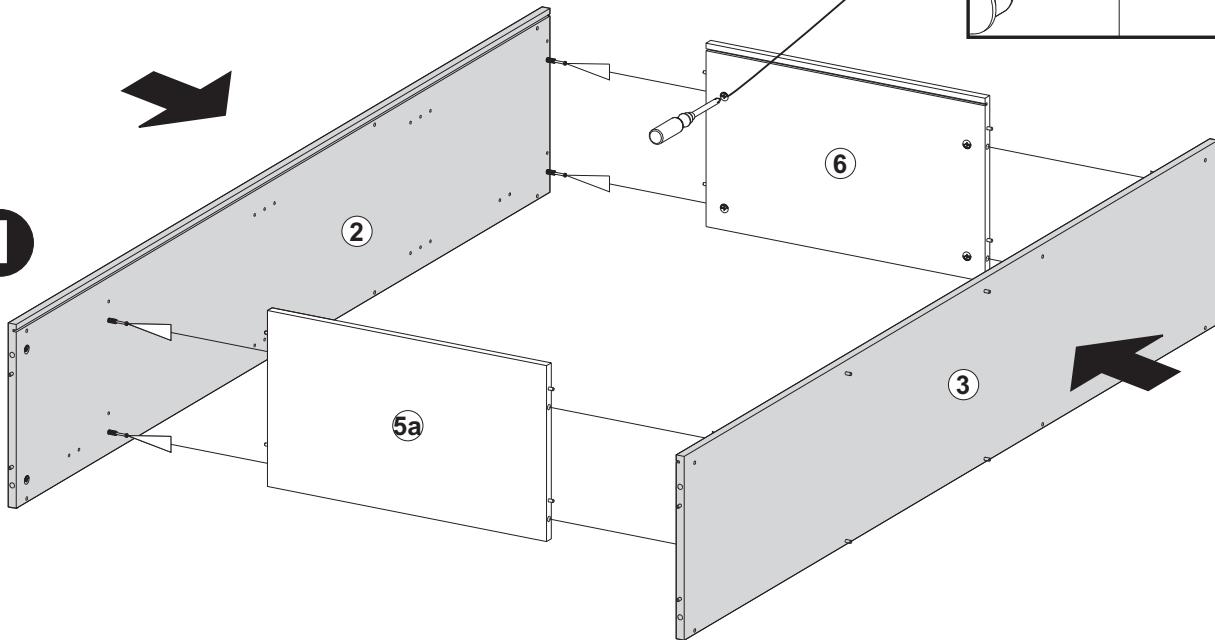
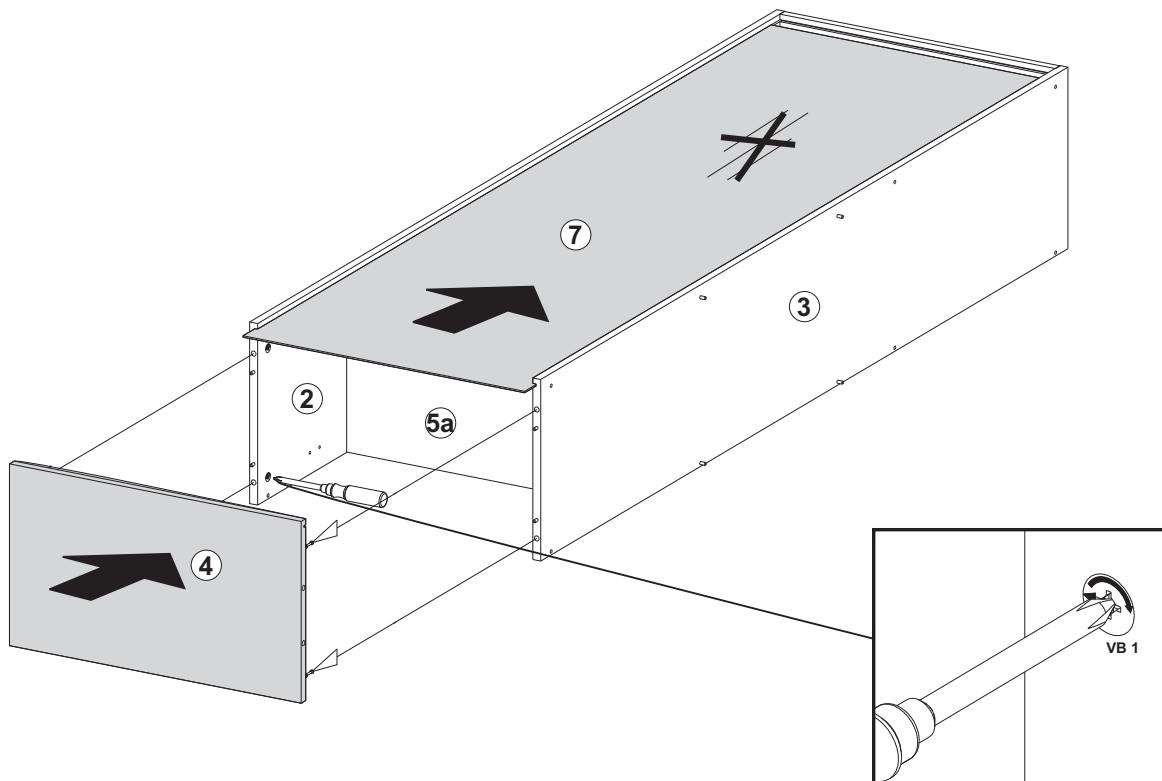
C

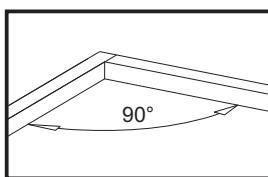
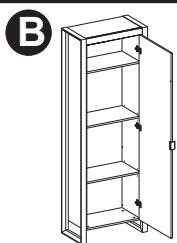
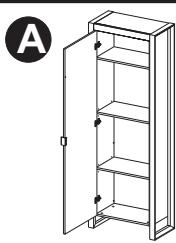
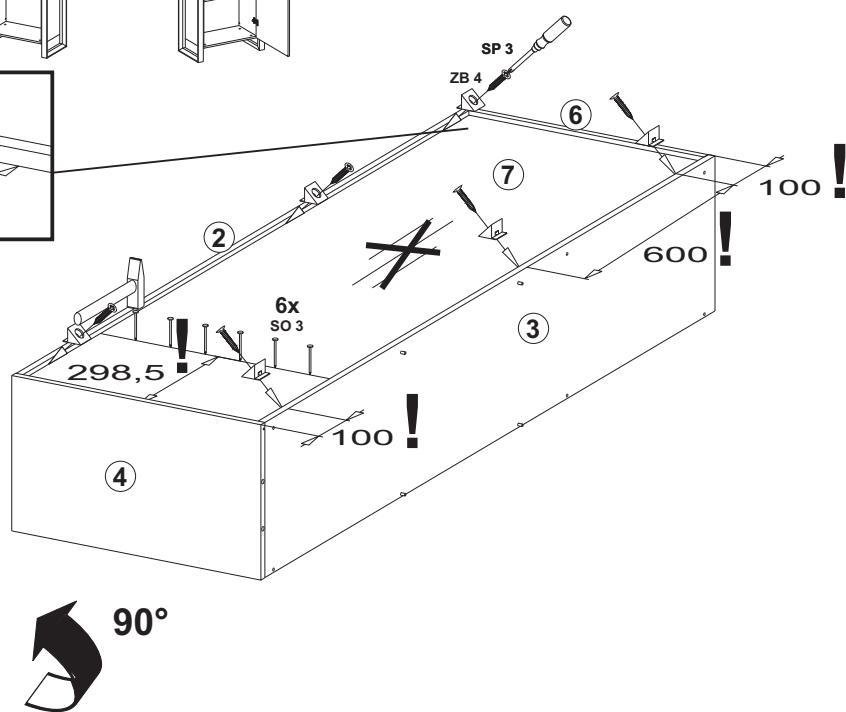
C1**C2**

D


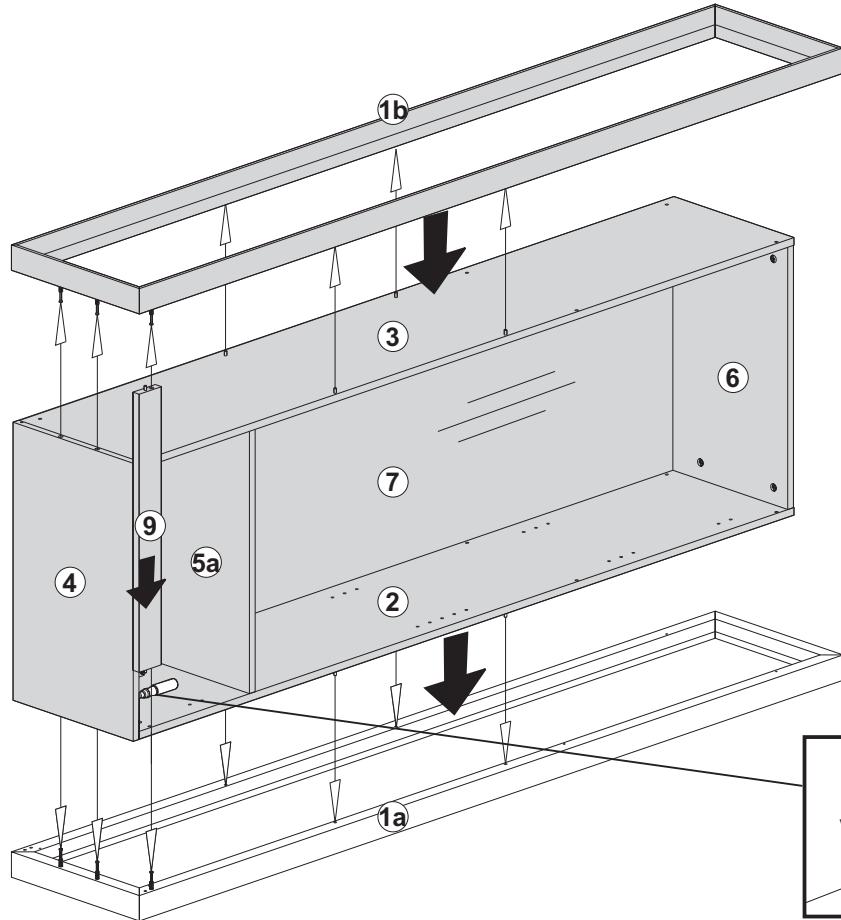
5,0x20 8 x VB 19	4 x VB1	8x VB15	5,0x35 4 x VB4
---------------------	---------	---------	-------------------






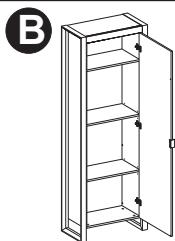
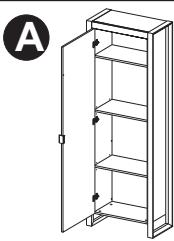
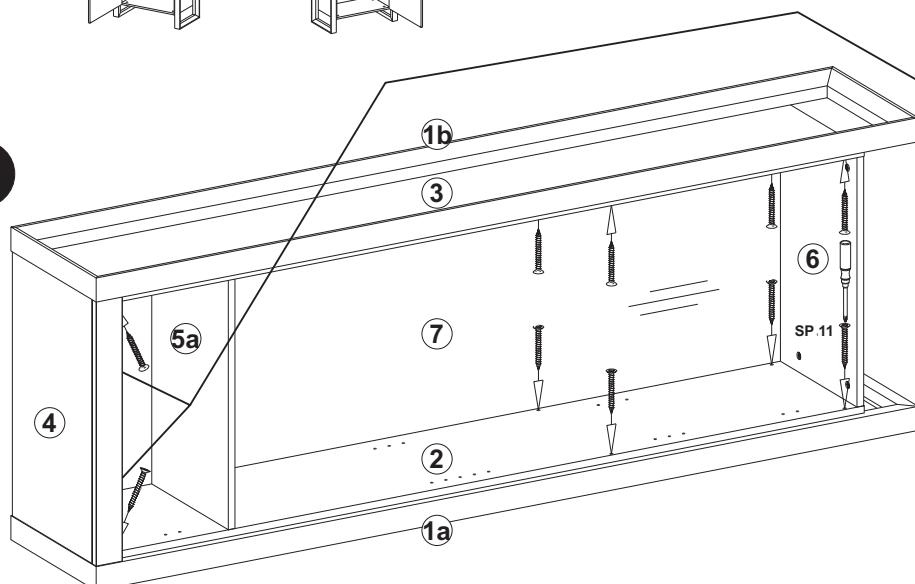


E1**1****2**

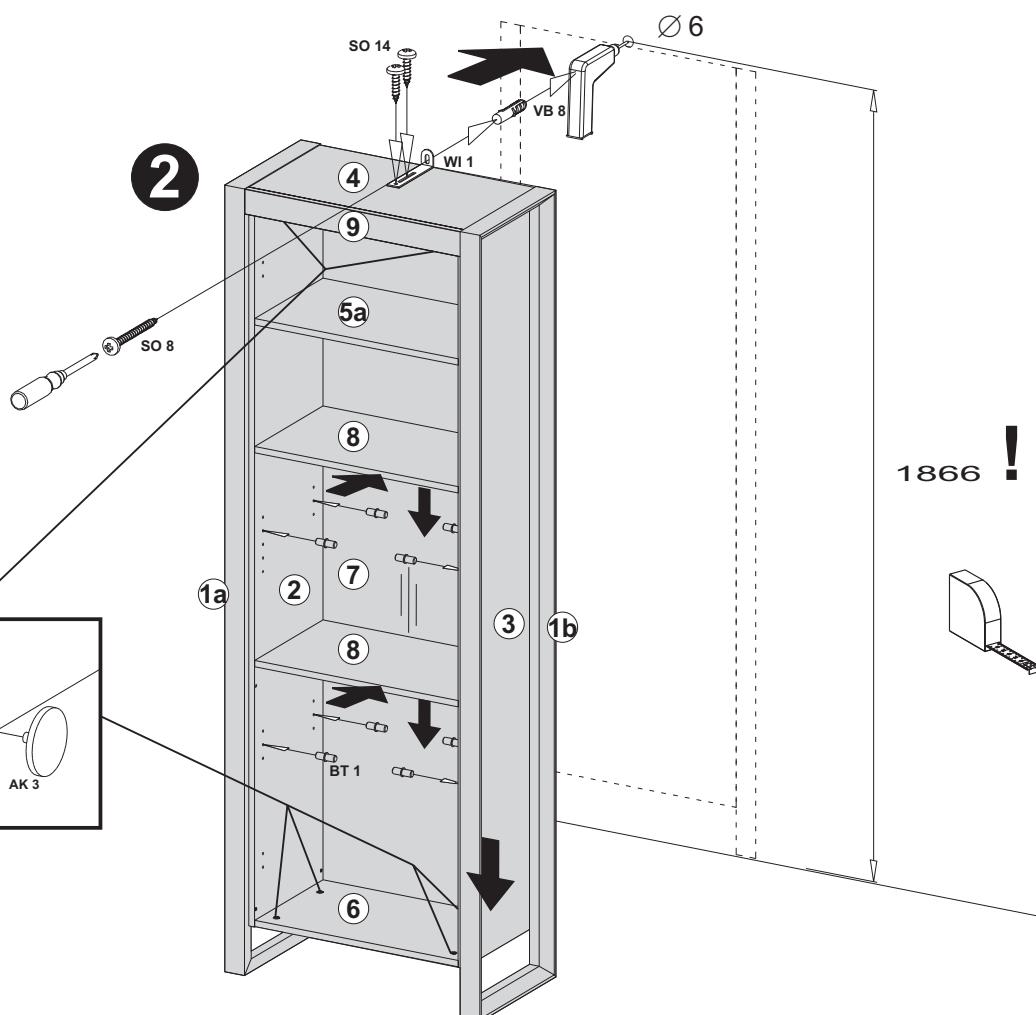
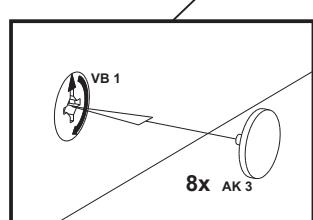
F1**1**

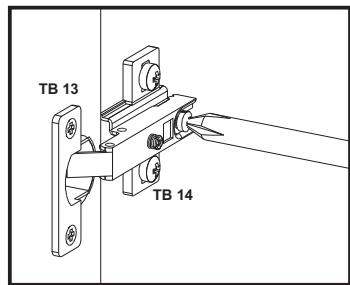
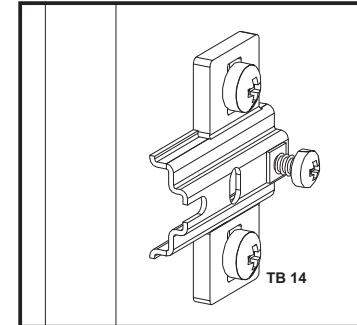
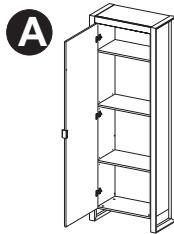
90°

2

G1**1**

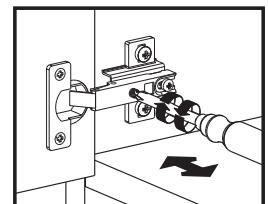
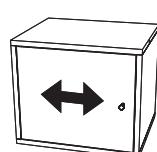
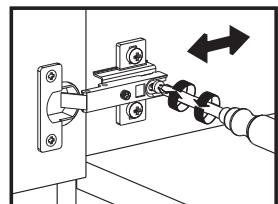
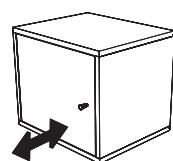
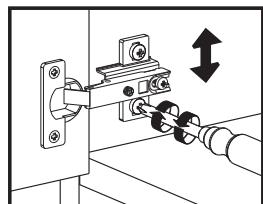
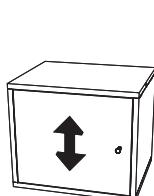
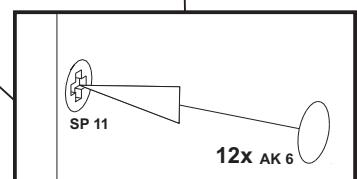
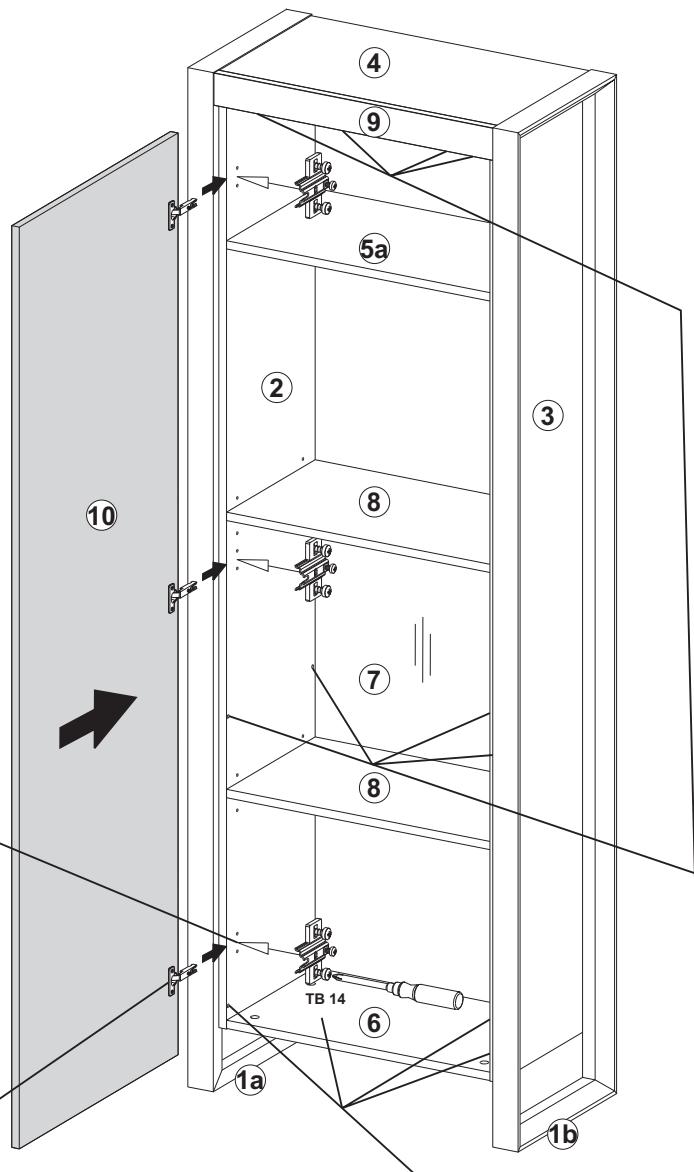
90°


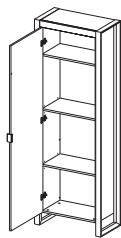
2

H1



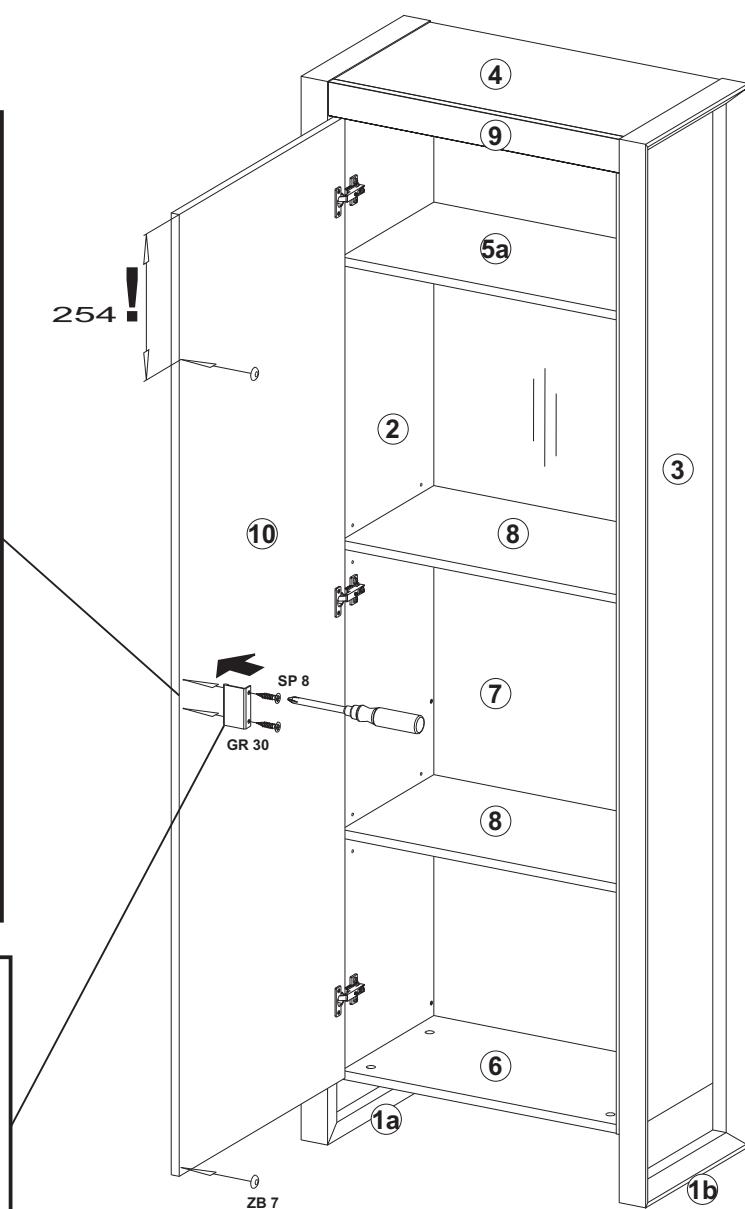
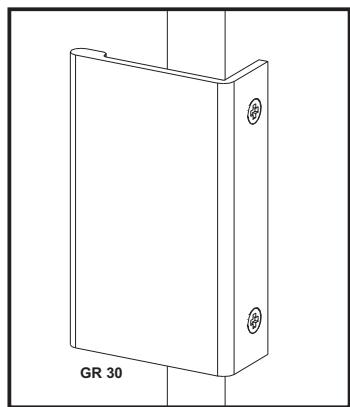
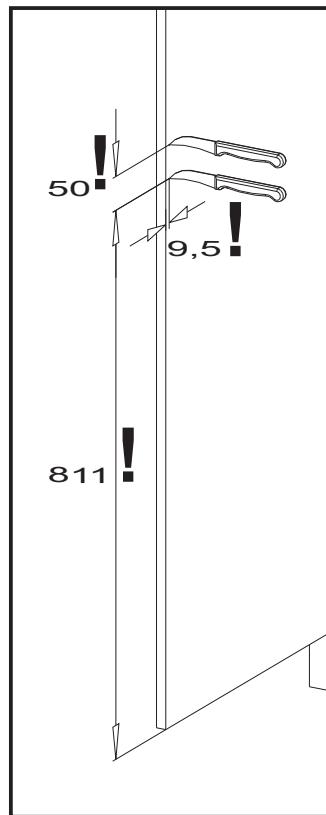
12 x AK6

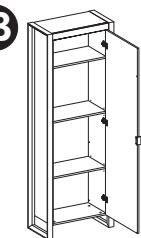
3 x TB14



I1**A**

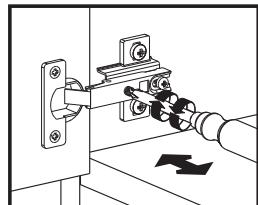
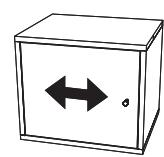
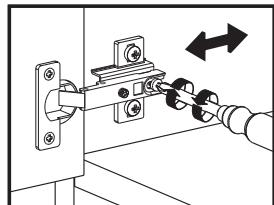
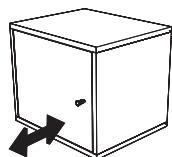
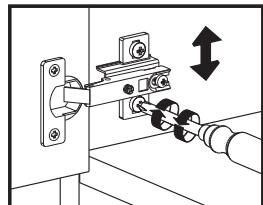
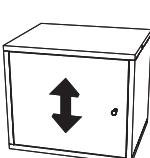
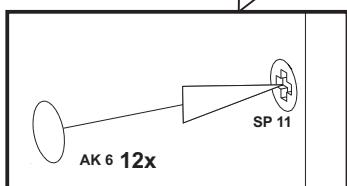
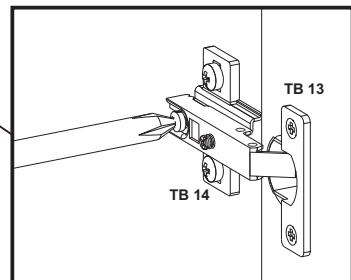
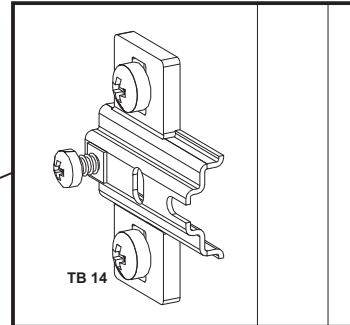
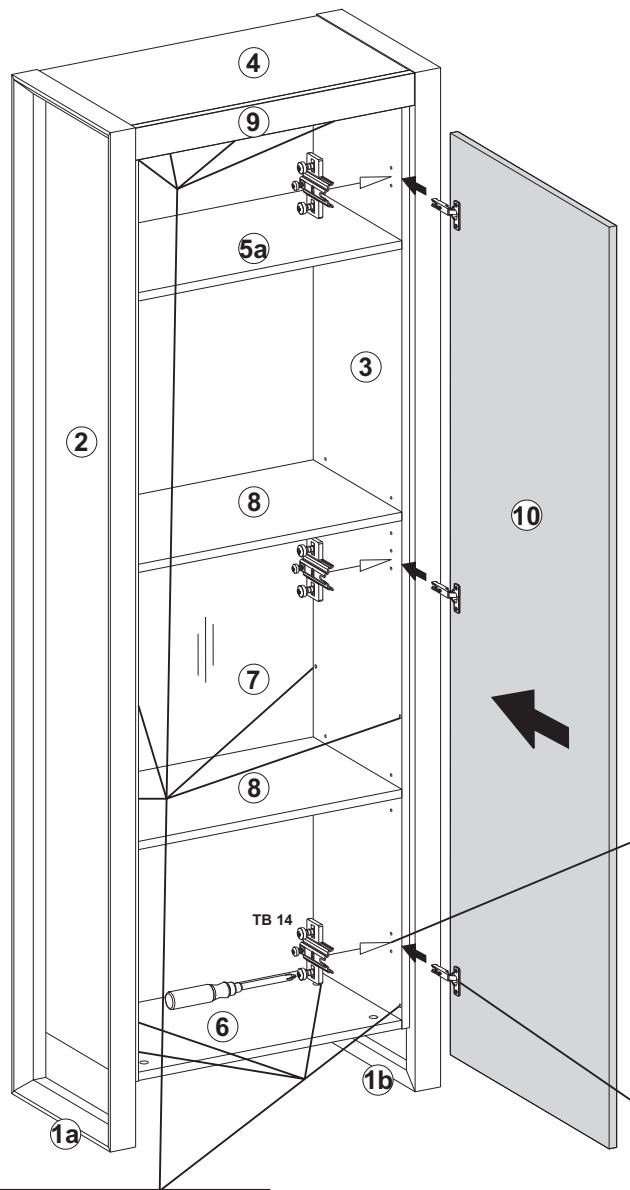
2 x ZB7




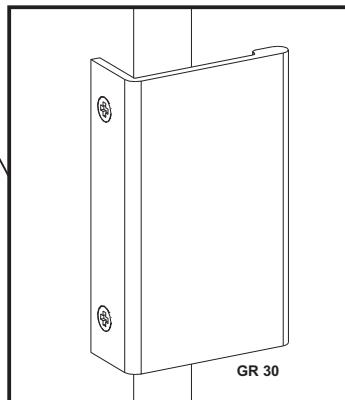
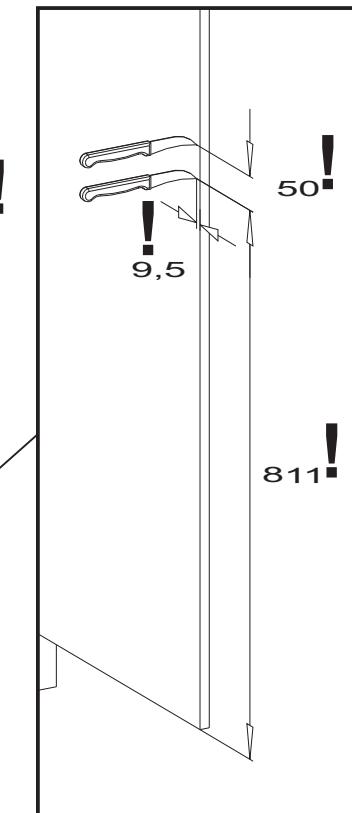
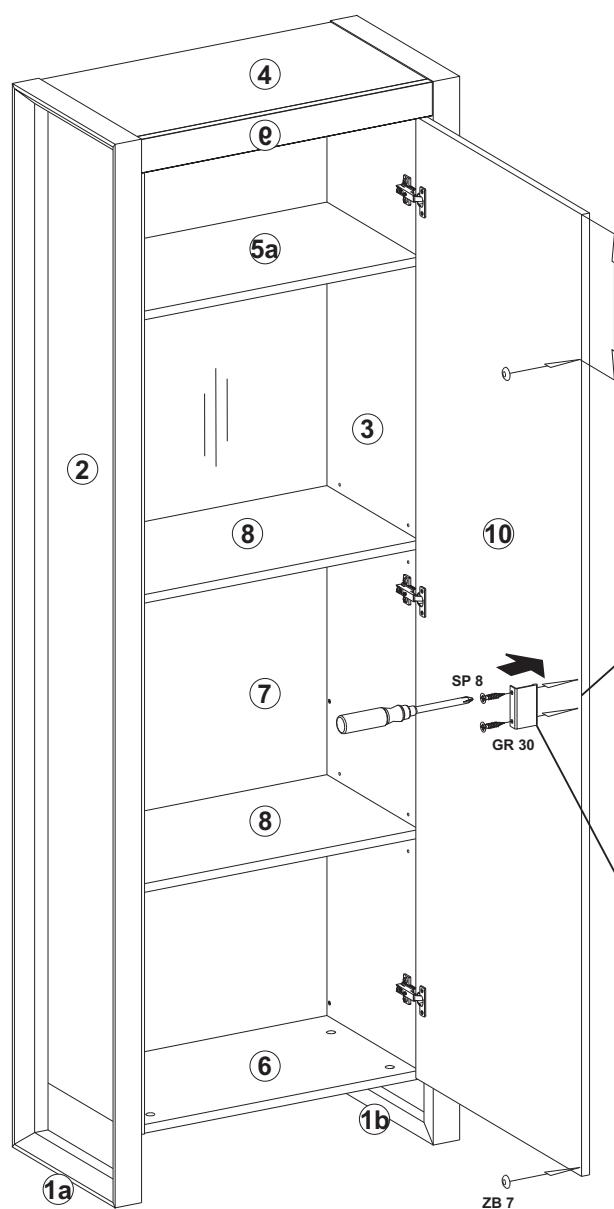
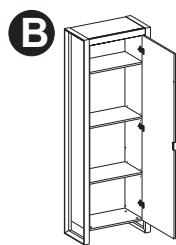
1 x
GR303,0x11
2 x SP8

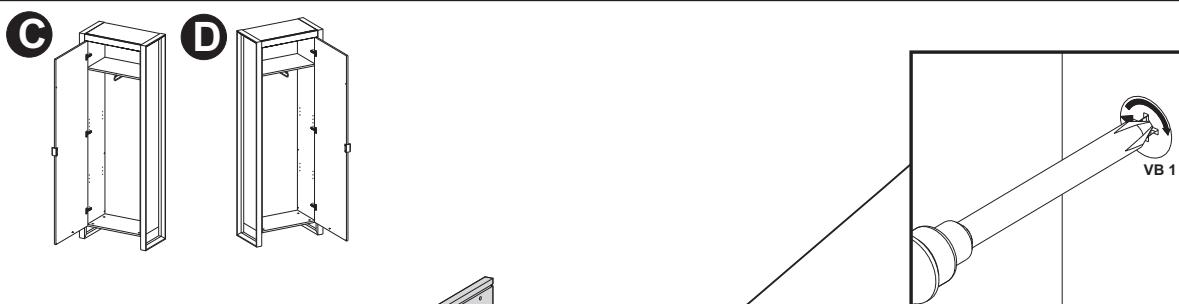
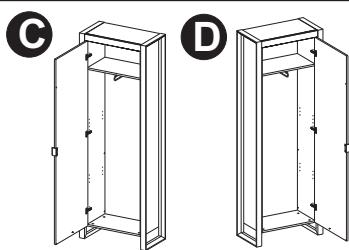
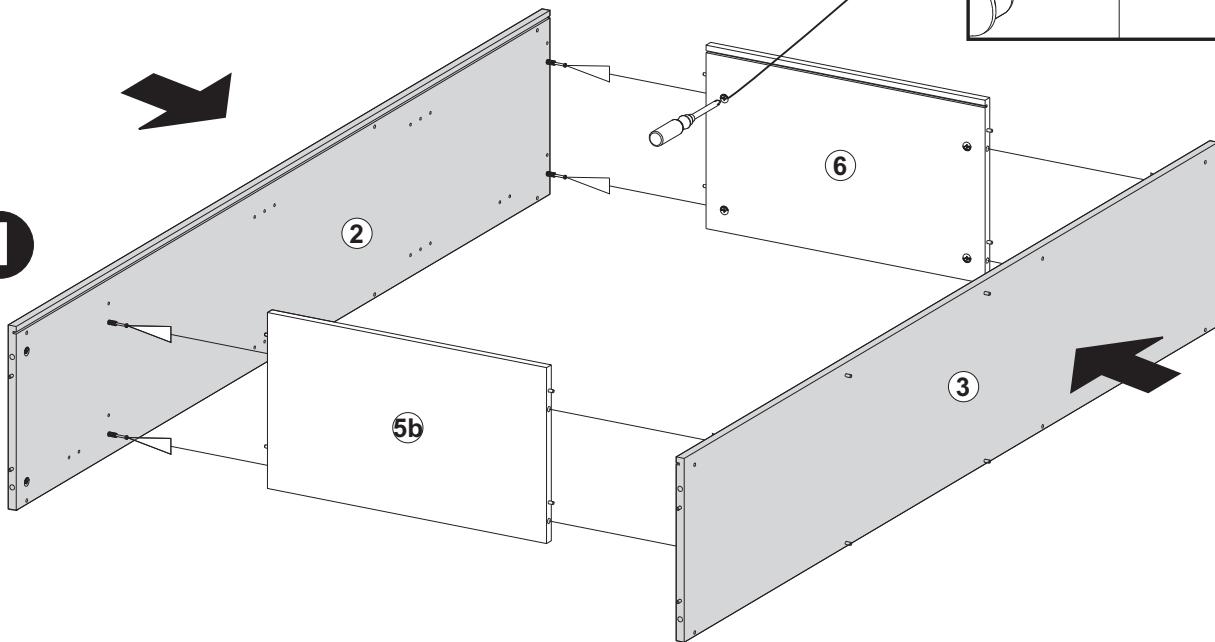
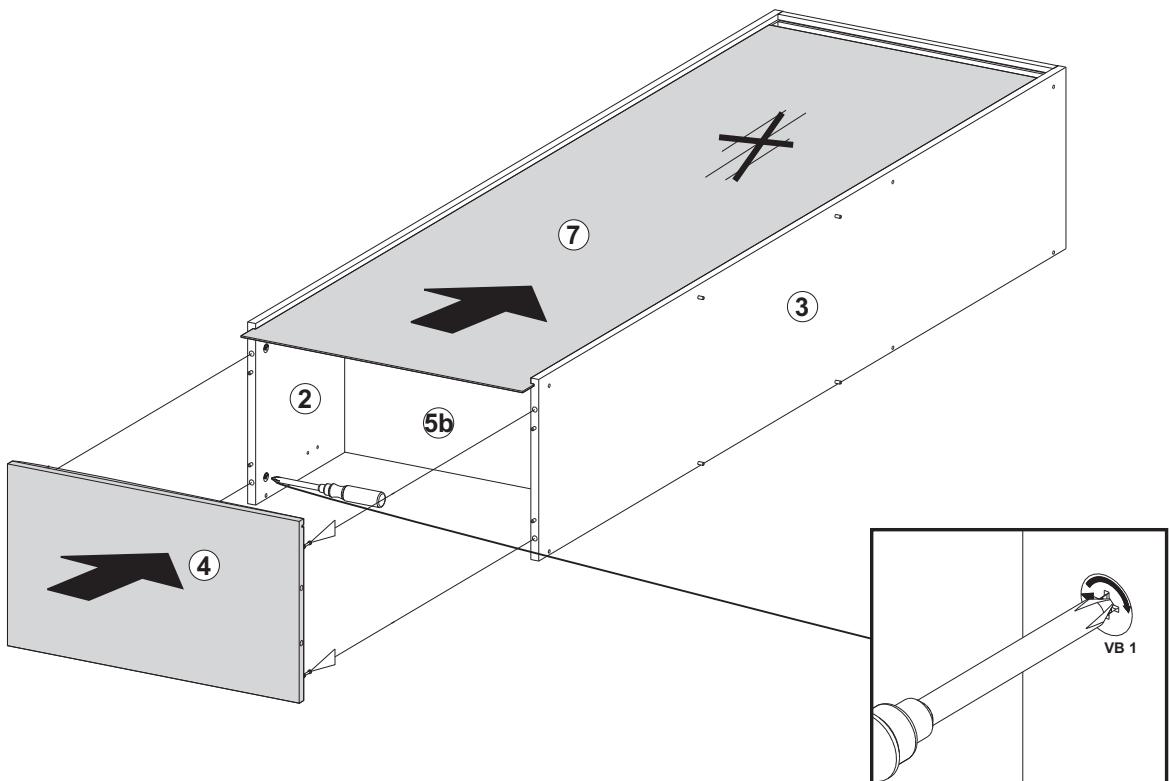
H2**B**

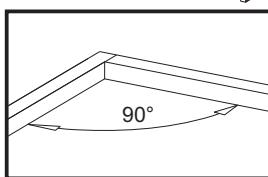
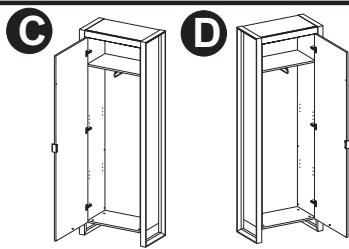
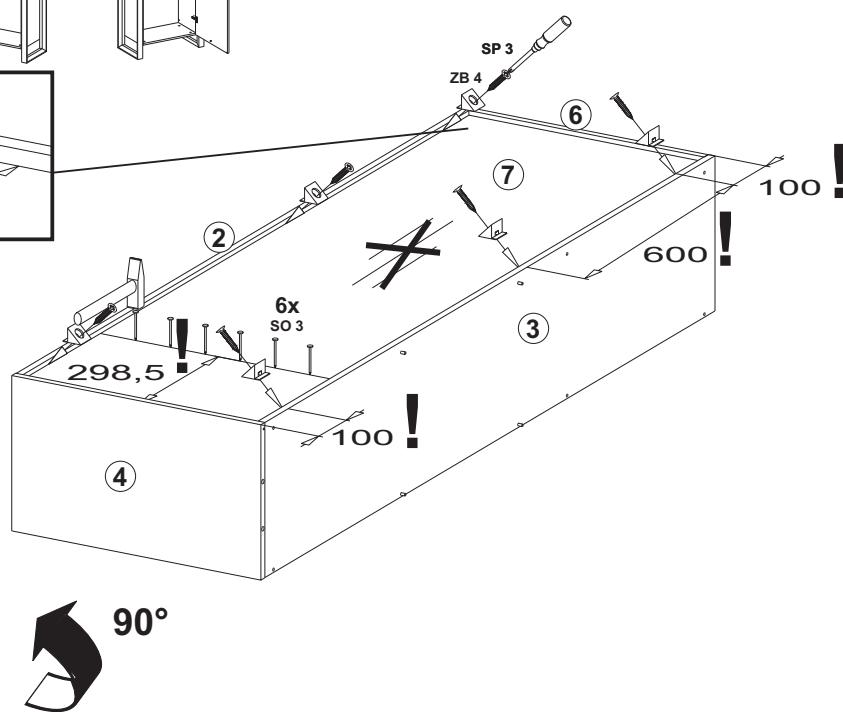
12 x AK6

3 x TB14


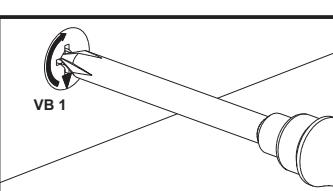
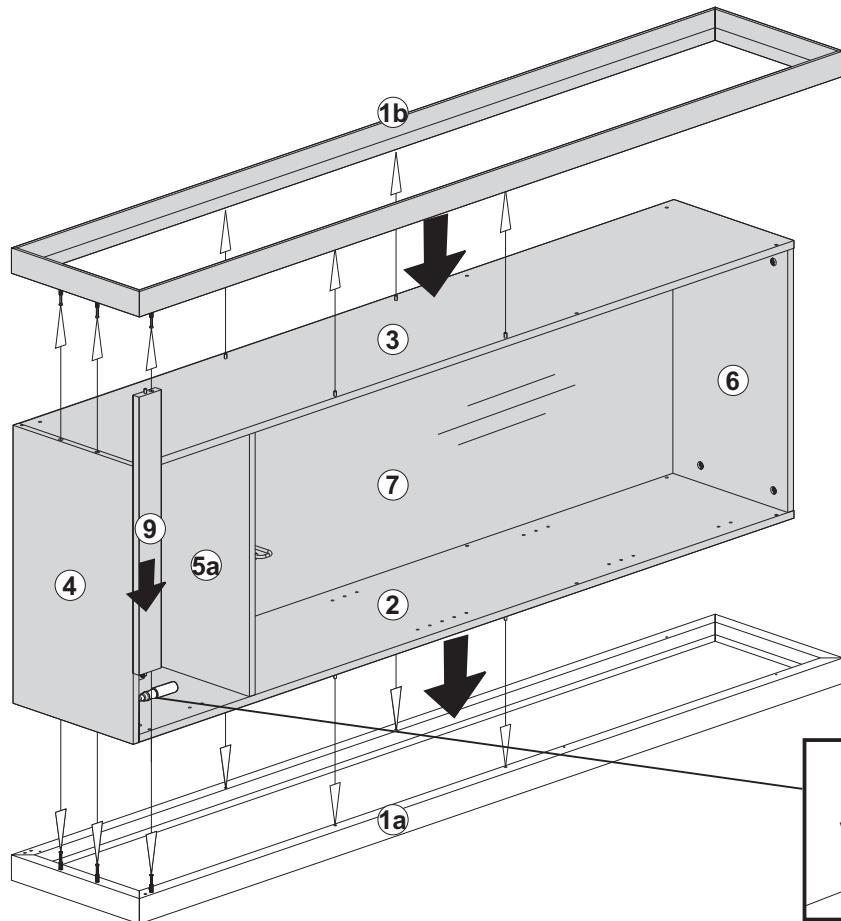


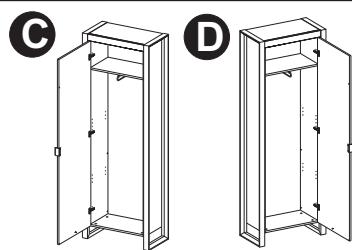
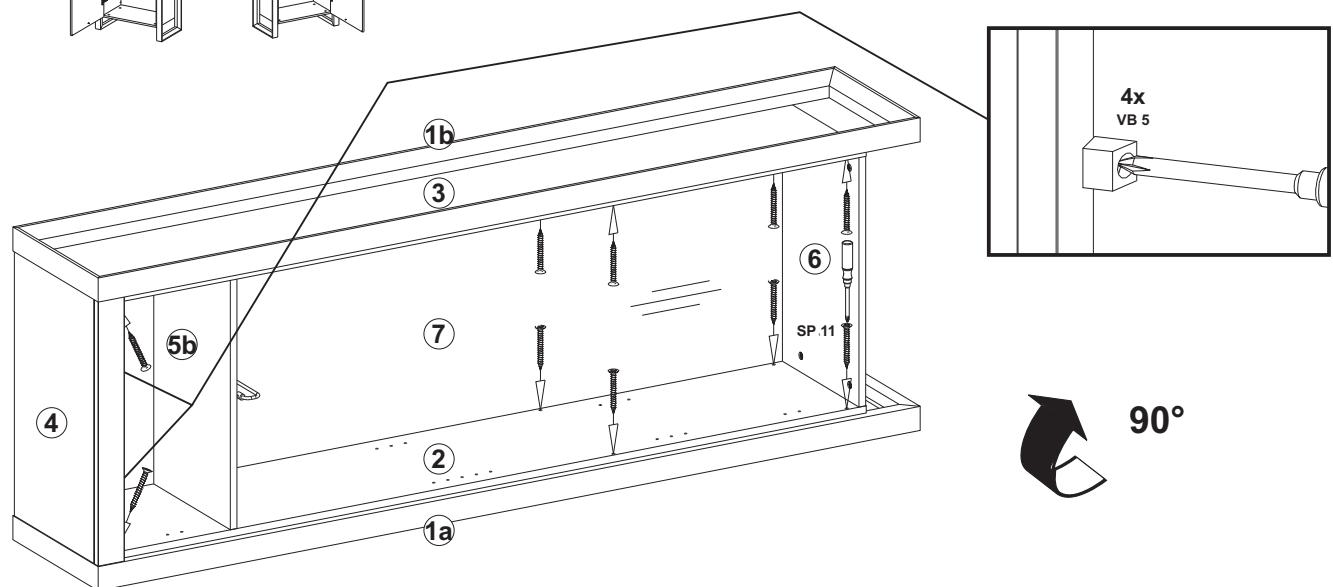
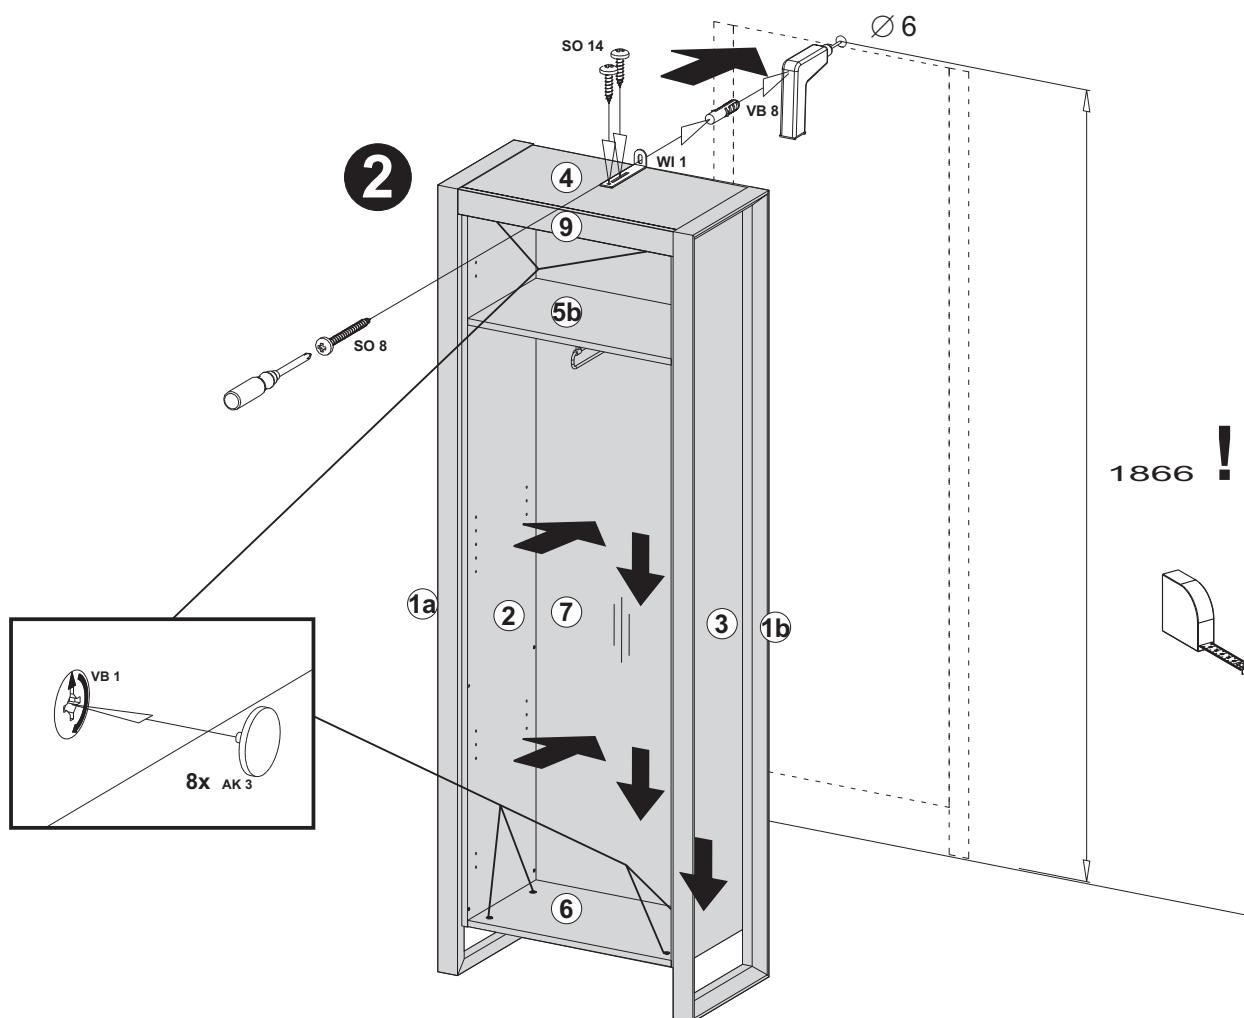
I2


E2**1****2**

F2**1**

90°

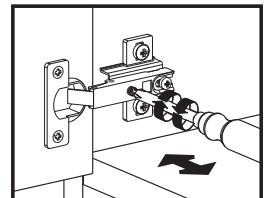
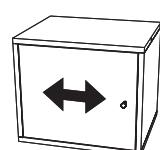
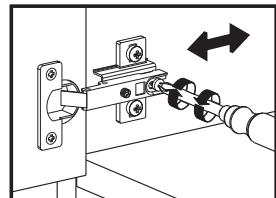
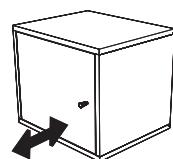
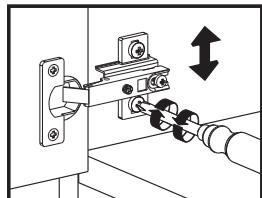
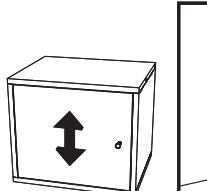
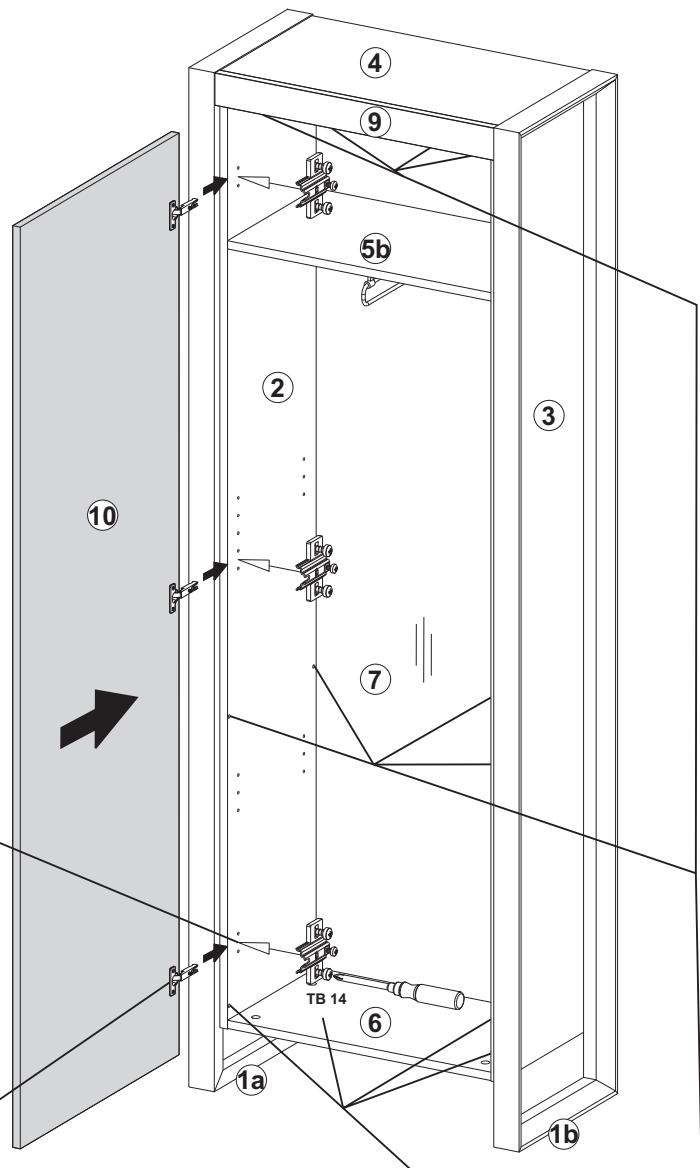
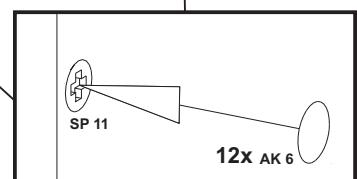
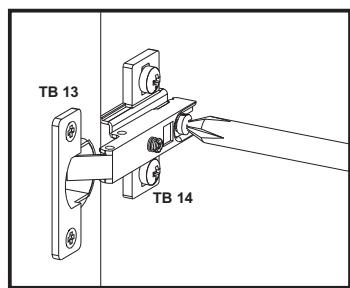
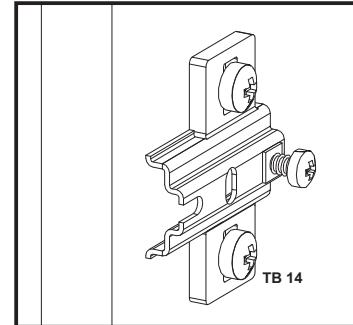
2


G2**1****2**

H3 C



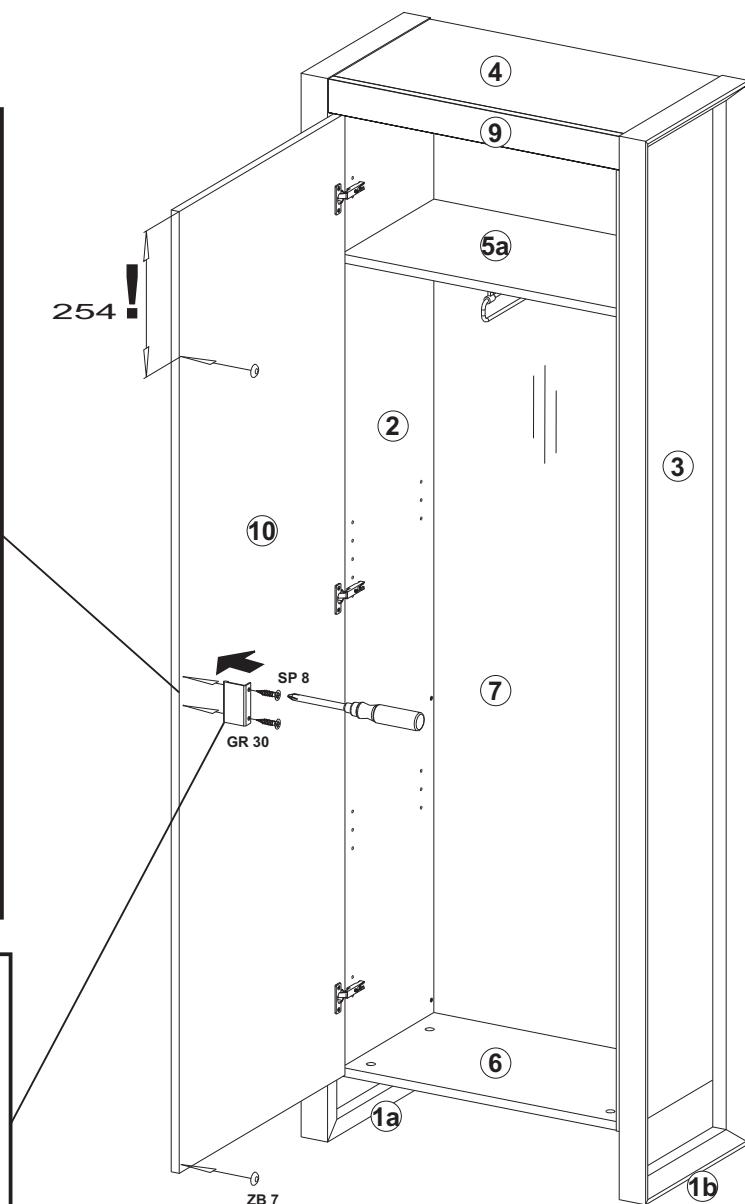
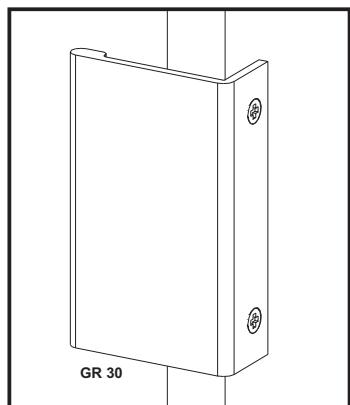
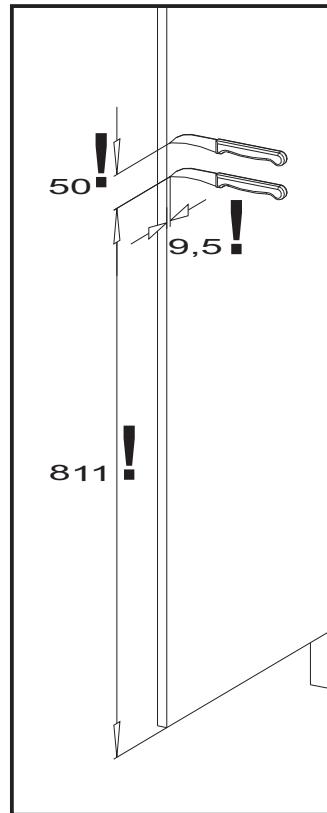
12 x AK6

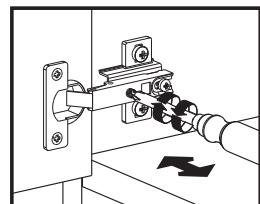
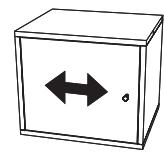
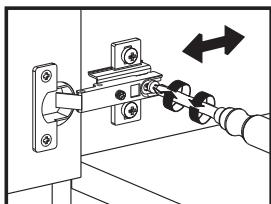
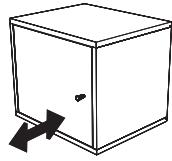
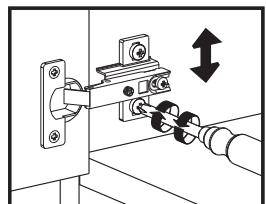
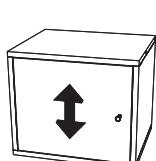
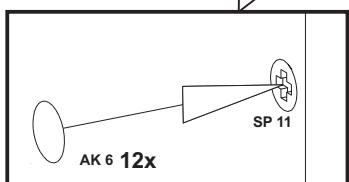
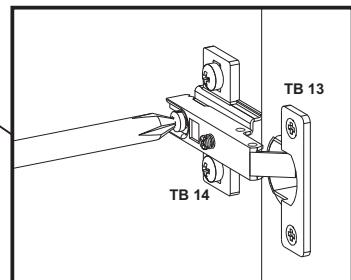
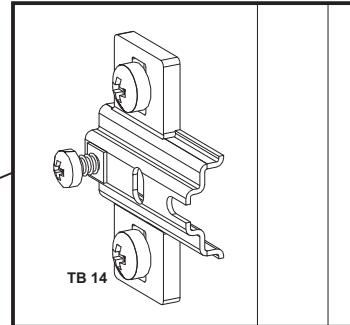
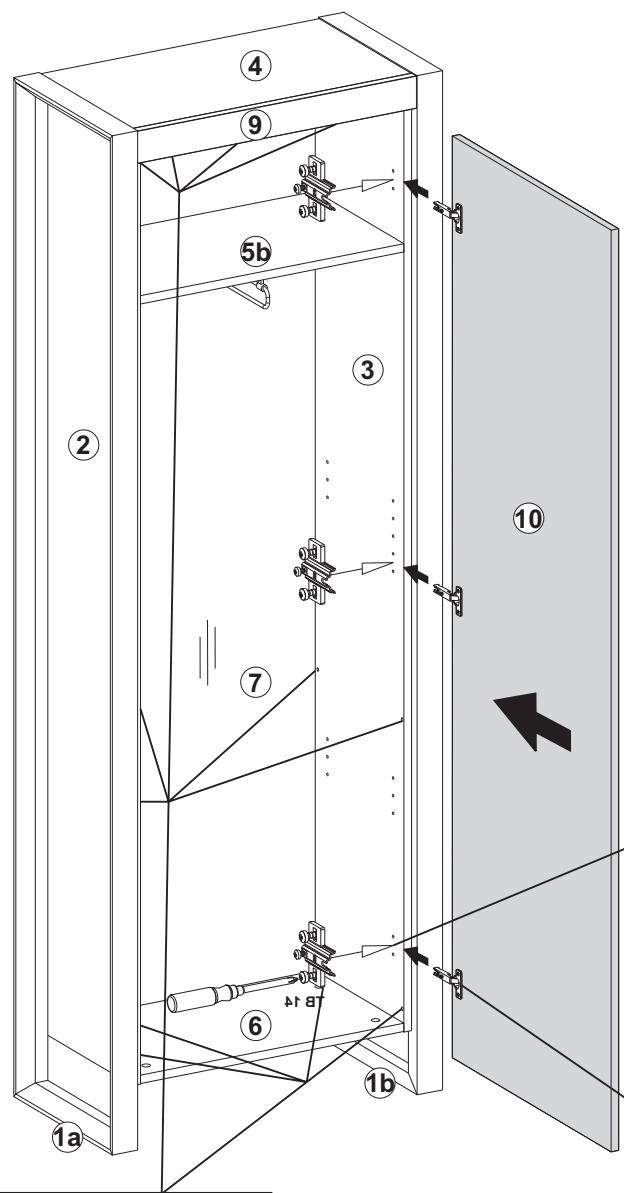
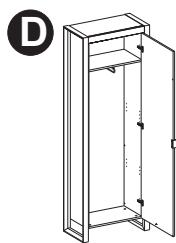
3 x TB14



I3**C**

2 x ZB7

1 x
GR303,0x11
2 x SP8

H4

12 x AK6

3 x TB14

I4

