




www.MLMEBLE.pl

GB D CZ SK RUS LT  
assembly instructions / montageanleitung / montážní návod / montážny návod / инструкции по монтажу / surinkimo instrukcija

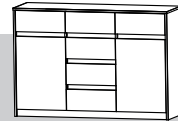




















## INSTRUKCJA MONTAŻU


**FJORD 05**

↑94 →138 ↗41

akcesoria / accessories / zubehör / příslušenství / prislušenstvo / аксессуары / furnitūra :






x 52  KK 8/32	x 4  KK 8/60	x 14  KT 6,3/50	x 40  GZ 1,4/25	x 8  SG 8/8	x 32  MD	x 8  PA Ø5	x 12  WT 3,5x16	x 6  PK L-350	x 4  ZPW	x 4  PK H-4
x 8  WE 6,3x13	x 84  WTL 3x16	x 7  SP	x 2  PK 25	x 12  BDP	x 36  WE 6,3x13	x 1  klej / glue / kleber / lepidlo / lepidlo / клей / kljaj	x 1  kluczyk / key / schlüssel / kľuč / ključ / ключ / raktas			

**do montažu potrebne są:**  
are needed for assembly:  
sind erforderlich für die montage:  
jsou potřebné pro montáž:  
sú potrebné pre montáž:  
которые необходимы для сборки:  
Surinkimui reikės:

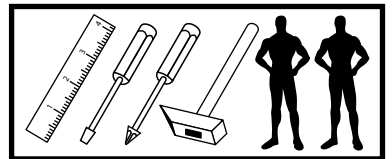

**UWAGA !** - w pierwszej kolejności wbijamy akcesoria „KK” i „MD” w blaty oraz boki.  
**WARNING!** - The first accessory sticks "KK" and "MD" in the tops and sides.  
**WARNUNG!** - Die erste Accessoire-Sticks "KK" und "MD" in den Spitzen und an den Seiten.  
**POZOR!** - První příslušenství holi "KK" a "MD" v korunách a boky.  
**POZOR!** - Prvé príslušenstvo palíc "KK" a "MD" v korunách a boky.  
**ВНИМАНИЕ!** - Первый аксессуаров палочки "KK" и "MD" по вершинам и по бокам.  
**DÉMESIO!** - Pirmiausiai furnitūrą KK ir MD įkalame į stalviršį ir šonus.

Nr/No	Szt/Qty
1	1
2	1
3	1
4	1
5	1
6	4
7	1
8	2
9	1
10	2
11	2
12	1
13	4
14	1
15	6
16	6
17	6
18	6
19	3

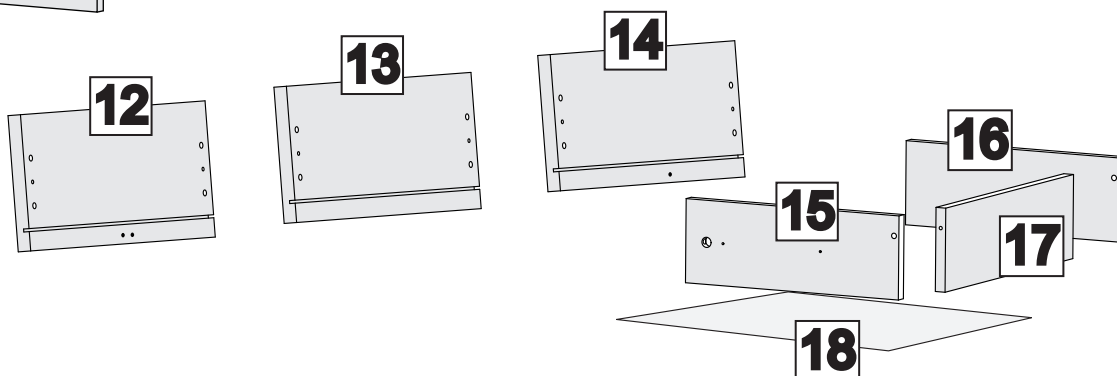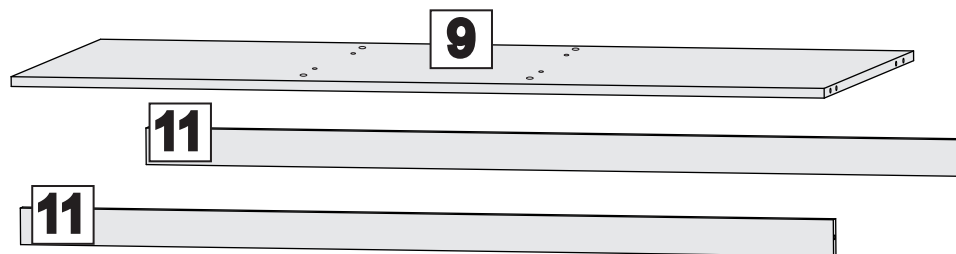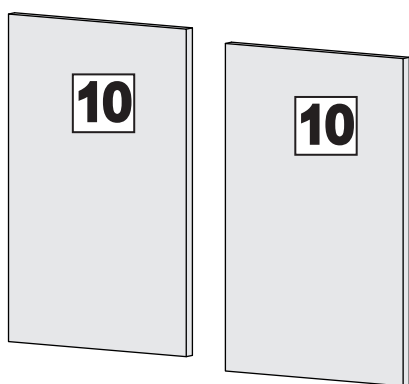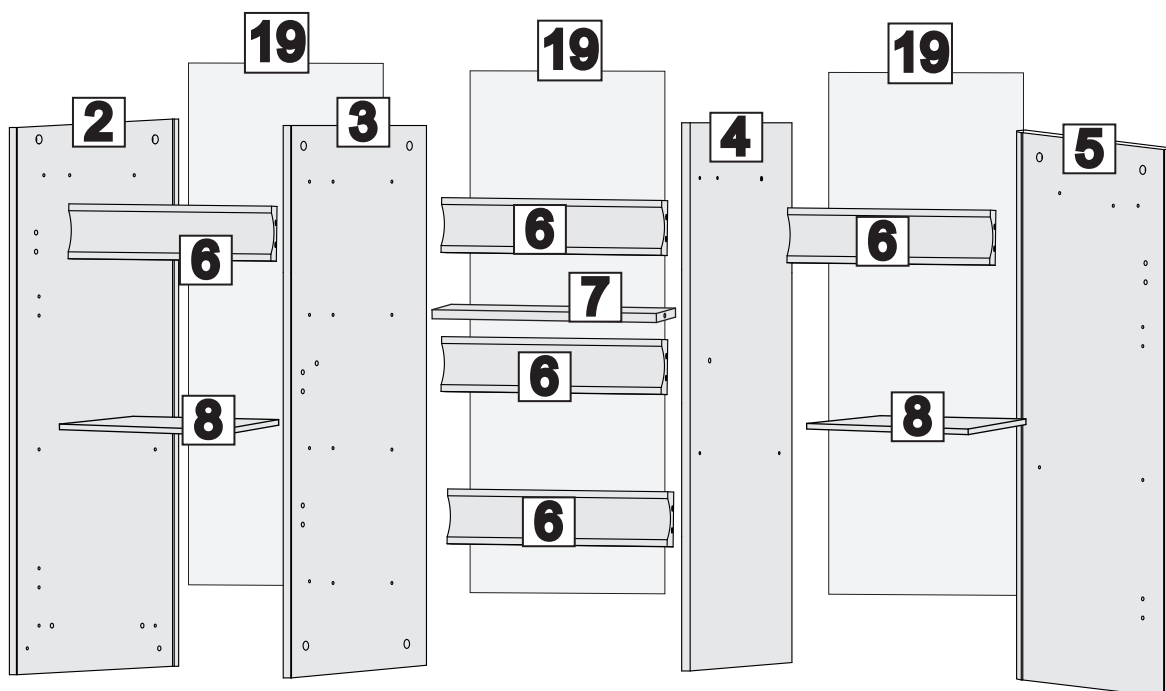

**!**  
**UWAGA!** - Wypinanie prowadnicy  
**WARNING!** - guides disassembling  
**WARNUNG!** - Ausstecken Führer  
**POZOR!** - vytažení pojezdů  
**POZOR!** - sprievodca pre montáž nábytku  
**ВНИМАНИЕ!** - демонтаж направляющих  
**DĒMESIO!** - Išrinkimas atskyrimas

